

# Deluxe

Professional Stone Warmer



I N S T R U C T I O N   M A N U A L  
C 6 5 9 1 T

© Universal Companies, Inc. 2003  
All rights reserved for copyright purposes.

No reproductions by print or photocopies are allowed without written permission.



## Deluxe Professional Stone Warmer

The Deluxe Professional Stone Warmer is designed to warm stones for a stone massage. It has a deep reservoir and is ideal for heating large quantities of stones of all sizes. It has a stainless steel casing and an insulated stainless steel hinged lid. The variable temperature thermostat maintains water temperatures at 120° F to 190° F. It also has a 100% brass drain system.

The Deluxe Professional Stone Warmer can also be used to:


- ❑ Melt large quantities of paraffin.
- ❑ To heat water for an herbal wrap treatment.
- ❑ To heat towels.

Always take the temperature of the water before using it for any application. Recommended temperatures for treatments are as follows:

Stone Therapy	110° – 120° F
Paraffin Melting	135° F
Herbal Wraps	145° F
Towels	125° - 135°

Note: These temperatures are only recommendations. ***Do not operate without water or paraffin.*** Always operate the unit with at least a half-inch of water covering the bottom of the tank.

### Parts/Accessories

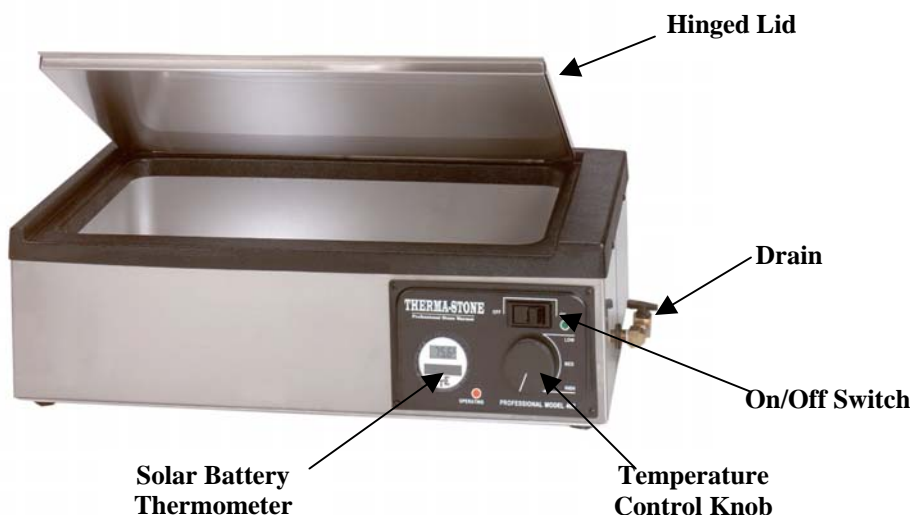

## Operations/Precautions

**Warning: Electric shock, fire, or burn injuries can occur if this equipment is not used properly. To reduce risk of injury:**

- Plug only into a 3-hole grounded electrical outlet.
- Use only on flat, level surfaces.
- Unplug the Deluxe Professional Stone Warmer and let it cool before cleaning or moving it.
- Unplug the Deluxe Professional Stone Warmer when not in use.
- Do not immerse in water.
- Do not spray with water or cleaning agent.
- Handle hot water carefully.
- Do not operate the unit unattended.
- Do not operate the Deluxe Professional Stone Warmer without water in the unit.
- Explosion Hazard – Do not use in the presence of flammable anesthetics.
- Always unplug the unit when not in use.
- Do not allow children to operate the Deluxe Professional Stone Warmer.
- The Deluxe Professional Stone Warmer should be used only for its intended purpose as described in this manual.
- Do not operate the Deluxe Professional Stone Warmer if:
  - It has a damaged cord or plug.
  - If it is not working properly.
  - If it has been dropped or damaged.
  - If it has been dropped into water.
- If damaged, return the Deluxe Professional Stone Warmer to an authorized service center for examination and repair.
- Do not use the Deluxe Professional Stone Warmer outdoors.

## Instructions for Use

1. Place the Deluxe Professional Stone Warmer on a flat, stable surface.
2. To warm stones for a stone massage:
  - Arrange the stones in the bottom of the Deluxe Professional Stone Warmer.
  - Pour enough water in the Deluxe Professional Stone Warmer to fully submerge the stones. They should be covered with approximately 1” of water.

Do not overfill the unit. ***Do not operate this unit without water in the unit.***

3. Close the lid of the Deluxe Professional Stone Warmer.
4. Plug the Deluxe Professional Stone Warmer into a 3-hole GFIC outlet.

5. To preheat the water and stones, turn the Power Switch on, and turn the Thermostat Control Knob to medium.
6. Allow 15 to 30 minutes for the unit to heat. Check the thermometer. Adjust the knob to achieve desired temperature.
7. Check the level of the water in the unit several times a day. Make sure the water doesn't completely evaporate. ***Do not operate this unit without water.***
8. At the end of the day, turn the Deluxe Professional Stone Warmer Off and proceed with cleaning instructions.

**WARNING: BURN HAZARD**

*If the Deluxe Professional Stone Warmer is left at the highest temperature for longer than 15 minutes, the water may reach temperatures hot enough to burn the skin. Do not use your bare hands to remove stones from the water. Use rubber gloves, a large spoon, or tongs.*

*Steam can cause burns. Be careful when you remove the lid from the Deluxe Professional Stone Warmer as steam may be released.*

**WARNING: DRIP HAZARD**

*Water will condense on the lid of the Deluxe Professional Stone Warmer. When you remove the lid, be careful to avoid drips.*

## Cleaning

To maintain the appearance of the Deluxe Professional Stone Warmer, and increase its service life, the unit should be cleaned daily.

1. Before cleaning or moving the Deluxe Professional Stone Warmer, unplug the unit and let it cool completely.
2. Using the drain located on the right hand side of the unit, carefully empty the water bath from the unit. Place a sturdy container under the drain to catch all the water.
3. Wipe the entire interior with a clean, damp cloth.
4. To avoid damaging the finish, do not use abrasive materials, scratching cleansers, or scouring pads to clean water deposits from the unit.
5. If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleansing. Chemical residue could damage the Deluxe Professional Stone Warmer.

**WARNING: ELECTRICAL SHOCK HAZARD**

*Do not immerse the Deluxe Professional Stone Warmer in water or other liquid. Do not spray with water or cleaning product. Liquid could enter the electrical compartment and cause a short circuit or electrical shock.*

6. Unplug the unit when not in use.

## Trouble Shooting

### If the Deluxe Professional Stone Warmer is not working:

1. Make sure the unit is turned ON, and that the dial is turned to the midpoint position.
2. Check the main power plug to ensure that it is plugged in to a working electrical outlet.
3. If the Deluxe Professional Stone Warmer is still not working, contact our authorized service center.

## Specifications

### Dimensions

#### Inside Dimensions

- ❑ 19" long x 11" wide x 4" deep

#### Outside Dimensions

- ❑ 23" long x 15" wide x 8" high (without drain and closed)
- ❑ 25" long (with drain)
- ❑ 20" high with lid open

### Electrical

- ❑ 110 – 120 V
- ❑ 50 – 60 Hz
- ❑ 600 watts
- ❑ 5 amps

## Warranty Statement

The manufacturer (the “warrantor”) warrants to the original purchaser that this equipment will be free from defects under normal and proper operation for a period of one (1) year from the date of purchase. This warranty covers all parts and labor for that one (1) year period. This warranty shall not apply to any equipment that has been subjected to abuse, misuse, and alteration of any type or to any defect or damage caused by repair, replacement, substitution or use with parts other than parts approved by the manufacturer.

The manufacturer shall not be liable for the loss of use of this equipment, loss of time or business, inconvenience or any other indirect, consequential, special or incidental damages due to defects covered by this warranty or any implied warranty.

To implement this warranty, contact the dealer from whom you purchased the equipment. If necessary, you will be asked to return all, or the appropriate part, of the equipment. If warranted, the repairs will be performed at no charge and the equipment returned to you. Unit owner must prepay all shipping costs when returning items for warranty service.

This limited warranty is the only written or express warranty given by the manufacturer. This warranty gives you specific legal rights but you may also have other rights, which may vary from state to state or province to province.

**Authorized Technical Service Center:**

Universal Companies, Inc.  
18260 Oak Park Drive  
Abingdon, VA 24210  
Phone: 1-800-558-5571  
Fax: 1-800-237-7199  
E-Mail: [info@universalcompanies.com](mailto:info@universalcompanies.com)

