

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR WAXER.

SAVE THESE INSTRUCTIONS

Basic safety precautions should always be followed when you're using any electrical appliance — especially if children are present. For use by qualified salon personnel only.

KEEP AWAY FROM WATER.

DANGER— To reduce the risk of electrocution:

- Do not store or place your waxer where it can fall or be pulled into a tub or sink.
- Do not put your waxer into water or any liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.

⚠ WARNING ⚠ To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in. Unplug immediately after using.
2. Close supervision is necessary when the appliance is used by, on or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped into water. Return the appliance to a service center for examination and repair.

5. Keep the cord away from heated surfaces.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never drop or insert any object into any opening.
8. Do not use outdoors or operate where aerosol (spray) products are being used.
9. Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
10. This appliance has an automatically reset thermal limiter that shuts off the entire appliance. If the appliance does not heat up with the lighted switch on, turn the appliance off and allow to cool. If the unit does not heat up, return to an authorized service representative. **There are no serviceable parts in this appliance.**
11. Do not wrap the cord around the appliance. Do not twist the cord.
12. Do not put water into heater receptacle.


GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short-circuit, grounding reduces the risk of electrical shock by providing a path of low resistance for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in compliance with all local codes and ordinances.

DANGER—Improper use of the grounding plug can result in a risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the appliance, if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

If used on a 120-volt nominal circuit this appliance has a grounding plug that looks like the plug illustrated in sketch A. A temporary adapter, which looks like the adapter illustrated in sketches B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should only be used until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

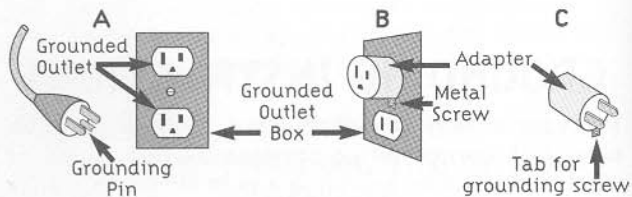

For extension cords:

If it is necessary to use an extension cord, use only a three-wire extension cord that has a three-blade grounding plug and a three-slot receptacle that will accept the plug on the appliance. Replace or repair a damaged cord.

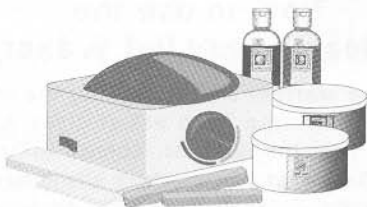

CLEAN + EASY POT WAXER

The Clean + Easy Pot Waxer was designed with the needs of the professional in mind. Compact, economical, and easy to use and maintain, the Clean + Easy Pot Waxer and the complete line of Spa Treatment Products and accessories give you all the tools you need to wax easily and efficiently.

- Compact, sleek, professional design fits anywhere — saves space and can't tip over.
- Hinged, unbreakable cover keeps wax clean and hygienic and your waxing area looking neat and professional.
- Scraper bar puts an end to drips and waste and easily swings out of the way when changing wax can.
- Thermostatically controlled unit keeps wax at the perfect temperature all day. It's ready whenever you are!
- Adjustable temperature control. Just set it once and forget it!
- Lighted on/off switch allows you to check the unit's status at a glance.
- Fits wax cans of all other popular brands.

How to use the Clean + Easy Pot Waxer

Preparing the warmer and wax: Plug the warmer in. Remove the lid from a fresh pot of Clean + Easy Wax and drop it into the warmer. Choose either Clean + Easy Original wax for its superior pulling strength and smooth consistency or Clean + Easy Azulene wax for your sensitive clients — both are free of the strong odor usually associated with pot waxes. Position the thermostat control dial in the “comfort zone” between position numbers 4 and 6. The temperature of the warmer may be decreased by turning the dial to the area between position numbers 1 and 3 and increased by turning the dial toward the area between position numbers 7 and 9.

Because it's thermostatically controlled, the wax pot may be left on all day. Close cover when not in use.

Preparing the client: Complete the client history /record card.

If your client is new to waxing, take a few minutes to explain the procedure. Tell the patron that they may feel slight discomfort, but it lasts just a moment.

Always remember the contraindications of waxing and consult your client before beginning any waxing treatments:

- Customers who are using Retin-A, Accutane, Glycolic Acid or Alpha Hydroxide Treatments should not be waxed.
- Clients who are pregnant, have varicose veins, diabetes, phlebitis, any skin disorders, or are prone to ingrown hairs should consult with their physician before waxing.
- Clients planning on sun bathing or tanning immediately after waxing should be advised to wait 24 hours prior to exposing freshly depilated areas.

We suggest that you do a patch test well before beginning treatment on any client who has not been waxed before to determine the extent of their sensitivity.

For Best Results:

- Hair on legs and body should be about 1/4" (6mm) long before waxing.
- Do not wax these sensitive areas: inside nose or ears, nipples, eyelashes, irritated or sunburned skin, warts, moles, recent scar tissue, or areas too near the genital area.
- Newly waxed skin should not be exposed to direct sunlight for at least 24 hours without a protective sunscreen.
- Male facial hair is much coarser and difficult to remove. We do not recommend facial waxing for men.
- Do not apply makeup or use soap to clean newly waxed skin for at least 24 hours.
- Applying Clean + Easy Soothe and/or Clean + Easy Nourish will help to calm any irritation of the skin that may occur after waxing.
- Always use the appropriate size spatula and removal strip for the area you plan to wax.
- Avoid scheduling waxing treatments when your client is premenstrual, the skin will be especially sensitive during this time.