

C91499 - Spa Pro Stone Heaters / 120V / 8qt



 universal
companies®

YOUR ONE SOURCE SPA SOLUTION®

www.universalcompanies.com (800) 558-5571

Table of Contents

Caution marks and symbols	1
Important Safeguards.....	2
Parts	3
Cautions, First time use and Operating Instructions	4-5
Care and Cleaning	5
One Year Limited Warranty	6

Table des Matières

Pictogrammes et Symboles de Danger	7
Mesures de Précaution Importantes.....	8
Pièces.....	9
Attention, Première utilisation et Mode d'emploi.....	10-11
Nettoyage et Entretien.....	12
GARANTIE LIMITÉE D'UN AN	13

Índice


Símbolos y marcas de precaución	14
Salvaguardas Importantes	15
Partes.....	16
Precauciones , Utilizar por primera vez y Operación	17-18
Instrucciones de cuidado y limpieza.....	19
Garantía limitada de un año	20

Technical Specifications

Specification / Caractéristiques / Especificaciones: 520W, 120 VAC, 60Hz


"SPA PRO" is a registered trademark of The Metal Ware Corporation.

The Metal Ware Corporation
1700 Monroe St., P.O. Box 237
Two Rivers, WI 54241-0237
Phone: 1-(800) 288-4545

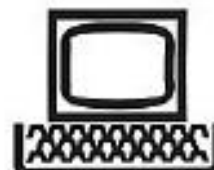

For accessories and additional products, go to
www.nesco.com

Caution Marks and Symbols

 This is the safety alert symbol. This symbol is placed in the manual to alert you to the potential for bodily injury or death.

UNDERSTANDING SIGNAL WORDS:

Signal words are used to identify safety information within the text of this manual.

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious personal injury.

WARNING

Indicates a potential hazard or unsafe situation which, if not avoided, could result in death or serious personal injury or product damage.

CAUTION

Indicates a potential hazard or unsafe practice, which if not avoided may result in minor personal injury or product damage.

NOTICE

This display is used to address practices not related to physical injury.

- This product is designed for commercial use -

When using electrical appliances, basic safety precautions should always be followed, including the following:

IMPORTANT SAFEGUARDS

- 1. READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock and personal injury, do not immerse this appliance, including cord and plug, in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool completely before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. To avoid hazards, return appliance to **Spa Pro®** Factory Service Department for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electrical burner or in a heated oven.
12. Do not use appliance for other than its intended use, as described in this manual.
13. Do not use metal scouring pads on the exterior surface of the appliance.
14. ⚠ **CAUTION** - Do not use without the minimum water level in the reservoir.
15. Always place and use the appliance on a level surface.
16. Always place the stones on a towel in the reservoir, then add water.
17. Do not use if you have rashes, burns, cuts or other skin irritations, or if you have sensitive or damaged skin.
18. ⚠ **DANGER** - To avoid electrical hazard do not fill reservoir under running water and to be sure cord is not plugged in while filling.
19. Turn the power off and remove the plug when the appliance is not in use and before cleaning.
20. Use tongs, ladle or slotted wooden spoon to lift hot stones from the reservoir.
21. To avoid scalding and/or burns, never use boiling or steaming water to fill the appliance.

SAVE THESE INSTRUCTIONS

Short Cord Instructions: A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the tabletop where it can be pulled on by children or tripped over unintentionally.


Parts

Tempered
Glass Lid

Water and Stone
Reservoir



Control Panel detail

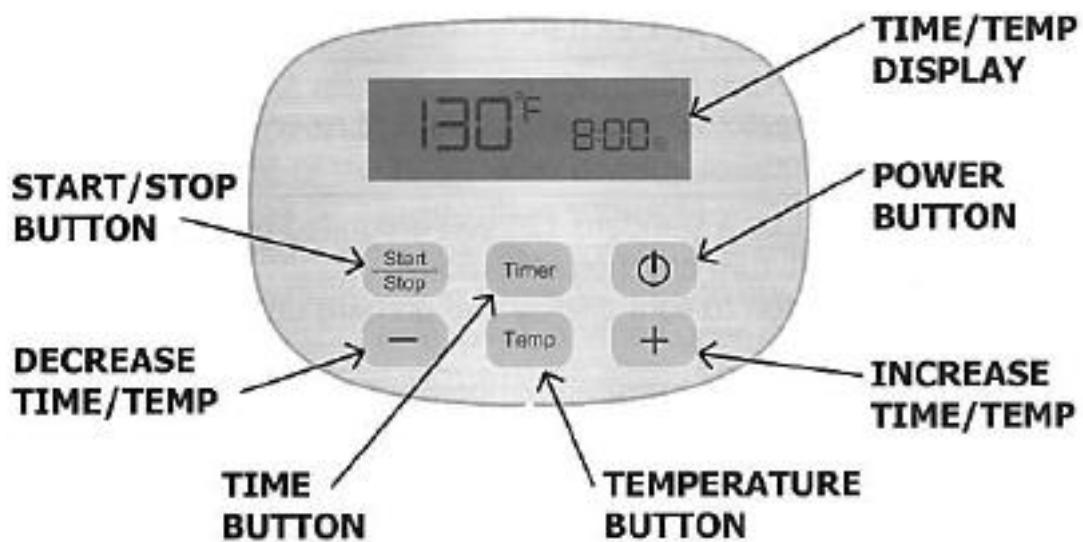

CAUTIONS - PLEASE READ

1. Do not have a hot stone massage if the following conditions are present: Tuberculosis, tumors, open wounds, hemorrhages, bruises, broken skin, thrombosis or phlebitis, varicose veins, or undetermined joint pain or pain in the calf.
2. People who are pregnant, have diabetes or other illness, should have a physicians approval prior to receiving therapy.
3. Do not have a hot stone massage if you are drowsy, dehydrated or have nausea symptoms.
4. Discontinue use of the hot stone massage if you experience any discomfort from the therapy and contact your physician.
5. Do not use if you are unfamiliar with hot stone therapy techniques. For best results, have a hot stone massage from a professional therapist and note the techniques that are used.

Before first time use

1. Remove stone heater from carton. Discard any packaging material.
2. Read and follow this instruction manual and save for future use.
3. Wipe base with soft, damp cloth or sponge. Dry completely.
4. Wash cover and reservoir with soap and water. Dry completely.

Operating Instructions

1. Clean the reservoir and wash all stones before each use.
2. Place appliance on strong and stable surface.
3. Place a hand towel on the bottom of the reservoir. Gently place stones on top of the towel.
4. Fill the reservoir with water to just above the stones but no more than maximum capacity (about 1-inch below the top rim) or minimum capacity (about 1-inch from bottom).

WARNING:

- Never use Stone Heater without water, always fill reservoir at least to the minimum fill line.

5. Plug power cord into a standard 120 volt grounded outlet. The control display will turn on, then off quickly.
6. Press POWER button to light display and prepare unit for programming.
7. Press TEMP button to set desired temperature. Range: 95°F – 150°F (5°F increments). Press "+/-" keys to adjust. Default 130°F.
8. Press TIME button to set desired time of operation. Range: 00:30 - 12:00 hours (30 minute increments). Unit will automatically turn off when time reaches zero. Use "+/-" keys to adjust. Default 8:00 hours.

9. Press START button to begin heating stones. Display will show actual temperature of reservoir water and the time remaining. Depending on the amount of stones, temperature setting and amount of water used, it usually takes 15-30 minutes to heat to desired temperature.
10. Press STOP to pause timer and make adjustments to the time or temperature. Press START to resume.

⚠ CAUTION:

- Use a thermometer to measure water temperature in the reservoir to ensure that stones are at a proper therapeutic temperature. Consult a professional therapist for correct stone temperatures if you are not sure.

11. Place cover on reservoir and allow stones to heat.
12. When temperature is reached, carefully remove the first stone from the reservoir, using tongs or slotted wooden spoon and place it on a towel. Test the temperature of the stone by touching it with your finger, then holding in your hand. The temperature should feel warm to the touch, but not uncomfortable.
13. Proceed with the massage. The heater will keep stones at a consistent temperature for as long as the time set.
14. When the therapy session is finished, press POWER button and remove cord from outlet. Always unplug appliance before cleaning and when not in use.
15. Allow water and stones to cool and follow cleaning directions in the "Care and Cleaning" section.

Care and Cleaning

1. It is important that the stones and heater be cleaned and sanitized properly between each client or after each use.
2. Remove cord from electrical outlet and allow appliance to cool.
3. Remove stones and towel from reservoir. Using handles, move base over a sink and remove excess water into drain. Pour from the corner of the reservoir and pour quickly to prevent excess water dripping down the side of the base. Wipe dry any spills.
4. Clean reservoir by wiping with a soft cloth with warm soapy water, then wipe clean with water on a soft cloth and wipe dry.
5. Clean cover by washing in soapy water and dry with a soft towel. The cover is dishwasher safe, place on the upper rack.
6. Wipe outside of base with a damp cloth. Never immerse base in water.
7. Rinse the stones in warm water with a small amount of mild detergent added. Scrub stones to remove dirt from the porous surface and allow to dry.

ONE YEAR LIMITED WARRANTY

This appliance is warranted for one year from date of original purchase against defects in material and workmanship. This warranty does not cover transportation damage, misuse, accident or similar incident. This warranty gives you specific legal rights and you may have other rights, which vary from state to state.

Your new **SPA PRO®** appliance comes equipped with numerous safety features. Any attempt to interfere with the operation of these safety features makes this warranty null and void. In the event we receive an appliance for service that has been tampered with, we reserve the right to restore it to its original state and charge for the repair.

For service in warranty - Defective products may be returned, postage prepaid, with a description of the defect to: The Metal Ware Corporation, 1700 Monroe Street, Two Rivers, Wisconsin 54241, for no-charge repair or replacement at our option.

Must include proof of purchase or copy of original bill of sale when returning product for warranty service.

Please call Customer Satisfaction at 1-800-288-4545 to obtain a Return Authorization before shipping.

- For service in warranty, follow instructions set forth in warranty. When ordering new parts, make sure that you always mention the model number of the product.
- Call us on our toll free number, 1-800-288-4545 and tell us about your problem.
- If we instruct you to send all or part of your appliance to us for repair or replacement, our Customer Satisfaction representative will provide a Return Authorization number (this number notifies our receiving department to expedite your repair). Pack your unit carefully in a sturdy carton with sufficient padding to prevent damage because any damage caused in shipping is not covered by the warranty.
- Print your name, address and Return Authorization number on the carton.
- Write a letter explaining the problem. Include the following: your name, address and telephone number and a copy of the original bill of sale.
- Attach the sealed envelope containing the letter inside the carton. Insure the package for the value of the **SPA PRO®** appliance and ship prepaid to:

Distributed by: Universal Companies
Your One Source Spa Solution

18260 Oak Park Drive | Abingdon, VA 24210
800.558.5571 | FAX: 800.237.7199
276.591.4000 | FAX: 276.466.3391
www.universalcompanies.com