

Aromatic Economy Steamer



I N S T R U C T I O N M A N U A L

C 9 3 8 6 T

Updated 1/23/18

© Universal Companies, Inc. 2003
All rights reserved for copyright purposes.

No reproductions by print or photocopies are allowed without written permission.



Aromatic Economy Steamer


Many estheticians consider the facial steamer the most important piece of equipment in the esthetics industry. It is used as part of facial treatments, and is frequently used with oxygen products.

Warm, humid mist has several benefits including:

- ❑ Softens dead cells on the surface of the skin so they can be exfoliated more easily.
- ❑ Aids in opening pores so they can be properly cleansed.
- ❑ Penetrates deep into the pores to soften blackheads and deposits of grease, makeup, and dirt so that the debris can be easily removed.
- ❑ Causes blood vessels to expand, increasing blood circulation
 - Assists the pores in eliminating toxins
 - Provides nourishment to the skin
- ❑ Softens superficial lines temporarily.
- ❑ Assists in the penetration of other products.

Parts/Accessories



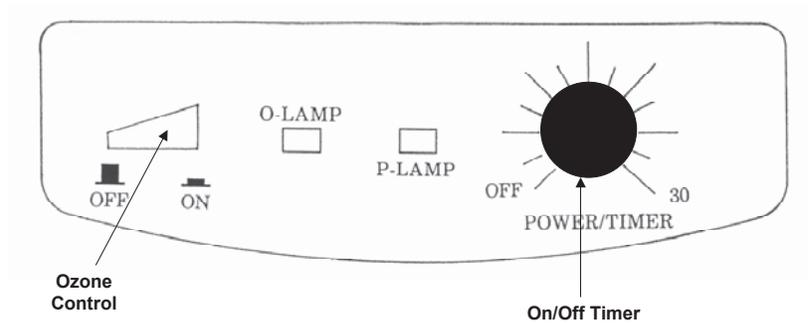

Assembly Instructions



1. Remove the stand from the box.
 2. Insert the tube into the adjustment pole.
 3. Slip the lock washer and the flat washer on the bolt. Insert the bolt upward through the caster base into the adjustment tube. Using a wrench, tighten the bolt snug. *Caution: do not over tighten*
 4. Turn the Height Adjuster (the black ring located at the top of the Pole Stand) clockwise to loosen it enough to accept the Adjustment tube.
 5. Place the chrome Adjustment Tube inside the Height Adjuster. Press it downward to desired height, and tighten the Height Adjuster (by turning it counterclockwise) to hold Adjustment Tube in place.
- (Note: To avoid injury, do not stand over the apparatus when doing this. There is a spring inside the lower tube and if you aren't holding the upper tube tight while tightening it, it could pop up unexpectedly and hit you in the face or upper body.)*
6. Place the Steamer Head on the chrome Adjustment Tube.
 7. Inspect the fill port and nozzle for any packaging debris that may have entered it.
 8. Wash the steamer jar and gasket before the first use to make sure no packaging debris is left. Check the gasket to make sure there are no cuts or tears in it that would prevent it from sealing. Inspect the jar to make sure there are no chips in the jar.
 9. Fit the gasket to the top of the steamer jar.
 10. Hang the jar retaining clamp on the mounting studs located on either side of the steamer.
 11. Swing the retaining plate assembly outward and place the steamer jar over the heating element.
 12. Lower the retaining plate assembly and tighten the glass jar lock to snug. **Caution: Do not over tighten!**

Operations/Precautions

FOR PROFESSIONAL USE ONLY

To reduce the risk of electric shock:

- Always unplug the Aromatic Economy Steamer when not in use.
- Do not use while bathing.
- Do not place (or drop) into water or any other liquid.
- Do not reach for a unit that has fallen into water. Unplug immediately.

To reduce the risk of burns, electric shock, fire, or injury:

- Fill the steamer with water prior to turning it on.**
- Do not leave the Aromatic Economy Steamer unattended when in use.
- Do not allow children to operate the Aromatic Economy Steamer.
- Extreme caution should be used when Aromatic Economy Steamer is used on or near invalids.
- The Aromatic Economy Steamer should be used only for its intended purpose as described in this manual.
- Do not use attachments that are not recommended by the manufacturer.
- Do not operate the Aromatic Economy Steamer if:
 - It has a damaged cord or plug.
 - If it is not working properly.
 - If it has been dropped or damaged.
 - If it has been dropped into water.
- If damaged, return the Aromatic Economy Steamer to an authorized service center for examination and repair.
- Keep the cord of the Aromatic Economy Steamer away from heated surfaces.
- Do not use the Aromatic Economy Steamer outdoors.
- Connect the Aromatic Economy Steamer to a properly grounded outlet (preferably a GFCI outlet).

Known Contraindications

There may be unknown contraindications for this Product. For this reason, you should always recommend that your Client discuss the use of this Product as part of their spa treatment program with their health care professional before commencing treatment. Universal Companies, Inc., its officers, directors, employees and vendors cannot be responsible for any claims, damages, injuries or expenses arising from your Client's use of this Product prior to discussing it with their health care professional or from disregarding the Product's instructions, and you and your Client agree to hold Universal harmless from any such claims. We and our suppliers care about the health and beauty of your Clients. While we make every reasonable effort to maintain strict quality control and training standards, every client is unique and spa treatments do affect people differently. Unless you advise us otherwise, we have to assume that your Client has discussed your spa treatment plan with their health care professional and secured their approval. Doing this will make your Client's spa experience safe and will be supportive of their overall emotional and physical well being. After all, that is the goal of us all.

Instructions for Use

Prior to the Onset of Treatment

- To fill with water:
 - Remove the Steamer Fill Cap and add distilled water to the upper red line.
 - The lower red line marks the low water level. When water drops to that line, add more water.

Caution: Do not add cold water to a hot steamer jar. The jar will break.

Turn the steamer off before filling it with water.

The Aromatic Economy Steamer is equipped with a protective device. When the element gets too hot and/or if the water level gets too low, the steamer will shut down to protect the unit.

 - Replace the Steamer Fill Cap.
- Plug the steamer into an approved GFCI outlet.
- The On/Off Switch located on the left-hand side of the panel controls the Ozone. When the Ozone is operating the Ozone Lamp light will be lit.
- To start the production of steam, turn the Power/Timer Dial clockwise pass the 10 minute mark. Allow 8 to 10 minutes for steam to start being produced.

How to operate the Aromatic Economy Steamer during a treatment

- After the steamer begins producing steam, set the Timer for the appropriate amount of time needed for the client's skin type.

Normal Time Settings for Various Skin Types:

Normal Skin – 8 – 10 minutes

Oily Skin – 12 – 15 minutes

Sensitive/Dry Skin – 3-5 minutes

Rosecea or couperose (broken capillaries) – 3-5 minutes

Precaution: You should never turn the timer on unless the jar is in place and has water in it. Starting the heating element without water in the tank may damage the steamer.

- Steam created by distilled water is practically invisible. To guide the steam to client's face, push the Ozone Button. The Aromatic Economy Steamer will produce a small amount of ozone, which has a germicidal effect.

Note: Unless the Ozone is turned on, you may not be able to see the steam. The ozone should be turned on during the last five minutes of the treatment.

*Note: When the water drops below a safe level, the Aromatic Economy Steamer will cut off. It may need to cool down enough that the overheat sensor can reset itself. You will have to refill it with water before you can resume treatment. **Do not add cold water to the hot steamer jar.***

3. Never position the Aromatic Economy Steamer so that the nozzle is closer than 16” from the face. If the client has large couperose areas or their skin is overly sensitive, you may have to move it farther away. If the skin is thick or oily, you can move the nozzle closer to the face.
 - The arm does not move. It is a stationary arm. However, the nozzle will move 180° left or right. There are built-in stops. Do not force.
 - To move the unit around the room, grab the handle. Do not pull on the Power Cord.
4. When treatment is finished, turn off Aromatic Economy Steamer.
5. Unplug the unit when not in use.

To use the Aromatic Economy Steamer With Aromatherapy.

1. **Do not add any oils (such as essential oils for aromatherapy) in the steamer jar.** Oils may be placed on a felt strip and placed inside the Aroma Cap.
2. Unscrew the ring that surrounds the Nozzle at the end of the Steamer Arm.
3. Put a few drops of an essential oil on a felt strip. The amount of oil you use will depend on the aromatic strength of the oil.
4. Tuck the felt strip in the groove inside the nozzle.
5. Replace the ring and tighten.

Cleaning Instructions

1. Wash the glass jar every day. Rinse thoroughly. Do not leave any soap residue in the jar.

Note: When you remove the jar, make sure you remove the gasket also. If you don't, it may drop down on the heating element.

2. Wipe the heating element dry every day.
3. Do not use metal brushes to clean the heating element.
4. Once a week, the glass jar and heating elements should be cleaned with a solution of distilled water and white vinegar (one part vinegar to three parts water). Soak the jar in the vinegar solution for 2 – 3 hours.

Trouble Shooting

If the Aromatic Economy Steamer is not working:

1. Ensure that the unit is plugged into a working electrical outlet.
2. If the unit shuts down, the water level may have dropped below a safe level. Check the water level. If the water is at the lower red line or lower, allow the jar and element to cool off and then add more water. ***Never pour cold water into a hot jar! It will break.***
3. If there is no steam, check to ensure that:
 - The steamer unit timer is turned past the 10 minute mark.
 - The steamer jar gasket, located at the top of the jar, is in place, and not worn.
 - The steamer jar is filled to the proper level.
 - The water is boiling and no leaks are present. If there are no leaks and the water is boiling, steam is probably being emitted. You just can't see it. Turn on the Ozone lamp to make the steam more visible. If you still can't see steam, check the Ozone Lamp to see if it is burning. If it is not burning, it will need to be replaced.
4. If the ozone doesn't work properly, check to ensure that:
 - The ozone switch is in the "On" position. (The ozone lamp will be lighted when it is on.)
 - The ozone bulb is burning steadily. If operating properly, there will be a constant pale blue light inside the steamer arm.
 - If the Ozone Lamp is not burning, replace it.
 - To replace the Ozone bulb:
 - Unplug the steamer.
 - Remove the nozzle cap and felt strip.
 - Remove the end cap of the steamer arm.
 - As you are looking inside the steamer arm, you will see 2 Phillip's Head screws. Remove the one on the right hand side.
 - Follow the light cover down to the base and remove the other Phillip's Head screw. That side of the light cover will come off to expose the starter and the bulb.
 - Remove the bulb by rotating one-quarter turn. Then remove it from the slots.
 - Replace the bulb and test it before reassembling.
 - Plug up the unit and make sure the bulb lights. ***Do not look directly at the light. The light emitted can cause damage to the eye.***
 - If the bulb doesn't work, replace the starter. It looks like a flashlight bulb with a white cap on the end. Unscrew it and replace.
 - To reassemble, reverse the operation.
5. If there is leaking around the jar, check the steamer jar and gasket:
 - Gasket
 - Check to see that the gasket is properly positioned.
 - If the gasket is properly positioned, make sure it is not deteriorating or worn out.
 - If the gasket is deteriorating, replace it.
 - Jar
 - Check the jar to see if it is fractured or if there are chips around the edge of it.
 - If the jar is fractured or chipped, discontinue use immediately and replace.

Note: Tighten the knob on the retaining arm assembly to achieve a good seal between the gasket and the steamer jar. Do not over tighten. This may also cause leakage.

6. If the steamer is spitting from the steam nozzle, check to ensure that:
 - There are no obstructions in the nozzle.
 - The steamer jar is not overfilled.
 - There is no contamination in the water. If the water appears contaminated:
 - Discard the water in the steamer jar.
 - Clean all parts of the steamer jar assembly (element, gasket, jar, etc.) with a non-foaming cleanser (vinegar and water solution)
7. If water is boiling out of the fill cap:
 - ***Immediately discontinue use*** and call technical services at 1-800-558-5571.
8. If the Aromatic Economy Steamer is still not working, contact our authorized service center.

Parts List with SKU's

Steamer Jar	CP9066T
Steamer Gasket/Economy	CP9414T
Ozone Lamp	CP9413T
Aroma Strip for Steam (3 each)	C1003T
Fluorescent Starter	P9013
Gray Fill Cover	P93863
Jar Clamping Assembly	P93862

Specifications

Dimensions

- Steamer head
 - 7 ¼" wide
 - 11" deep
- Arm length – 19 ¼"
- Height
 - Overall height – floor to nozzle – 43"
 - Overall height nozzle to floor at lowest setting – 33 ½"

Electrical

- 110 V
- 60 Hz
- 650 watts

Warranty Statement

The manufacturer (the “warrantor”) warrants to the original purchaser that this equipment will be free from defects under normal and proper operation for a period of one (1) year from the date of purchase. This warranty covers all parts and labor for that one (1) year period. This warranty shall not apply to any equipment that has been subjected to abuse, misuse, and alteration of any type or to any defect or damage caused by repair, replacement, substitution or use with parts other than parts approved by the manufacturer.

The manufacturer shall not be liable for the loss of use of this equipment, loss of time or business, inconvenience or any other indirect, consequential, special or incidental damages due to defects covered by this warranty or any implied warranty.

To implement this warranty, contact the dealer from whom you purchased the equipment. If necessary, you will be asked to return all, or the appropriate part, of the equipment. If warranted, the repairs will be performed at no charge and the equipment returned to you. Unit owner must prepay all shipping costs when returning items for warranty service.

This limited warranty is the only written or express warranty given by the manufacturer. This warranty gives you specific legal rights but you may also have other rights, which may vary from state to state or province to province.

Authorized Technical Service Center:

Universal Companies, Inc.
18260 Oak Park Drive
Abingdon, VA 24210
Phone: 1-800-558-5571
Fax: 1-800-237-7199
E-Mail: info@universalcompanies.com