

Double Hot Towel Cabi w/ UV



I N S T R U C T I O N M A N U A L
C 9 5 1 2 T


© Universal Companies, Inc. 2007
All rights reserved for copyright purposes.

No reproductions by print or photocopies are allowed without written permission.

Double Hot Towel Warmer w/ UV

The Double Hot Towel Warmer holds up to 48 wash cloths – 24 in each compartment. Each compartment has a wire rack and the upper compartment has a UV light to help sanitize towel surfaces. The doors, which have a magnetic latch, open to the right.

Parts/Accessories

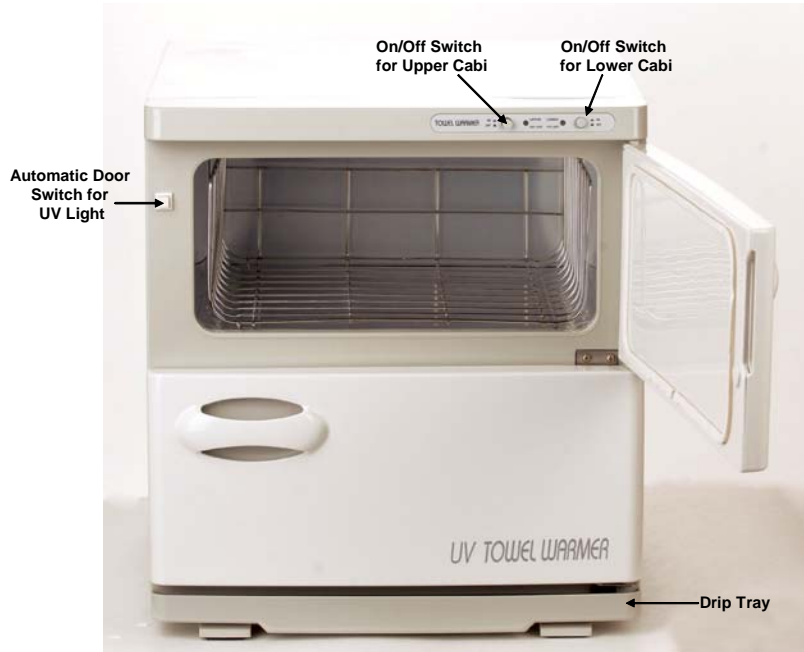

Operations/Precautions

FOR PROFESSIONAL USE ONLY

Operating Precautions

- ❑ When you place moistened towels on towel racks, the towels should not touch the sides or bottom of the compartment. If they touch the sides of the cabinet, the towels will dry out quickly and could possibly becoming discolored.
- ❑ Do not leave the towels in the Double Hot Towel Warmer if they become dry. If they become too dry, it can cause a fire hazard.
- ❑ To avoid excess drainage, do not place overly wet towels in the cabinet.
- ❑ Towels, steam, water tray and the inside surfaces of the appliance will be hot when the unit is operating. Always use protective gloves when handling hot trays or towels.

To reduce the risk of burns, electric shock, fire, or injury:

- ❑ Do not leave the Double Hot Towel Warmer turned on overnight.
- ❑ Do not allow children to operate the Double Hot Towel Warmer.
- ❑ Do not operate the Double Hot Towel Warmer if:
 - It has a damaged cord or plug.
 - If it is not working properly.
 - If it has been dropped or damaged.
 - If it has been dropped into water.
- ❑ The Double Hot Towel Warmer should be used only for its intended purpose as described in this manual.
- ❑ Do not use out of doors.
- ❑ If damaged, return the Double Hot Towel Warmer to an authorized service center for examination and repair.
- ❑ Keep the cord of the Double Hot Towel Warmer away from heated surfaces.
- ❑ Connect the Double Hot Towel Warmer to a properly grounded outlet (preferably a GFCI outlet).

Known Contraindications

There may be unknown contraindications for this Product. Universal Companies, Inc., its officers, directors, employees and vendors cannot be responsible for any claims, damages, injuries or expenses arising from disregarding the Product's instructions, and you and your Client agree to hold Universal harmless from any such claims.

Instructions for Use

Prior to First Use

1. Place the Double Hot Towel Warmer on a flat, stable surface away from excessive heat, humidity, and vibration.
2. Plug the Double Hot Towel Warmer unit into a properly grounded GFCI outlet.
3. Using both hands, insert the drip tray horizontally into the opening at the bottom of the cabinet. Make sure that the tray is firmly in place.
4. Slip the bottom rack in. Place the top rack on the metal slides.

Using the Double Hot Towel Warmer

1. Place damp, clean towels on the racks in the Double Hot Towel Warmer. Towels should be at least 1” from the walls of the cabinet. If they touch the wall, they may dry out or become discolored from impurities in the water
2. Press the power switch located on the upper front portion of the cabi to the “ON” position. The left one controls the top warmer, and the one of the right controls the lower warmer.



Note: Warm up time is 1 to 1 and ½ hours, depending on the quantity of towels.

3. If you want to use the UV light, place the towels in the upper compartment. The lower compartment does not have a UV light. The switch for the UV light is located on the back of the Hot Towel Cabi. Remember the UV light can only sanitize what it can shine directly on.

DO NOT look at the ultraviolet light when it is operating. Looking at an ultraviolet light (UV) will damage you eyes. This should not be a problem with this cabi because the door has a switch built in. When the door opens, the UV light turns off. When you close the door, it will come back on.

4. Make sure the door to the Double Hot Towel Warmer is completely closed.
5. Check the drip tray periodically. As water accumulates, empty the container. To remove the tray, place your thumbs on the front edge of the tray and your fingertips on the back of the tray to steady it. Pull gently, but firmly.
6. Towels, steam, water tray and the inside surfaces of the appliance will be hot when the unit is operating. Always use protective gloves when handling hot trays or towels.
7. At the end of the day:
 - Turn off the unit.
 - Remove any towels that are left in the unit. Do not leave wet towels in the Double Hot Towel Warmer overnight. They will mildew.
 - Wipe the cabinets dry.
 - Empty the drip tray and leave the door open to let the unit dry completely before closing door.

Cleaning

1. Once a week, wipe the insides of the cabinet with a non-abrasive, antimicrobial cleaning product.
2. To avoid the growth of microbes or fungus, wash the drip tray with hot soapy water at least once or twice per week.
3. Wash the wire racks.

Trouble Shooting

If the Double Hot Towel Warmer is not working:

1. Make sure the unit is turned on.
2. Check the main power plug to ensure that it is plugged into a working electrical outlet.
3. If the Double Hot Towel Warmer is still not working, contact our authorized service center.
4. Check the fuse. If necessary replace it.

Changing the UV Light:

1. Unscrew the bulb. Replace it with a new bulb.

Specifications

Outer Dimensions

- 16.1" L x 16.7" D x 17.6" H

Inner Dimensions of Each Cabinet

- 13" L x 12.8" D x 5.7" H

Capacity

- 48 Wash Cloths (24 each compartment)

Weight

- 26 pounds

Electrical

- ❑ 110 Volts
- ❑ 60 Hz
- ❑ 1.2 amps for one warmer, 2.8 amps for both warmers
- ❑ Rated input wattage – 300W

Insulation Material

- ❑ Glass wool fiber

Replacement Parts

UV Replacement Bulb

CP1013

Warranty Statement

The manufacturer (the “warrantor”) warrants to the original purchaser that this equipment will be free from defects under normal and proper operation for a period of one (1) year from the date of purchase. This warranty covers all parts and labor for that one (1) year period. This warranty shall not apply to any equipment that has been subjected to abuse, misuse, and alteration of any type or to any defect or damage caused by repair, replacement, substitution or use with parts other than parts approved by the manufacturer.

The manufacturer shall not be liable for the loss of use of this equipment, loss of time or business, inconvenience or any other indirect, consequential, special or incidental damages due to defects covered by this warranty or any implied warranty.

To implement this warranty, contact the dealer from whom you purchased the equipment. If necessary, you will be asked to return all, or the appropriate part, of the equipment. If warranted, the repairs will be performed at no charge and the equipment returned to you. Unit owner must prepay all shipping costs when returning items for warranty service.

This limited warranty is the only written or express warranty given by the manufacturer. This warranty gives you specific legal rights but you may also have other rights, which may vary from state to state or province to province.

Authorized Technical Service Center:

Universal Companies, Inc.
18260 Oak Park Drive
Abingdon, VA 24210
Phone: 1-800-558-5571
Fax: 1-800-237-7199
E-Mail: info@universalcompanies.com

DISTRIBUTED BY UNIVERSAL COMPANIES



Universal Companies, Inc., 18260 Oak Park Drive, Abingdon, VA 24210

Phone: 800.558.5571 **Fax:** 800.237.7199

Web: www.universalcompanies.com

Email: info@universalcompanies.com

C9512TM
