

Professional Table Warmer



Important Safeguards

In order to reduce the risk of fire, electrical shock, and/or injury to persons when using the electrical appliance, it is important to follow these basic safety precautions:

- Intended for use ONLY as a massage table warmer. This is NOT a blanket.
- Not intended for use with pets.
- Unfold completely for proper use.
- Check table warmer frequently to ensure it is NOT bunched or folded as this could cause excess heat and result in injury or fire.
- If your table warmer does not function properly, discontinue use immediately and consult the manufacturer or distributor.
- Regularly inspect the cord, plug, power supply and table warmer for damages. If damaged, discontinue use immediately and consult the manufacturer or distributor.
- If using an adjustable height massage table, make sure the cord cannot be caught.
- Pad should NOT hang over the edge of massage table.
- Do not leave disabled persons, infants, or young children unattended while in use.
- Long applications on the high setting can result in skin irritation or burns.
- Keep control unit away from open windows.
- Do not pierce with sharp objects.
- Use table warmer only on an alternating current supply circuit of correct voltage.
- Keep the flexible power supply and switch (as much as possible) off the top of the table.
- Unplug the unit at the power outlet when not in use.

Care & Maintenance

- **DO NOT DRY-CLEAN!**
Cleaning liquids can deteriorate the insulation and/or covering of the heating unit.
- **DO NOT IRON.**
- **DO NOT MACHINE WASH OR DRY.**

Storage

- Fold neatly and loosely, without sharp bends in heating element.
- Do not place objects on top of your massage table warmer.
- Do not roll.

Spot Cleaning

Before cleaning, ensure the control is set to the 'Off' position and the plug is removed from the wall socket.

Sponge the soiled area using luke warm water and mild detergent or soap. Follow with a sponging of clean water. To remove excess water, compress the wet area between absorbent towels.

Operating Instructions

1. Plug into wall outlet
2. Press button once for "H" High
3. Press twice for "M" Medium
4. Press three times for "L" Low
5. Press once more to turn warmer off.

Note: The controller features a 3-hour auto shut-off



Warranty Information

LIMITED ONE YEAR WARRANTY

EARTHLITE, LLC WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIAL, AND DESIGN FOR A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE (THE "WARRANTY PERIOD"). IF THIS PRODUCT IS DETERMINED DEFECTIVE DURING THE WARRANTY PERIOD, EARTHLITE AGREES TO EITHER REPAIR OR REPLACE AT ITS DISCRETION. YOU MUST CALL EARTHLITE TO OBTAIN STEP-BY-STEP INSTRUCTIONS TO RECEIVE REPAIR/REPLACEMENT SERVICES.

DISCLAIMER OF WARRANTY

THIS WARRANTY SHALL NOT APPLY IF THIS PRODUCT IS DAMAGED DUE TO ACCIDENT, MISUSE, NEGLIGENCE, OR OTHER CAUSES UNRELATED TO DEFECTIVE MATERIALS OR WORKMANSHIP. IN NO EVENT IS EARTHLITE LIABLE FOR LOSS OF PROFITS, INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR OTHER SIMILAR DAMAGES, INCLUDING BUT NOT LIMITED TO ANY CLAIM OR DEMAND BY ANY CONSUMER OR THIRD PARTY ARISING OUT OF THIS WARRANTY FURNISHING OR FUNCTIONING OF THIS PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXPRESSLY DISCLAIMED.

PROOF OF PURCHASE IN THE FORM OF A BILL OF SALE OR RECEIPTED INVOICE WHICH IS EVIDENCE THAT THE PRODUCT IS WITHIN THE WARRANTY PERIOD MUST BE PRESENTED TO OBTAIN WARRANTY SERVICE.