INSTRUCTION MANUAL







and Universal Table Extender

All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without prior written consent of Oakworks®, Inc.

OAKWORKS® is a registered trademark of OAKWORKS®, Inc.

Notice

The information contained in this document is subject to change without notice and should not be construed as a commitment by OAKWORKS®, Inc.

OAKWORKS®, Inc. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

OAKWORKS®, Inc. shall not be liable for incidental or consequential damages in connection with or arising out of the furnishing, performance, or use of this document and the program material which it describes.

Symbol Identification	ii
Warnings & Safety Instructions	iii
Grounding Instructions	v
Section I: Product Description	
Premiere [™] Table Photo & Specifications	1
Section II: Installation	
Leveling Instructions	2
Section III: Directions for Use	
Daily Cycling For Continued Quiet Operation	3
Foot Control	3
Table Key Switch	4
Under-Table Cabinet	4-6
Side Arm Rests	7
Accessory Option: QuickLock™ Face Rest	8-9
Accessory Option: Table Extender	10
Moving the Premiere TM	10
Section IV: Troubleshooting	
If Table will not change height or position	11
If Table is making a noise during height adjustment	11
Section V: Care & Cleaning	12
Section VI: Product Identification	13
Section VII: Table Specifications	14
Section VIII: List of Parts	15
Section IX: Warranty	16
Contact Information	back cover

SYMBOL IDENTIFICATION



This symbol, when used in documentation on this product, represents a caution. Be sure to read and comply with all precautions and warnings.



This symbol, when used in documentation on this product, indicates danger and warns against an electrical shock hazard. Be sure to observe and comply with all warnings and instructions.



This symbol, when used in documentation on this product, indicates a Protective Earth (Ground) Terminal.



This symbol when used in documentation on this product, warns that during transport there should be no stacking of containers.



This symbol, when used in documentation on this product, indicates that the product should be protected from moisture. The humidity specifications for Transport & Storage are listed on page 18.



This symbol, when used in documentation on this product indicates that information is given regarding the recommended temperature limits during transport and storing. The specifications for these limits are listed on page 18.



This symbol, when used in documentation on this product, indicates the date of manufacture of the device.



This symbol, when used in documentation on this product indicates alternating current (AC).



This symbol, when used in documentation on this product, indicates direct current (DC).



This symbol, when used in documentation on this product, indicates that instructional information is included. All instructions should be read carefully and completely before using the equipment.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS





Improper use of this device can cause injury. Be sure to read all operating instructions prior to use to prevent injury to operator or client.

DANGER



Electrical Shock Hazard. To reduce the risk of electric shock, always disconnect the table from the electrical outlet before moving the table or doing any maintenance or troubleshooting procedures. Never use this equipment if it has a damaged cord or plug. Use this equipment only for its intended use as described in these instructions. Do not use any attachment or accessories not recommended by the manufacturer.

WARNINGS 4

To reduce the risk of burns, fire, electrical shock or injury:

- The power supply/control module is located under the top and beneath the base. Refer servicing to qualified personnel and follow manual instructions when doing any authorized troubleshooting. Before doing any work on the unit, disconnect the power cord from the power outlet.
- Before cleaning with any liquid cleaner be sure to un-plug the power cord from the power outlet. Do not operate the table in standing water.
- Before moving the table, disconnect the power cord from the power outlet and secure the electrical cord, hand control and foot control out of the way for moving.
- Risk of Electrical Shock. Connect this table to a properly grounded outlet only. See Grounding Instructions.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Never operate this table if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the table to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Maximum shelf load weight: 200 lbs. (91kg.)

Risk of Injury – Children should never be near the table when in use. This table must be locked out (use key lock) and controls stored out of reach if there is any possibility that children would be near the table when not in use.

Never drop or insert any object into any opening.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS (CONT.)

WARNINGS A

This product is equipped with an interior accessory outlet. The total electrical load of equipment plugged into this set of outlets is not to exceed 750 watts.

Close supervision is necessary when this furnishing is used by, or near, children, invalids or disabled persons. DO NOT leave children alone or allow them to operate the controls. Keep controls out of reach of children. DO NOT allow children to crawl into the cabinet or under the table.

To remove the accessories from the cabinet: Turn the accessory controls to the 'off' position and then disconnect the unit from the interior power source by removing the plug from the outlet.

When moving the table: Turn the accessory controls to the 'off' position, disconnect the table from the exterior power source by removing the table plug from the outlet.

CAUTIONS

Be certain that the table is completely lowered without any tilt being present prior to discharging an ambulatory patient. The patient may lose balance and fall. Do not leave clients unattended when table is set at its highest level.

The table weighs as much as 200 lbs. DO NOT lift or move the unit without using proper safely procedures or equipment. DO NOT turn the **Premiere** on its side for any reason. To do so could cause damage to the base and will void the warranty. There are no serviceable items that require this action. Never lift the table by grasping the table top as the table top is not designed to hold the weight of the base and you could damage the table.

When operating the *Premiere** controls and making any and all adjustments to the table, move hands and feet away from the working mechanism of the table.

DO NOT sit on the Arm Rests, the elevated Back Rest or Leg Rest. DO NOT place excess weight on the Side Arm Rests. DO NOT use them in assisting the client on and off the *Premiere*."


DO NOT put excessive weight or pressure on the QuickLock™ Face Rest. Excessive pressure can cause premature failure of the QuickLock™ Face Rest. Do Not extend the dowels of the Face Rest further than 3″ from the table edge to ensure a stable connection.

DO NOT use the hand control and the foot control simultaneously as this can cause damage to one or both units.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS(CONT.)

 CAUTIONS 1




Maximum Working Load Rating (client and accessories): 500 lbs. (227 kg.)

Plug table into an outlet that is surge protected to a level of 750J or higher. Failure to do this may void all or part of the warranty.

GROUNDING INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. See U.S. sample below.

This product is manufactured for use on a nominal 120-volt circuit for the United States and a nominal 220-volt circuit for use in Europe. The plug has a grounding pin in a pattern that varies by country as shown in the Product Identification section of this manual. Make sure that the product is connected to an outlet having the same configuration as the plug.

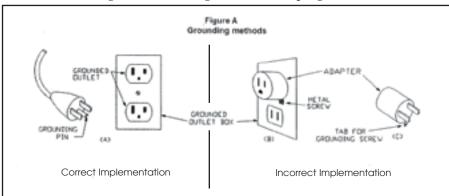

WARNINGS A

DANGER-Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service man if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

No adapter should be used with this product.

Premiere The





Flat Top model shown here with optional hot towel cabi ready end panel. (Must be ordered at time of table purchase)

Also shown with QuickLock™ Face Rest and Boiance™ Crescent • Height *: 25" - 35"

• Width: 29" or 31"

Length: 73"

Lift Capacity: 500 lbs Maximum Working Load

Weight**: 157-182 lbs. (depends on model)

Top: Electric Salon or Flat top

Electronics: 1 Multi-Function Foot Control

Padding: 4" AeroCel™ or 6" AeroCel™

Upholstery: TerraTouch™ or Ultratouch™

Cabinetry: Wood/Maple

For electrical specs, see Specifications Chart

- * measurements are determined from floor to top of seat pad using standard padding; these measurements can be affected by natural material variations in padding
- ** published weight may differ due to options chosen, natural material variations and padding density

INSTALLATION INSTRUCTIONS:

When operating the *Tremiere*[™] controls be sure to observe all cautions and warnings given in the manual to prevent injury to both operator and client.

The *Premiere* comes completely assembled and ready to use. Plug the cord into a functioning outlet that is rated for the table.

Arrange the power cord and control cords so that they will not create a tripping hazard. Place the controls in a safe location where they are convenient and accessible. Keep the controls out of the way of all table mechanisms.

LEVELING INSTRUCTIONS:


If Table Will Not Sit Flat on the Floor:

The *Premiere*[™] is equipped with Leveler Feet that adjust to level the table on uneven floors. To adjust the Leveler Feet to suit common floor differences you will need to use a $^{1}/^{2}$ " open-end wrench or an adjustable wrench. Adjust each leg individually in turn by adjusting the height of each leveler foot until the unit rests level and steady. This adjustment will not effect the function of the table. The feet can be adjusted out 1/4".


CAUTION 4



The table weighs as much as 200 lbs. **DO NOT** lift or move the unit without using proper safely procedures or equipment. DO NOT turn the $\mathcal{P}remiere^{^{\!\top\!\!\!\!\!-}}$ on its side for any reason. To do so could cause damage to the base and will void the warranty. There are no serviceable items that require this action. Never lift the table by grasping the table top as the table top is not designed to hold the weight of the base and you could damage the table.

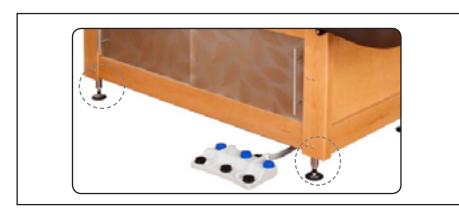

Leveler Foot

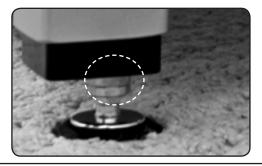

Use 1/2" Open-end Wrench to adjust

CAUTION



When operating the Premiere™ controls and making any and all adjustments to the table, move hands, feet and controls away from any working mechanisms of the table.

Children must be supervised when around this equipment by a responsible adult. Do not leave children alone or allow them to operate the controls. Do not allow children to crawl into the cabinet or under the table.

If you have the flat top model, your table will be equipped with a two button foot switch to raise and lower the table.




DAILY CYCLING

The Oakworks® **Premiere** uses hydraulics and hydraulic fluids to adjust the table height. Maintaining the quiet operation of your table requires that you fully cycle your table (up & down) twice per day. Cycling of the table will maintain the lubrication within the hydraulic cylinders for continued smooth and quiet operation. When not possible, we recommend that you cycle the table (up & down) four times at least once per week.

FOOT CONTROL:

The Oakworks® **Premiere*** comes complete with a multifunctional foot control that operates the backrest and leg rest positioning functions as well as the height. The lifting motor is equipped with a thermal overload limiter. It has a 10% duty cycle, 2 minutes operating and 18 minutes off.

Press and hold the appropriate button until the position desired is achieved and then release. The arm rests (available on Salon Top) will adjust automatically to provide the most in comfort and ergonomics while staying parallel to the floor, no matter what the position.

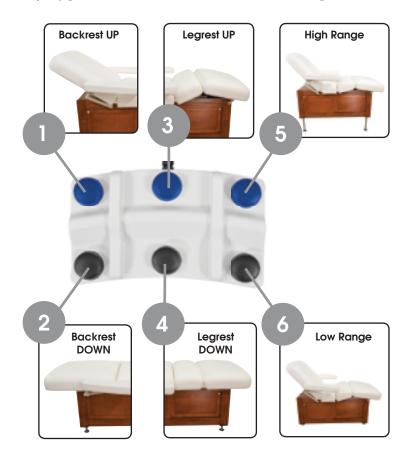

CAUTION 4



DO NOT store or place anything on the cabinet hood under the backrest as this can cause damage to the top and/or hood.

IMPORTANT SAFETY NOTE

The cabinet hood area under the backrest top is not designed for storage or as an area to hold accessories while with a client. DO NOT use this area for holding anything. Damage can occur to the table, especially when commands that are accessed by the foot or hand control are activated. Placing anything on this area will prohibit movement of the backrest and can cause damage to the table or the object and will void the warranty.







TABLE KEYSWITCH

A table keyswitch is located inside the cabinet on the shelf at the head end of the table. This key switch will lock-out the table and prevent all motions. It should be used to prevent unauthorized use. Remove the key if children have the opportunity to access the table without adult supervision.



UNDER-TABLE CABINET

CAUTION



Use care when opening the doors all the way so that you do not pinch or injure your fingers.

To Access the Storage in the Under Table Cabinet:

The *Premiere*[™] has a fully integrated wood cabinet and base. The large under-table cabinet provides storage for stacks of towels and other equipment without interfering with the lift capacity of the table. There are two (2) sliding doors on both sides of the table. The doors slide all the way open. The doors on the under-table cabinet are placed in a slide track for ease of movement. The doors, two (2) on each side, slide independently along this track with slight pressure on the handles.





DANGER



This product is equipped with an interior 120-volt 60Hz accessory outlet. Disconnect all power cords from the interior power outlet (found within the cabinet) after use. The total electrical load of equipment plugged into this set of outlets is not to exceed 1000 watts.

UNDER-TABLE CABINET (CONTINUED)

To Access the Storage in the Under Table Cabinet: (cont)

The cabinet doors will open until they meet the other side of the cabinet and stop. Slide the door shut to open the other side.







The *Premiere*[™] offers an in-cabinet power strip to accommodate electric hot towel warmer or other electric devices. This allows you to store the unit inside with no excess cords to get in the way. With it plugged in, your towels stay warm and within easy reach, yet are still out of the way. You will find the plug inside the cabinet at the foot end of the *Premiere*[™].

To access the interior plug and insert the Hot Towel cabi at head end of table:

The *Premiere** has a removable panel at the head end of the cabinet to allow the placement of an electric hot towel warmer or other electric devices inside the cabinet. Before any work is started, unplug the power cord from the receptacle. To remove this panel unscrew and remove the 4 screws from the panel retaining strips found on both sides of the head end of the interior of the cabinet. Once these screws are removed, push the bottom of the panel inside the cabinet and then angle the panel to remove it from the opening. Place the screws and the panel in storage in case of future need to reinstall the panel.

To re-install the panel, unplug and remove any appliances from the cabinet, angle the panel into the opening and fit the panel into place. Position the screws into the retaining strips and tighten. Do not overtighten the screws.





UNDER-TABLE CABINET (cont)

Plug in the towel warmer and slide it inside being careful to move any excess cord inside the wooden cabinet.





To access the interior plug for use with optional accessory appliances:

For the times when an optional electrical appliance such as a facial massager is used the $\mathcal{P}remiere^{\text{T}}$ comes equipped with an opening to allow the cord of the appliance to pass through the cabinet and access the interior outlet, thus giving you complete power without the safety hazard and distraction of loose cords in the working area.





Note: Appearance of outlets will vary depending on country of use.



ARM REST INSTALLATION AND ADJUSTMENT INSTRUCTIONS

OPTIONAL ACCESSORY AVAILABLE ON SALON TOP ONLY

CAUTION: Do not use the arm rest for customer weight support during the mounting or dismounting of the table. The arm rest is not designed to support the patient's weight.








TO INSTALL THE ARM REST:

The arm rests adjust automatically as the table's back support moves to remain parallel to the floor in any position. They are designed to be strong and will take a reasonable amount of weight, but they are not designed to be used to sustain a person's weight when getting on or off the table.

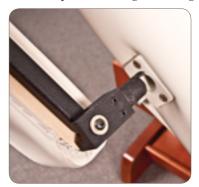

1. Insert end of arm rest into hole in backrest while holding arm rest at 60° angle.



2. Push end all the way into hole and drop arm rest into horizontal

position. Tug slightly to make sure the armrest is fully locked to the table (for patient safety).

To remove the arm rest, simply reverse the procedure above.

TO LEVEL THE ARM REST:

The arm rest height is adjusted to level at the factory. When in use, some of the new parts will wear, and you may see some sagging of the arm rest over time. If the arm rest is too low the height can easily be adjusted using the enclosed Allen wrench.



To Raise the Arm Rest



1. Loosen bottom 2 set screws (turn counter-clockwise).

To Lower the Arm Rest 1. Loosen bottom 2 set screws (turn counter-clockwise).



2. Turn side set screw in (clockwise) while lightly raising the arm rest with your other hand (to make the adjustment easier).

2. Turn side set screw out (turn counter-clockwise).



3. When you have achieved the desired height, tighten the two bottom set screws (turn clockwise).

3. When you have achieved the desired height, tighten the two bottom set screws (turn clockwise).

QuickLock™ FACE REST:


* U.S. Patent #5,177,823

Double articulating action provides nearly limitless positioning options with the QuickLock™ Face Rest. The adjustable pad takes pressure off sensitive facial areas while providing superb support. The QuickLock™ Face Rest can be used in both prone and supine positioning and folds out of the way when not in use. Adjustments are made easily by loosening the cam locks, adjusting for height and angle and then locking the cam locks into that position. The **Premiere** has outlets at the head of the table for a variety of uses and outlets at the other end that work as well for additional procedures.

QuickLock™ Face Rest



Important Safety Note: Maximum Distance from edge of table = 3"

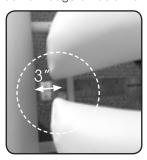

Attaching the QuickLock™ Face Rest / Head & Foot End Outlets:


When attaching the QuickLock™ Face Rest to the head or foot end by using the provided outlets, just slide the frame dowels into the outlets being sure to keep the 1st cam lock within 3″ of the table to ensure a stable connection.

To remove the QuickLock™ Face Rest, just pull the frame from the outlet until it comes free. Set it safely aside or store it inside the under-table cabinet until needed.

CAUTION



Do not put excessive weight or pressure on the face rest. Excessive pressure can cause premature failure of the QuickLock** Face Rest.

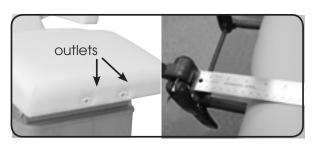

Important Safety Note: Maximum Distance from edge of table = 3"

QuickLock™ FACE REST (CONTINUED):

Tips for Great Positioning using the QuickLock™ Face Rest:

• To use the face rest with your client supine, rotate the face rest pad so that the thick part of the pad supports your client's cervical region. Adjusting the height and angle of the face rest gives your client perfectly comfortable support.



Do not put excessive weight or pressure on the face rest. Excessive pressure can cause premature failure of the QuickLock™ Face Rest



The face pad is flexible so that you can bring the open ends together
or spread them apart to achieve the most comfortable support for
any size face. To avoid your client's chin from hitting the spacebar,
make sure the pad is narrow enough to support the whole face.



• For appropriate cervical flexion, use the cam locks to adjust the downward angle of the face rest, making sure that the surface of the face rest pad at the chin is not lower than the surface of the table.





Do not put excessive weight or pressure on the extender. Excessive pressure can cause premature failure of the Table Extender.

Table Extender





The optional stationary Table Extender provides ultimate comfort for your tallest clients, quickly and easily. The Table Extender comes with two connecting arms that slide into the outlets at the foot end of the tabletop. Slide these fully into the outlets so the Table Extender is flush to the end of the table top. This Stationary Extender provides 11" of additional comfort and support when needed.


Moving the Premiere


CAUTION



The table weighs as much as 200 lbs. DO NOT lift or move the unit without using proper safety procedures or equipment. DO NOT turn the *Premiere*[™] on its side for any reason. To do so could cause damage to the base and will void the warranty. There are no serviceable items that require this action. Never lift the table by grasping the table top as the table top is not designed to hold the weight of the base and you could damage the table.

Before moving the **Premiere**, disconnect the power cord from the power outlet and secure the electrical cord, hand control and foot controls for moving.

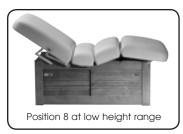

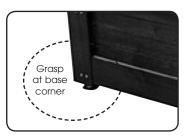

The *Premiere*™ weighs approximately 200 lbs. You will need 4 people working together if it is necessary to move the table. Never lift the table by grasping the table top as the table top is not designed to hold the weight of the base and you could damage the table and the electronics that run the tabletop.

If you need to move the table, place one person at each corner of the table. We recommend that you have the table top in a flex position(with Arm Rests removed) to have the table top ends out of the way as much as possible. Have each person firmly grasp the cabinet base at the bottom by the table legs and lift the table from the base. As when moving any piece of heavy equipment, bend at the knee and lift with your legs beneath you and not with your back. Be aware and use proper, safe procedures for moving a table of this size to prevent injury to yourself or the table. We strongly recommend that a flatbed dolly be used that can hold the entire table if moving the table involves any distance.

CAUTION A



The table weighs as much as 200 lbs. **DO NOT** lift or move the unit without using proper safety procedures or equipment. **DO NOT** turn the $\mathcal{P}remiere^{\mathrm{TM}}$ on its side for any reason. To do so could cause damage to the base and will void the warranty. There are no serviceable items that require this action. Never lift the table by grasping the table top as the table top is not designed to hold the weight of the base and you could damage the table

Before doing any work on the unit, disconnect the power cord from the power outlet.

Be sure to read all cautions, warnings and instructions given in the manual to prevent injury to both operator and client.

IF THE TABLE WILL NOT CHANGE HEIGHT OR POSITION

- Check that the keyswitch inside the table is in the "on" position.
- Check the outlet to be sure that it has power and that the power cable is plugged in. Try all Foot Control Buttons to see if any work. If any work, then possibly there is a loose connection or a faulty controller.
- Unplug the power cable from the wall outlet.
- Make sure that all male and female connectors are firmly pushed into each other. Even a slight misconnection can cause a possible malfunction.
- Plug the unit back into the wall and check the controls again. If one or more of the controls still do not work, contact Customer Service at 800-558-8850 to arrange replacement.

IF THE TABLE IS MAKING NOISE DURING HEIGHT ADJUSTMENT

• If you hear squealing or a pop during the height adjustment, this may be related to lack of lubrication in the hydraulic cylinders. We recommend that you immediately cycle the table fully up/down at least four times. If this does not work, then let the motor cool down for at least 30 minutes and repeat the procedure. The table should return to its normal quiet mode. Refer to "DIRECTIONS FOR USE; Important for continued quiet operation."

WARNINGS 🐴

Before cleaning with any liquid cleaner be sure to unplug the power cord from the power outlet. Do not operate the table in standing water.

UPHOLSTERY

In order to maintain your product's quality and ensure the life of your upholstery, we have tested several preventative steps you can take to protect the upholstery fabric on your table and accessories.

Here are a few suggestions in caring for your upholstery fabric:

- DO NOT store your table or upholstery fabric-covered accessories in temperatures below 32°F/0°C or above 95°F/35°C. Extreme hot and cold temperatures will damage the upholstery fabric. Some potential results are cold-cracking, brittleness and upholstery fabric stretching. And, always keep your table away from heaters, electrical appliances and direct sunlight.
- We recommend cleaning your upholstery fabric to protect it against oil stains and dirt which will cause cracking and permanent stains over time. Clean your upholstered items when needed using a mild solution of 4:1 diluted non-alcohol cleaner such as Formula 409®, Fantastik®, Green Windex® or some other non-abrasive cleaner. For disinfecting purposes you may use Protex, MadaCide, Accell TB, Virox® (Canada) or a diluted 1/100 bleach solution. Dry the table immediately after cleaning to remove excess cleaning solution. Using citrus based cleaners or other strong cleaners, such as alcohol, acetone, higher concentrations of bleach or other products that contain high concentrations of these substances, can shorten the life of your fabric, or discolor it. Note: Damage caused by cleaners will not be covered under the warranty.
- Use both ends of the table evenly. Occasionally switch the face rest from one end of the table to the other to reduce uneven wear.
- Protect your table and accessories with sheets and fleeces. We offer both fitted
 sheets and thick fleeces that protect your upholstery fabric against oil stains while
 offering comfortable softness to your clients. You can also preserve your face rest
 and bolsters with covers and fleeces.

BASE & CONTROLS

- Use only a mild solution of 4:1 diluted non-alcohol cleaner such as 409[®], Fantastik[®] or some other non-abrasive cleaner to wipe down the metal and wooden surfaces. Apply with a damp (not wet) lint-free cloth. Be sure excess liquid does not drip onto, or into, any of the electrical controls or mechanisms. Be sure that the unit is unplugged before cleaning these areas. Wipe these areas dry carefully with a lint free cloth.
- Electronic and/or manual lift mechanisms require no general maintenance or lubrication. Hydraulic units may require yearly maintenance.
- If the table will be out of use for an extended period of time, the power cord should be unplugged from the receptacle. To prevent inadvertent damage to the plug or cord, the cable should be coiled and secured with a wire tie or rubber band.
- The wooden cabinetry of the equipment can be polished with any polish approved for wooden surfaces. Spray, or pour the polish onto a soft cloth and be careful not to get it onto other surfaces.
- It is important to visually inspect your table on a quarterly basis to ensure all components are working properly and safely. Be sure to tighten all bolts to be sure they are secure. Over time they may work their way loose, leading to an unsafe condition.

ACCESSORIES

The face rest and table extender should be removed when not in use.
 These items should be stored in a cool, dry place.

POWER LEAD PLUGS

Voltage (ACE) Power Cord Plug

120v 60 Hz 3 prong grounded North America

220v 50 Hz Continental Plug; Europe/Italy

220v 50 Hz Swiss plug; Switzerland

220v 50 Hz British plug; United Kingdom



220v 50 Hz Australian Plug; Australia



Designed For:	North America	Europe/Australia
Voltage/Current Service Available	120 VAC/ 2.9 amps	220 VAC/ 1.6 amps
Input Frequency	60 Hz	50 Hz
Current Consumption with internal Outlets	12 amps max	6.5 amps max
Power Consumption	350 watts	350 watts
Table Actuator Voltage	24 VDC	24 VDC
Electric Shock Protection	Class I Equipment	Class I Equipment
Mode of Operation	Continuous Operation @ 10% Duty Cycle	Continuous Operation @ 10% Duty Cycle
Length:	72″	182 cm
Width:	31" & 29"	79 cm & 74 cm
Height Range*	25" - 35" (standard) 21" - 31" (optional)	64 cm - 89 cm (standard) 53 cm - 79 cm (optional)
Weight*	~ 200 lbs.	~ 91 kg
Shipping Weight	~ 250 lbs.	~ 115 kg
Shipping Crate Dimensions	81" L x 36" H x 35" w	205.7cm x 91.4cm x 89cm
Maximum Working Load Rating	500 lbs.	227 kg
Cabinet Dimensions:		
Total Outside Dimensions:	20.5″ н x 24.5″ w x 50.5″ L	52.1cm L x 62.2cm н x 128.3cm w
Inside Dimensions	11.5″н x 20″ w x 48″ L	29.2cm L x 50.8cm н x 121.9cm w
Opening Dimensions: Storage Area 1/ Head End:	12" H X 20.4" L	30.4cm н x 51.8cm г
Opening Dimensions: Storage Area 2/ Foot End:	12″н x19.9″L	30.4cm н x 50.5cm L

 $^{^{\}star}$ measurements are determined from floor to top of seat pad using standard padding; these measurements can be affected by natural material variations in padding.

Storage &

Transport

Pressure: no limitations known

LIST OF PARTS

64649-110 Control Box - U.S.

64649-220 Control Box - European

64984 Lift Actuator

7009-3 Table Top Actuator
 64973-1 Hydraulic Lift Unit
 TBD 6 Button Foot Control

2083-5 US Power Strip

Accessory Options

Part No. Description

60777-WT,BK QuickLock Face Rest Platform

2410 AeroCel Face Rest Pad 18020 Standard Arm Rest 18035 Manicure Arm Rest

2825 Table Extender

3680-1 Hot Towel Cabinet, US

3680-2 Hot Towel Cabinet, European

3680-5 Miniature Hot Towel Cabinet, US

11349-01,02 Paper Roll Holder

WARRANTY STATEMENT

For full warranty details, please visit www.oakworks.com

All warranties are limited to factory-provided replacement parts, factory repair or replacement, at the discretion of Oakworks[®].

All warranties exclude damage caused by improper set-up, accident, abuse, misuse, neglect, use for other than intended purpose or reasonable wear such as tears in the upholstery.

All warranties are invalidated by non-factory modifications and unauthorized repairs, which will immediately terminate all liability by Oakworks® for the product or damages caused by its use.

The buyer and its customers shall be responsible for proper set-up and use of the products as well as any supervision required for safety. In no event shall Oakworks® be liable for any special, indirect, consequential, incidental, exemplary or punitive damages or costs. Use of non-approved cleaning solutions voids the guarantee on all fabrics.

The warranties set forth herein are the sole and exclusive warranties provided by Oakworks[®]. There are no other warranties, representations or guarantees provided by Oakworks[®] either expressed or implied, including warranties of merchantability and fitness for a particular purpose.

Warranty valid with proof of purchase.

CONTACT INFORMATION:

OAKWORKS® Inc.

923 East Wellspring Road New Freedom, PA 17349

Phone: 717-235-6807 FAX: 717-235-6798

www.oakworks.com





Complies with: UL 962 CAN/CSA C22.2 No. 68-09 EN60335-1 EN60335-2-32

Manual Part # MMMNST0028 rev. 03.22.12

Edition 1, February 2012 Printed in U.S.A.



