

SPA EQUIPMENT



TRIPLE DEPILATORY HEATER E-100

AC 120 V • 400 W
5.3"H x 11.5"D x 15.8"W
Two 14 oz Cans plus 2 lb Compartment

Amber Products Co.
Ten Chiri Lane
Imperial, PA 15126
800.821.9188 • 724.695.1882
www.amberproducts.com

 **AMBER PRODUCTS**
inspired spa experiences

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – To reduce the risk of electrocution:

1. Always unplug this appliance when not in use or preparing for use.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Close supervision is necessary when the appliance is used by, on or near children.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or

WARRANTY INFORMATION

Amber Products prides itself on providing high quality equipment for spas and salons. Each piece of equipment will be covered under the following warranty:

Warranty: 30-day warranty on all equipment from ship date. Product must be shipped back in original packaging or similar quality packaging at customer's expense. Amber will either repair or replace equipment at no charge if found to be manufacture defect. Reports must be made to customer service at 1-800-821-9188. Amber customer service will provide customer with a return authorization (RA) number, which is required for any return to be accepted. Once the RA is given, customer has 15 days to return the product or equipment. Return defective product to: Amber Products, 549 US Route 30, Imperial, PA 15126. Include: Copy of purchase receipt, name, address, contact number and detailed explanation of defect. Upon repair the item will be returned to customer. NOT COVERED: Failure of equipment due to misuse, abuse, accident, mishandling or neglect.

soft wax on medium to high.

6. Stir wax regularly to maintain a consistent viscosity of the wax during heating and operating times. Keep covered when not in use.

USE-MAINTENANCE INSTRUCTIONS

TO CLEAN – Unplug and wait until the unit cools down and pull out wax cans. If using poured wax, unplug and quickly scoop out the warm wax. Wipe out the remaining warm wax with disposable paper towels and Amber Equipment Cleaner. Note: The bottom of the heater must be free of wax when a new can is inserted to allow for proper heating temperatures. Be sure not to get wax between the sides of the can and the heating unit.

plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to Amber Products for examination and repair.

4. Keep the cord away from heated surfaces.
5. Never place on a soft surface, such as a bed or couch.
6. Never drop or insert any object not intended for use with the heater into any opening.
7. Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

SAVE THESE INSTRUCTIONS


GROUNDING INSTRUCTIONS – This appliance must be grounded. In the event of an electrical short-circuit, grounding reduces the risk of electric shock by providing a path of low resistance for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in compliance with all local codes and ordinances.

DANGER – Improper use of the grounding plug can result in a risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the appliance, if it will not fit the outlet, have a proper outlet installed by a qualified electrician. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

OPERATING INSTRUCTIONS

This appliance is for use on a nominal, 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A of attached Figure. A temporary adapter, which looks like the adapter illustrated in sketches B and C of attached Figure, may be used to connect this plug to a 2-pole receptacle as shown in sketch B of attached Figure if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A of attached Figure) can be installed by a qualified electrician. The green rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

If it is necessary to use an extension cord, use only a three-wire extension cord that has a three-blade grounding plug and a three-slot receptacle that will accept the plug on the appliance. Replace or repair a damaged cord.

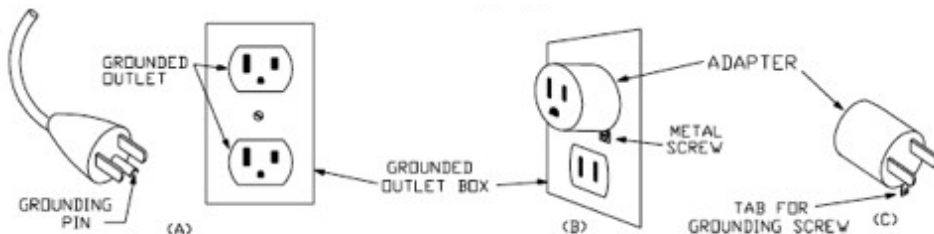

AA200

With ON/OFF switches and three individual adjustable temperature controls, Amber Products Triple Depilatory Heater heats hard and soft wax to proper temperatures (140–200° Fahrenheit). This sleek unit has a custom cover and allows you to mix and match, as well as to perform face and body waxing simultaneously. It holds two 14 oz Amber Depilatory Wax cans and one of the following: Two 16 oz jars or 2 lb of Amber Depilatory Wax. Note: Other cans may fit, but Amber cannot guarantee the quality of heating other depilatory waxes.

1. Remove heater from package and place on sturdy surface near electrical outlet.
2. Place one or two 14 oz cans of depilatory wax into the heating compartment(s). Pour up to 2 lbs of wax directly into the large heating compartment. Note: Wax can be poured directly into the 14 oz heating compartments if desired.
3. Plug in cord and push on/off switch for each individual compartment being used. The red pilot light will illuminate, indicating that the depilatory unit is heating. Note: Do not keep unit on if wax compartment is empty.
4. If using crossbar, ensure crossbar is in place inside the can. Note: Crossbar not included.
5. For quick melt, turn corresponding knob to high for 15 minutes. Once melted, turn heat down. Always ensure wax is at an acceptable temperature prior to applying to client's skin. Note: Hard wax should heat on medium and