

USE-MAINTENANCE INSTRUCTIONS

TO CLEAN – UNPLUG THE PORTABLE STONE HEATER AND REMOVE ALL PRODUCTS. CLEAN THE UNIT USING A SOFT DAMP CLOTH. MAKE SURE PORTABLE STONE HEATER IS COMPLETELY DRY BEFORE ACTIVATING POWER.

WARRANTY INFORMATION

AMBER PRODUCTS PRIDES ITSELF ON PROVIDING HIGH QUALITY EQUIPMENT FOR SPAS AND SALONS. EACH PIECE OF EQUIPMENT WILL BE COVERED UNDER THE FOLLOWING WARRANTY:

WARRANTY: 90-DAY WARRANTY ON ALL EQUIPMENT FROM SHIP DATE. PRODUCT MUST BE SHIPPED BACK IN ORIGINAL PACKAGING OR SIMILAR QUALITY PACKAGING AT CUSTOMER'S EXPENSE. AMBER WILL EITHER REPAIR OR REPLACE EQUIPMENT AT NO CHARGE IF FOUND TO BE MANUFACTURE DEFECT. REPORTS MUST BE MADE TO CUSTOMER SERVICE AT 1-800-821-9188. AMBER CUSTOMER SERVICE WILL PROVIDE CUSTOMER WITH A RETURN AUTHORIZATION (RA) NUMBER, WHICH IS REQUIRED FOR ANY RETURN TO BE ACCEPTED. ONCE THE RA IS GIVEN, CUSTOMER HAS 15 DAYS TO RETURN THE PRODUCT OR EQUIPMENT. RETURN DEFECTIVE PRODUCT TO: AMBER PRODUCTS, 549 US ROUTE 30, IMPERIAL, PA 15126. INCLUDE: COPY OF PURCHASE RECEIPT, NAME, ADDRESS, CONTACT NUMBER AND DETAILED EXPLANATION OF DEFECT. UPON REPAIR THE ITEM WILL BE RETURNED TO CUSTOMER. NOT COVERED: FAILURE OF EQUIPMENT DUE TO MISUSE, ABUSE, ACCIDENT, MISHANDLING OR NEGLIGENCE.

Amber Products
549 Route 30 • Imperial, PA 15126
amberproducts.com

amber

INSPIRING SPA EXPERIENCES

PORTABLE STONE HEATER

E-833



AC 120 V • 80 W
4"H x 10"D x 17"W

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER – TO REDUCE THE RISK OF ELECTROCUTION:

1. ALWAYS UNPLUG THIS APPLIANCE WHEN NOT IN USE OR PREPARING FOR USE.
2. DO NOT PLACE OR STORE APPLIANCE WHERE IT CAN FALL OR BE PULLED INTO A TUB OR SINK.
3. DO NOT USE WHILE BATHING.
4. DO NOT PLACE IN OR DROP INTO WATER OR OTHER LIQUID.
5. DO NOT REACH FOR AN APPLIANCE THAT HAS FALLEN INTO WATER. UNPLUG IMMEDIATELY.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

1. CLOSE SUPERVISION IS NECESSARY WHEN THE APPLIANCE IS USED BY, ON OR NEAR CHILDREN.
2. USE THIS APPLIANCE ONLY FOR ITS INTENDED USE AS DESCRIBED IN THIS MANUAL. DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.
3. NEVER OPERATE THIS APPLIANCE IF IT HAS A DAMAGED CORD OR PLUG, IF IT IS NOT WORKING PROPERLY, IF IT HAS BEEN DROPPED OR DAMAGED, OR IF IT HAS BEEN DROPPED INTO WATER. RETURN THE APPLIANCE TO AMBER PRODUCTS FOR EXAMINATION AND REPAIR.
4. KEEP THE CORD AWAY FROM HEATED SURFACES.

5. NEVER PLACE ON A SOFT SURFACE, SUCH AS A BED OR COUCH.
6. NEVER DROP OR INSERT ANY OBJECT NOT INTENDED FOR USE WITH THE HEATER INTO ANY OPENING.
7. CONNECT THIS APPLIANCE TO A PROPERLY GROUNDED OUTLET ONLY. SEE GROUNDING INSTRUCTIONS.

SAVE THESE INSTRUCTIONS


GROUNDING INSTRUCTIONS – THIS APPLIANCE MUST BE GROUNDED. IN THE EVENT OF AN ELECTRICAL SHORT-CIRCUIT, GROUNDING REDUCES THE RISK OF ELECTRIC SHOCK BY PROVIDING A PATH OF LOW RESISTANCE FOR THE ELECTRIC CURRENT. THIS APPLIANCE IS EQUIPPED WITH A CORD HAVING A GROUNDING WIRE WITH A GROUNDING PLUG. THE PLUG MUST BE PLUGGED INTO AN OUTLET THAT IS PROPERLY INSTALLED AND GROUNDED IN COMPLIANCE WITH ALL LOCAL CODES AND ORDINANCES.

DANGER – IMPROPER USE OF THE GROUNDING PLUG CAN RESULT IN A RISK OF ELECTRIC SHOCK. CHECK WITH A QUALIFIED ELECTRICIAN OR SERVICE PERSONNEL IF YOU ARE IN DOUBT AS TO WHETHER THE PRODUCT IS PROPERLY GROUNDED. DO NOT MODIFY THE PLUG PROVIDED WITH THE APPLIANCE, IF IT WILL NOT FIT THE OUTLET, HAVE A PROPER OUTLET INSTALLED BY A QUALIFIED ELECTRICIAN. IF REPAIR OR REPLACEMENT OF THE CORD OR PLUG IS NECESSARY, DO NOT CONNECT THE GROUNDING WIRE TO EITHER FLAT BLADE TERMINAL. THE WIRE WITH INSULATION HAVING AN OUTER SURFACE THAT IS GREEN WITH OR WITHOUT YELLOW STRIPES IS THE GROUNDING WIRE. THIS APPLIANCE IS FOR USE ON A NOMINAL, 120-VOLT CIRCUIT AND HAS A GROUNDING PLUG THAT LOOKS LIKE THE PLUG ILLUSTRATED IN SKETCH A OF ATTACHED FIGURE. A TEMPORARY ADAPTER, WHICH LOOKS LIKE THE ADAPTER ILLUSTRATED IN SKETCHES B AND C OF ATTACHED FIGURE, MAY BE USED TO CONNECT THIS PLUG TO A 2-POLE RECEPTACLE AS SHOWN IN SKETCH B OF

ATTACHED FIGURE IF A PROPERLY GROUNDED OUTLET IS NOT AVAILABLE. THE TEMPORARY ADAPTER SHOULD BE USED ONLY UNTIL A PROPERLY GROUNDED OUTLET (SKETCH A OF ATTACHED FIGURE) CAN BE INSTALLED BY A QUALIFIED ELECTRICIAN. THE GREEN RIGID EAR, LUG, OR THE LIKE EXTENDING FROM THE ADAPTER MUST BE CONNECTED TO A PERMANENT GROUND SUCH AS A PROPERLY GROUNDED OUTLET BOX COVER. WHENEVER THE ADAPTER IS USED, IT MUST BE HELD IN PLACE BY THE SCREW.

IF IT IS NECESSARY TO USE AN EXTENSION CORD, USE ONLY A THREE-WIRE EXTENSION CORD THAT HAS A THREE-BLADE GROUNDING PLUG AND A THREE-SLOT RECEPTACLE THAT WILL ACCEPT THE PLUG ON THE APPLIANCE. REPLACE OR REPAIR A DAMAGED CORD.

SKETCH A, B AND C

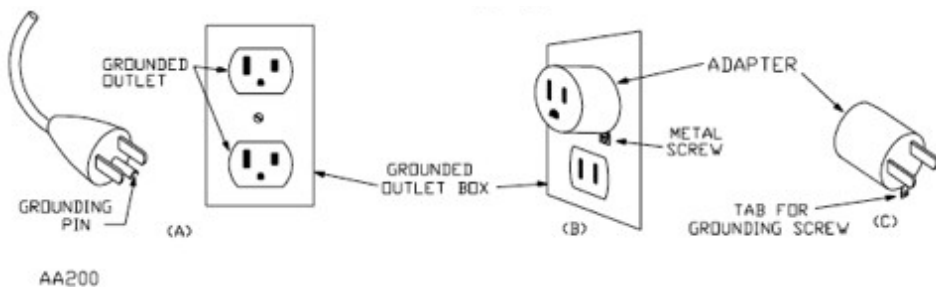

OPERATING INSTRUCTIONS

CONGRATULATIONS ON YOUR PURCHASE OF THE AMBER PORTABLE STONE HEATER. AMBER PORTABLE STONE HEATER HEATS WATER USED TO THOROUGHLY HEAT STONES FOR PROFESSIONAL STONE MASSAGE TREATMENTS.

1. REMOVE WARMER FROM PACKAGE AND PLACE ON A STURDY SURFACE NEAR AN ELECTRICAL OUTLET.
2. **WARNING:** ONLY USE PROPER STONES SUITABLE FOR MASSAGE. PLACE DESIRED AMOUNT OF STONES INTO BOWL. DO NOT OVERFILL WITH STONES.
3. COVER STONES THOROUGHLY WITH WATER FOR EVEN TEMPERATURE DISTRIBUTION. DO NOT OVER FILL. PLACE LID ON BOWL. KEEP BOWL ON A STURDY SURFACE AT ALL TIMES.
4. PLUG IN HEATER AND THE GREEN INDICATOR LIGHT WILL ILLUMINATE AND WILL REMAIN ILLUMINATED UNTIL HEATER IS UNPLUGGED.
5. TO TURN POWER ON, PRESS THE POWER BUTTON LOCATED IN THE CENTER OF THE CONTROL PANEL. RED LIGHTS WILL FLASH IN A ROW UNTIL TEMPERATURE IS REACHED. TO ADJUST TEMPERATURE, PRESS THE UP ARROW TO INCREASE TEMPERATURE AND THE DOWN ARROW TO DECREASE TEMPERATURE. WHEN TEMPERATURE IS ADJUSTED, RED LIGHTS WILL BLINK UNTIL DESIRED TEMPERATURE IS REACHED AND THE RED LIGHTS WILL REMAIN STEADILY LIT.
6. **WARNING!** ALWAYS TEST TEMPERATURE OF STONE BEFORE APPLYING TO CUSTOMER FOR PROPER TEMPERATURE.
7. TO TURN POWER OFF, PRESS POWER BUTTON IN CENTER OF CONTROL PANEL. ALL RED LIGHTS WILL TURN OFF.
8. AFTER USE, UNPLUG HEATER. THE GREEN INDICATOR LIGHT WILL TURN OFF.
9. ONCE UNPLUGGED, DISCARD REMAINING WATER.

HEATS TO 180° F