

Stone Heater

F a c i a l / M a n i c u r e / P e d i c u r e



I N S T R U C T I O N M A N U A L

C 6 5 8 9 T

© Universal Companies, Inc. 2003
All rights reserved for copyright purposes.

No reproductions by print or photocopies are allowed without written permission.



Facial/Manicure/Pedicure Stone Warmer

The Facial/Manicure/Pedicure Stone Warmer is designed to warm stones for a stone massage. It is extremely compact, and its lightweight design makes it an ideal unit for use with smaller stones. It heats to the proper temperature in 15 minutes and maintains a temperature between 120° and 200° F.

The Facial/Manicure/Pedicure Stone Warmer can also be used to:

- ❑ Melt large quantities of paraffin.
- ❑ To heat water for an herbal wrap treatment.
- ❑ To heat towels.

Always take the temperature of the water before using it for any application. Recommended temperatures for treatments are as follows:

Stone Therapy	110° – 120° F
Paraffin Melting	135° F
Herbal Wraps	145° F
Towels	125° - 135°

Note: These temperatures are only recommendations. ***Do not operate without water or paraffin.*** Always operate the unit with at least a half-inch of water covering the bottom of the tank.

Parts/Accessories



Operations/Precautions

Warning: Electric shock, fire, or burn injuries can occur if this equipment is not used properly. To reduce risk of injury:

- ❑ Plug only into a 3-hole grounded electrical outlet.
- ❑ Use only on flat, level surfaces.
- ❑ Unplug the Facial/Manicure/Pedicure Stone Warmer and let it cool before cleaning or moving it.
- ❑ Unplug the Facial/Manicure/Pedicure Stone Warmer when not in use.
- ❑ Do not immerse in water.
- ❑ Do not spray with water or cleaning agent.
- ❑ Handle hot water carefully.
- ❑ Do not operate the unit unattended.
- ❑ Do not operate the Facial/Manicure/Pedicure Stone Warmer without water in the unit.
- ❑ Always unplug the unit when not in use.
- ❑ Do not allow children to operate the Facial/Manicure/Pedicure Stone Warmer.
- ❑ The Facial/Manicure/Pedicure Stone Warmer should be used only for its intended purpose as described in this manual.
- ❑ Do not operate the Facial/Manicure/Pedicure Stone Warmer if:
 - It has a damaged cord or plug.
 - If it is not working properly.
 - If it has been dropped or damaged.
 - If it has been dropped into water.
- ❑ If damaged, return the Facial/Manicure/Pedicure Stone Warmer to an authorized service center for examination and repair.
- ❑ Do not use the Facial/Manicure/Pedicure Stone Warmer outdoors.

Instructions for Use

1. Place the Facial/Manicure/Pedicure Stone Warmer on a flat, stable surface.
2. To warm stones for a stone massage:
 - Arrange the stones in the bottom of the Facial/Manicure/Pedicure Stone Warmer.
 - Pour enough water in the Facial/Manicure/Pedicure Stone Warmer to fully submerge the stones. They should be covered with approximately 1” of water.

Do not overfill the unit. ***Do not operate this unit without water in the unit.***

3. Place the cover on the Facial/Manicure/Pedicure Stone Warmer.
4. Plug the Facial/Manicure/Pedicure Stone Warmer into a 3-hole GFIC outlet.
5. To preheat the water and stones, turn the Control Dial to High. Leave the unit at that temperature for 15 minutes.

6. After 15 minutes, turn the Control Dial back to the midpoint. This will maintain the water and stones in the Spa Heating System at the proper temperature throughout the day. (approximately 125° F) Use a thermometer to measure the temperature of the water. Move the knob clockwise to increase the temperature or counterclockwise to decrease the temperature.
7. Check the level of the water in the unit several times a day. Make sure the water doesn't completely evaporate. ***Do not operate this unit without water.***
8. At the end of the day, unplug the Facial/Manicure/Pedicure Stone Warmer and proceed with cleaning instructions.

WARNING: BURN HAZARD

If the Facial/Manicure/Pedicure Stone Warmer is left at the highest temperature for longer than 15 minutes, the water may reach temperatures hot enough to burn the skin. Do not use your bare hands to remove stones from the water. Use rubber gloves, a large spoon, or tongs.

Steam can cause burns. Be careful when you remove the lid from the Facial/Manicure/Pedicure Stone Warmer as steam may be released.

WARNING: DRIP HAZARD

Water will condense on the lid of the Facial/Manicure/Pedicure Stone Warmer. When you remove the lid, be careful to avoid drips.

Cleaning

To maintain the appearance of the Facial/Manicure/Pedicure Stone Warmer, and increase its service life, the unit should be cleaned daily.

1. Before cleaning or moving the Facial/Manicure/Pedicure Stone Warmer, unplug the unit and let it cool completely.
2. Carefully empty the water bath from the unit.
3. Wipe the entire interior with a clean, damp cloth.
4. To avoid damaging the finish, do not use abrasive materials, scratching cleansers, or scouring pads to clean water deposits from the unit.
5. If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleansing. Chemical residue could damage the Facial/Manicure/Pedicure Stone Warmer.

WARNING: ELECTRICAL SHOCK HAZARD

Do not immerse the Facial/Manicure/Pedicure Stone Warmer in water or other liquid. Do not spray with water or cleaning product. Liquid could enter the electrical compartment and cause a short circuit or electrical shock.

6. Unplug the unit when not in use.

Trouble Shooting

If the Facial/Manicure/Pedicure Stone Warmer is not working:

1. Make sure the dial is turned to the to the midpoint position.
2. Check the main power plug to ensure that it is plugged in to a working electrical outlet.
3. If the Facial/Manicure/Pedicure Stone Warmer is still not working, contact our authorized service center.

Specifications

Dimensions

Stainless Steel \ Tank

- ❑ 13” long x 9.5” wide x 2” deep

Outside Dimensions

- ❑ 16” long x 11.5” wide x 4” high

Electrical

- ❑ 110 – 120 V
- ❑ 50 – 60 Hz
- ❑ 1000 watts

Warranty Statement

The manufacturer (the “warrantor”) warrants to the original purchaser that this equipment will be free from defects under normal and proper operation for a period of one (1) year from the date of purchase. This warranty covers all parts and labor for that one (1) year period. This warranty shall not apply to any equipment that has been subjected to abuse, misuse, and alteration of any type or to any defect or damage caused by repair, replacement, substitution or use with parts other than parts approved by the manufacturer.

The manufacturer shall not be liable for the loss of use of this equipment, loss of time or business, inconvenience or any other indirect, consequential, special or incidental damages due to defects covered by this warranty or any implied warranty.

To implement this warranty, contact the dealer from whom you purchased the equipment. If necessary, you will be asked to return all, or the appropriate part, of the equipment. If warranted, the repairs will be performed at no charge and the equipment returned to you. Unit owner must prepay all shipping costs when returning items for warranty service.

This limited warranty is the only written or express warranty given by the manufacturer. This warranty gives you specific legal rights but you may also have other rights, which may vary from state to state or province to province.

Authorized Technical Service Center:

Universal Companies, Inc.
18260 Oak Park Drive
Abingdon, VA 24210
Phone: 1-800-558-5571
Fax: 1-800-237-7199
E-Mail: info@universalcompanies.com

