



# User Manual

## SPECIFICATIONS

- 1 Powerful Brushless High-Torque Motor with Quiet Glide Technology
- 2 Removable Battery Release
- 3 Rechargeable Lithium-Ion Battery (2+ Hrs of Use Per Charge)
- 4 Multi-Speed Settings for Optimal Pressure
- 5 Cordless and Lightweight (2.5Lbs)  
\*Includes AC wall charger
- 6 ON / OFF Power Switch
- 7 Interchangeable Applicators (x6 - see below)

### Vibration Frequency:

5-40HZ

**Weight:** 2.5 lbs/1.1kg

**Charge:** 110-240V 50/60HZ - 5A - 26VDC-1A



## APPLICATORS

### The **BULLET**



#### TARGET AREAS

TRIGGER POINTS  
PERSISTENT KNOTS  
DEEP TISSUE  
MERIDIANS  
PALMS  
SOLES OF FEET



### The **HAMMER**



#### TARGET AREAS

CHEST  
HIPS  
THIGHS  
LEGS  
LARGER MUSCLES  
DENSE MUSCLES



### The **FORK**



#### TARGET AREAS

UPPER NECK  
SHOULDERS  
SPINAL COLUMN  
CALF MUSCLES  
ANKLES  
BOTTOM OF FEET



### The **SPADE**



#### TARGET AREAS

PELVIS  
SHOULDER BLADES  
CALVES  
HARD TO REACH AREAS  
DEEP TISSUE



### The **ROUND**



#### TARGET AREAS

FULL BODY  
SUITABLE FOR WARM-UP  
JOINTS  
SENSITIVE MUSCLES



### The **SPIRAL**



#### TARGET AREAS

TRIGGER POINTS  
PERSISTENT KNOTS  
DEEP TISSUE  
INSIDE OF ELBOWS  
INSIDE OF KNEES



# USAGE INSTRUCTIONS

PLEASE READ PRIOR TO USE

## CHARGING

- Fully charge battery for up to six hours before first use either inserted into or detached from the device.
- To charge, connect the DC end of the supplied 24V adapter to the battery 's charging port and plug AC side cable into wall outlet.
- LED band on battery lights pulsates to show battery level and indicate active charging.
- With battery attached, LED lights on unit flash to show battery level and indicate active charging.
- Full charge is indicated when all LED lights stop flashing and remain fully illuminated.
- Battery may be recharged at any time and at any battery level.
- It is not recommended to fully deplete the battery to the red LED level.
- The average run-time is 2+ hours depending on speed level and pressure applied during use.

## CONTROLS

Massage Speed  
Display

Battery  
Display

Increase Speed

Decrease Speed

Power Key



### 30 Levels

1-6: Light Massage    7-12: Medium Massage    13-18: Muscle Awakening  
19-24: Fascia Relaxation    25-30: Professional Mode

# USAGE INSTRUCTIONS *continued*

## OPERATING

- Align and attach battery into base of unit and ensure it is securely locked in place.
- Power device on by moving the power switch on the bottom of the battery to the ON position, Power device off by moving the power switch to the OFF position.
- With power switch in ON position, press the red power button once to activate the device. Pressing the power button again will deactivate the device. The blue LED lights will indicate the corresponding power level.
- With unit switched off, fully insert applicator by pressing in. Remove by pulling it out.
- Massage desired body part at the desired speed applying pressure as needed.
- To remove the battery, lightly press the battery release button with thumb. Firmly pull downwards on the battery handle with the other hand.

## MAINTENANCE, CLEANING & STORAGE

- Use a slightly damp towel to clean device and dry with a soft cloth.
- For storage or travel, remove battery and store in supplied carton.

## DISCLAIMER

### WARNINGS & CAUTION

- Do not immerse in water. Keep away from liquids or heat sources. Keep ventilation ports free from dust and debris.
- Do not remove screws or attempt to disassemble.
- Do not operate continuously for more than one hour Allow device to rest for 30 minutes before re-using.
- Unplug the charger from device battery after charging or prior to use.
- For adult use only. Do not use if injured. Consult your doctor before using this product.

## SAFETY INSTRUCTIONS

**TO REDUCE RISKS OF ELECTRIC SHOCK, FIRE, AND PERSONAL INJURY, THIS PRODUCT MUST BE USED IN ACCORDANCE WITH THE FOLLOWING INSTRUCTIONS:**

- For adult use only.
- Use only on a dry, clean surface of the body (over clothing) by lightly pressing and moving across the body for approximately 60 seconds per region.
- Use the Percussion Massager only on soft tissue as desired without producing pain or discomfort. Do not use on head or any hard or bony area of the body.

## SAFETY INSTRUCTIONS *continued*

- Use only the applicators that provide the best desired effect.
- Bruising can occur regardless of control setting or pressure applied. Check treated areas frequently and immediately stop at first sign of pain or discomfort.
- Keep fingers and hair away from the shaft and applicator as pinching may occur.
- Do not place any objects over the ventilation holes of the Percussion Massager
- Do not immerse in water or allow water to enter the ventilation holes of the Percussion Massager
- Do not drop or mishandle the Percussion Massager.
- Only recharge using the supplied 26V DC Percussion Massager charger
- Carefully examine device and battery before each use
- Do not tamper with or alter the Percussion Massager in any way
- Never leave the Percussion Massager operating or charging unattended.

## CONTRA-INDICATIONS

**PLEASE DO NOT USE THE PERCUSSION MASSAGER WITHOUT FIRST OBTAINING APPROVAL FROM YOUR DOCTOR IF ANY OF THE FOLLOWING APPLY:**

Pregnancy; diabetes with complications such as neuropathy or retinal damage; installation of pace-makers; recent surgery, epilepsy or migraines; herniated disks; spondylolisthesis or spondylosis; recent joint replacements or IUD's; metal pins or plates; or any concerns about your physical health. Frail individuals and children should be accompanied by an adult when using the Percussion Massager. These contra-indications do not mean that you are not able to use the Percussion Massager but we advise you to consult a doctor first.

## WARRANTY

**IF WITHIN ONE YEAR FROM THE DATE OF PURCHASE, THIS PRODUCT FAILS DUE TO A DEFECT IN MATERIALS OR WORKMANSHIP MOOR SPA WILL EITHER REPLACE OR REPAIR THE PRODUCT FREE OF CHARGE.**

**THIS WARRANTY EXCLUDES:**

- a) damage caused by accident, abuse, mishandling, or transport;
- b) units subjected to unauthorized repair;
- c) units not used in accordance with instructions;
- d) damage exceeding the cost of the product;
- e) deterioration of the delivered product resulting from abnormal storage and/or safeguarding conditions on the client's premises;
- f) failure to provide the dated proof of purchase

**NOTE:** Some states and countries do not allow a limitation of damages, so the limitations listed may not apply to you. This warranty guarantees specific legal rights, but other rights may vary from country to country end from state to state.

# MOOR SPA®

7-13680 Bridgeport Rd, Richmond BC V6V 1V3

Orders: 1-800-666-7987 Phone: (604) 279-5561 Fax: (604) 279-5541

Email: [info@moorspa.com](mailto:info@moorspa.com) Website: [www.moorspa.com](http://www.moorspa.com)



@moorspanatural

Copyright © 2021 Printed in Canada