



**SATIN  
SMOOTH®**

**Professional  
Double Wax Warmer  
Model SSW3C  
For Professional Use Only**



For your safety and continued enjoyment  
of this product, always read the instruction  
book carefully before using.

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially if children are present, basic safety precautions should always be taken, including the following:

**READ ALL INSTRUCTIONS  
BEFORE USING  
DO NOT IMMERSE IN  
WATER**

**DANGER — To reduce the risk of electric shock:**

1. Always unplug this warmer immediately after using.
2. Never use while bathing.
3. Never place or store warmer where it can fall or be pulled into a tub or sink.
4. Do not place or drop into water or other liquid.
5. Never reach for warmer that has fallen into water; unplug immediately.

## **WARNING —**

To reduce the risk of burns, electrocution, fire or injury to persons:

1. Never leave the warmer unattended when plugged in.
2. This appliance should not be used by, on, or near children or invalids, especially those with diabetes.
3. Use this warmer only for its intended use as described in this manual. Do not use attachments not recommended by Satin Smooth®.
4. Never operate this warmer if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the warmer to a service center for examination and repair.
5. Keep the cord away from hot or heated surfaces. Do not wrap the cord around the warmer. This could cause the cord to wear prematurely and rupture.
6. Never block the air openings of the warmer, or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Do not use an extension cord with this appliance.
11. For best results, use Satin Smooth® Wax.
12. Do not apply hot wax near eyes or other heat-sensitive areas, or to any skin injury, eruption, or surface growth.
13. Do not touch hot surfaces. Allow this appliance to cool before handling, cleaning or storing.
14. Use this appliance on a level surface.
15. Do not let cord hang over edge of table or counter where it can be pulled on by children or tripped over unintentionally.
16. Unplug from outlet when not in use. Allow to cool before handling, cleaning or storing the appliance.
17. The physiological effects of this appliance have not been investigated by ETL.
18. Before using, test hot wax on a small area of skin for warmth and possible skin reactions. If you are susceptible to allergic reactions or if you have circulatory problems, it is recommended that you consult a physician before using this warmer.

**SAVE THESE  
INSTRUCTIONS**

# OPERATING INSTRUCTIONS

This warmer is intended for Professional use only. Use an alternating current (60 Hertz) only. The warmer is designed to operate at 120 volts AC and is CETL approved.

This warmer has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## DIRECTIONS FOR USE

Read and follow complete directions before use. Save these instructions in a safe place for future reference.

1. Remove the Satin Smooth® wax warmer from the carton, and discard all packing materials. **DO NOT TURN WARMER ON AT THIS TIME.**
2. Remove and discard packaging material from container.
3. Remove wax container lid before placing into warmer.
4. Place wax container into the warmer well being used.  
**(IMPORTANT: DO NOT POUR CONTENTS OF CONTAINER INTO WARMER.)**
5. Plug line cord into the power source. Use 120/125V outlet only.

6. Press the switch of the selected warmer well to the "ON" position.
7. Turn the dial to the maximum setting "HOT". This will produce a rapid heat-up and melt the wax quickly. Once wax is melted, turn the dial down to the "READY" setting. Allow 20-30 minutes for the wax to stabilize to a usable temperature.
8. Stir the wax regularly and thoroughly during the heat-up period, using a wooden spatula. The wax should have the consistency of a thick liquid.
9. Remember to stir the wax frequently to ensure consistent viscosity of the wax. The timing may vary according to the ambient temperature, especially if the wax initially is particularly cold. A partially used pot of wax may take a shorter time to heat up.

## WAXING

1. For best results, hair should be at least 3-4 mm long. Do not use cream or body lotion before waxing.
2. Ensure that skin is clean and dry. Skin may be cleaned using Satin Smooth® Skin Cleanser. **ALWAYS TEST A SMALL AMOUNT OF WAX FOR TEMPERATURE ON THE INSIDE OF YOUR WRIST BEFORE APPLICATION BEGINS.**
3. USE VERY LITTLE WAX EACH TIME. Scrape off the excess on the edge of the pot, leaving only a thin film on the spatula.
4. Apply the wax with spatula tilted at an angle, spreading

very thinly over an area slightly less than the size of the wax strip being used.

5. When waxing legs, use spatula to spread the wax thinly over the area to be treated, applying in the direction of hair growth. Only apply the wax to one small area at a time.
6. Hair on the bikini line or under the arms is stronger and thicker. Trim the hair with scissors before applying the wax. TAKE CARE NOT TO GO TOO CLOSE TO THE MORE SENSITIVE AREAS.
7. Treat smaller areas with less wax than on the legs and reduce the size of the strips to suit the size of the area being treated.
8. Place one strip over the waxed area and press down firmly with the palm of your hand, exerting an even pressure over the whole strip. Hold the skin taut and peel the strip sharply away in one quick movement, against the direction of hair growth.
9. Should any hair remain, reapply the same wax-coated strip and remove as described in Step #8. Repeat until the entire area being treated is free from hair. If some wax remains on the skin, remove using Satin Smooth® Wax Residue Remover.
10. Having finished a section [e.g., half a leg], apply Satin Smooth® Skin Nourisher evenly over the area and smooth in.

To obtain best results, once a regular waxing routine has been established with your client, wax applications should be repeated every 4-6 weeks, depending on the rate of hair

growth

**PLEASE NOTE THAT THE WAX SHOULD BE STIRRED REGULARLY AND THOROUGHLY DURING HEAT-UP PROCESS AND AGAIN BEFORE USE. THIS IS TO ENSURE THAT THE TEMPERATURE AND CONSISTENCY OF THE WAX ARE EVEN THROUGHOUT.**

Do not use the wax on sensitive, inflamed or damaged skin. Also, if a client suffers from any blood disorders (e.g., diabetes or a dermatological condition of varicose veins), it is strongly recommended that a doctor be consulted before waxing treatment.

## **AFTER WAXING**

After waxing, turn the warmer switch to the "OFF" position and unplug from the power source. Remove the wax pot from the warmer and clean both the heater and the outer surface of the wax container with Satin Smooth® Wax Residue Remover. The partially used wax container can be stored in the warmer, with the warming unit cover in place to protect from dust and foreign elements.

## **USER MAINTENANCE**

Your warmer is virtually maintenance-free. No lubrication is needed. Proper maintenance will assure dependable service and a clean appearance.

1. Every evening, disconnect warmer from power source.
2. If cleaning becomes necessary, disconnect the warmer from the power source and wipe exterior with a damp cloth or



Satin Smooth® Wax Residue Remover.

3. If any abnormal conditions occur, unplug the warmer, allow to cool and return it to the manufacturer or to an authorized service representative for repair.

### **STORAGE:**

Allow wax warmer to cool. Handle cord carefully for a longer life; avoid jerking or straining at plug connection. Place wax warmer out of reach of children in a safe dry location.

**WARNING: IF YOU  
THINK THE POWER IS OFF  
WHEN THE SWITCH IS OFF,  
YOU'RE WRONG.**

**KEEP AWAY FROM WATER**

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG SMALL  
APPLIANCES**

# THANK YOU

for choosing the Satin Smooth® Professional Wax Warmer. Used in conjunction with Satin Smooth® Wax, this product will make your clients' skin feel silky smooth. Satin Smooth® Professional Waxing System is the complete answer to hair removal.

This warmer was built with advanced engineering and thermostatically controlled heating elements, delivering the highest quality and most consistent results. Its unique and upscale design complements any professional environment.

You can be assured that the Satin Smooth® Warmer will provide you with long and dependable service, allowing you to concentrate on your clients' needs.

## IN USA

### LIMITED ONE YEAR WARRANTY

Satin Smooth® will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase, if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and

should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture. Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 12 month duration of this written, limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

In no event shall Satin Smooth® be liable for any special, incidental, or consequential damages for breach of this or any other warranty, expressed or implied, whatsoever. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

## **IN CANADA**

### **FIFTEEN MONTHS LIMITED WARRANTY**

Satin Smooth® offers the following warranty on your professional Satin Smooth® warmer, if it is defective in workmanship or materials. Keep your sales slip. This is your proof of purchase and your guarantee. This guarantee is not valid in case of abuse, misuse, alterations or repairs done by unauthorized persons.

### **3 MONTHS REPLACEMENT**

Should your professional warmer possess a defect within the first **THREE MONTHS** from the date of purchase, it will be exchanged at no charge. To obtain service within the first three months, return the defective product **PREPAID** to the service center listed below, together with your purchase receipt and \$10.00 for postage.

### **12 MONTHS EXTENDED REPLACEMENT**

Should a defect appear between the **FOURTH** and **FIFTEENTH** month from your date of purchase, your professional warmer will be exchanged for a fee of \$20.00. To obtain service, return the defective product **PREPAID** to the service center listed below, together with your purchase receipt and a cheque for \$30.00 (\$20.00 handling and \$10.00 postage).

Your defective warmer, which is covered by this warranty, must be accompanied by:

- 1) your **DATED PURCHASE RECEIPT**;
- 2) a precise description of the defect; and,
- 3) your complete return address and daytime phone number, for daytime courier delivery (9 a.m. to 5 p.m.).

Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 15 month duration of this written, limited warranty.

**IN CANADA**

**SERVICE CENTER:**

**DANNYCO TRADING (CANADA) LTD.**

6445 Côte de Liesse

Montréal, Québec H4T 1S9

Customer Service : 1 800 363 0707

or 514-345-0949 (Montréal)

**IN USA**

**SERVICE CENTER:**

**BaByliss®PRO**

Service Department

7475 N.Glen Harbor Blvd.

Glendale, AZ85307