



## Spa Equip Wax Warmer Instructions

### Important Warnings

### Cleaning & Care:

- The appliance should be cleaned with a liquid cleaner specifically formatted for equipment wax removal.
- Do not use any other solvents or cleaning products as they could damage the heater and produce toxic fumes when the appliance is operating.
- Wax spilled on the exterior of the appliance should be removed as soon as possible. If the wax is allowed to harden, removal is more difficult. It is especially important to keep the knob(s) free from wax.

### **CAUTION: Failure to follow these safeguards may result in fire or electric shock.**

- Read these instructions carefully before using the appliance.
- This appliance is intended for professional use only.
- Do not use the appliance for any other purpose other than described in these instructions.
- Do not use attachments or devices with appliance not recommended by the manufacturer.
- Do not leave appliance unattended; turn off when not in use.
- Use only on a flat, solid, non-tipping surface.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local voltage.
- Always unplug the warmer when not in use.

- Fire and/or electric shock is still possible if the appliance is plugged in and the power switch/s are off. Make sure that the appliance is connected to a grounded power source.
- DO NOT use this appliance near bathtubs, showers, basins, or other vessels containing water. If this appliance falls into water, unplug immediately. DO NOT reach into the water.
- Once depilatory wax is melted, it may be maintained at a lower temperature. Please refer to the depilatory wax manufacturer's specific instructions for use.
- To keep your wax warmer clean, wax collars and wax savers may be purchased separately.
- To prevent burning, do not touch appliance when in use.
- Always check wax temperature before use. If wax is too hot, it can cause burns. Always test wax products on small area of skin before using on a client.
- If wax begins to smoke, check the settings and adjust as needed.
- Unplug when not in use. Allow to cool before handling, cleaning, or storing the appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used. Do not operate where oxygen is being administered.

#### **INSTRUCTIONS FOR USE:**

- It is recommended that the appliance be switched on approximately one hour prior to service to ensure that the wax has reached the correct temperature and consistency.
- When the appliance is turned on for the first time, you may notice a slight odor. This should dissipate in a few minutes.
- Use the provided lids when not in service to prevent contamination.
- Loose or bead wax can be used in the provided container. Do not put directly in the well of the warmer.
- Ensure any pre-packaged containers are suitable for use in a wax heater and will not melt or break.
- If using pre-packaged wax in cans or jars and the well is larger than the container, use a wax collar or wax saver to maintain working temperature.
- Plug in the appliances and move the power switch to "on". The switch indicator light will turn on to confirm that the appliance is operative.
- To increase temperature, turn the control knob clockwise. To reduce temperature, turn the control knob counter-clockwise.