







Operating Manual forH2603 Rotary Brush Beauty Instrument

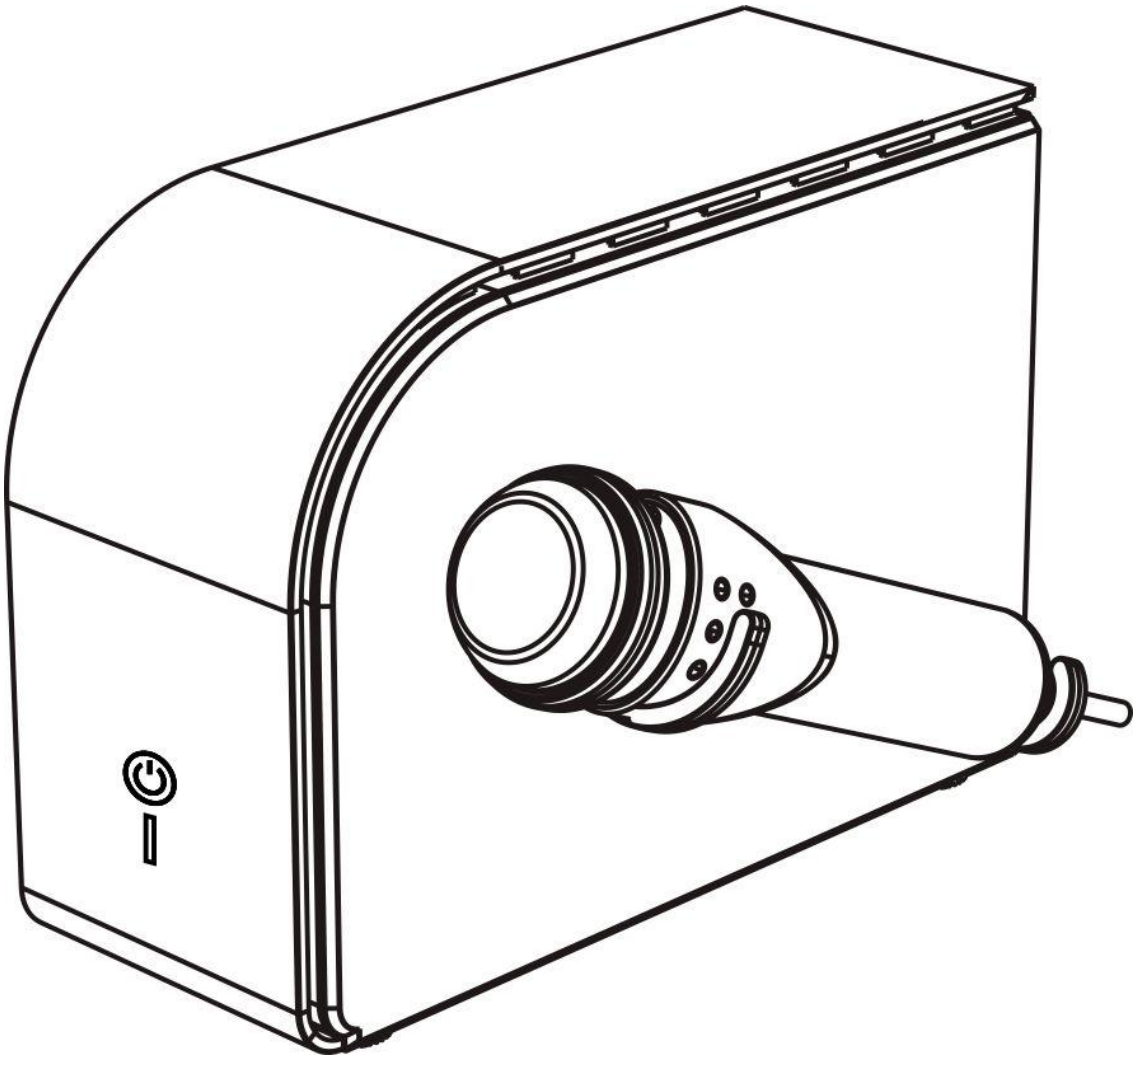


Working Principle of Rotary Brush:

Using the energy to push the brush twirl for cleaning and massage skin. The function of cleaning can be wiped dirt in the surface skin, oil in the face, leftover of cosmetics, died horniness off. While the function of massage can be make skin smooth and tender.

Packing List

Name	Graphic	Quantity
Host Machine		1 Round
Power cable		1 Piece
Brush handle		1 Piece
Crystallized small brush		1 Piece
Fuzz small brush		1 Piece
Crystallized big brush		1 Piece
EVA big brush		1 Piece
Fuzz big brush		1 Piece
shag big brush		1 Piece
Accessory shelf		1 Set
Instruction Manual		1 Copy


Host Machine

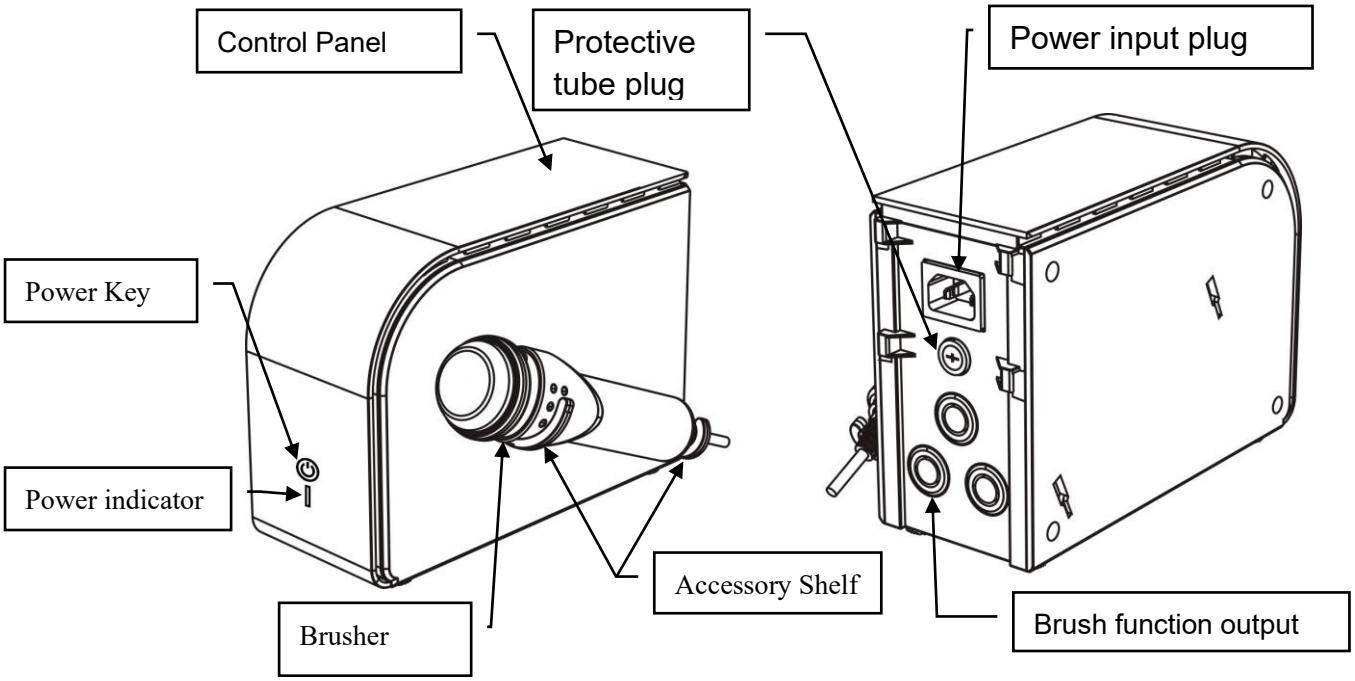

Accessories


Brush handle：

1. Brush head
2. Brush handle
3. Brush flexible wire plug
4. Brush flexible wire

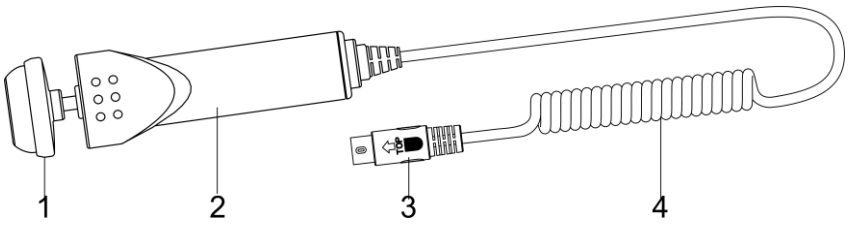


Brushes：

1. Crystallized small brush: Clean small area horny and callus of hands and feet.
2. Fuzz small brush: Clean and massage small area skin of face etc..
3. Crystallized big brush: Clean large area horny and callus of hands and feet.
4. EVA big brush: Clean and massage large area skin of face etc.

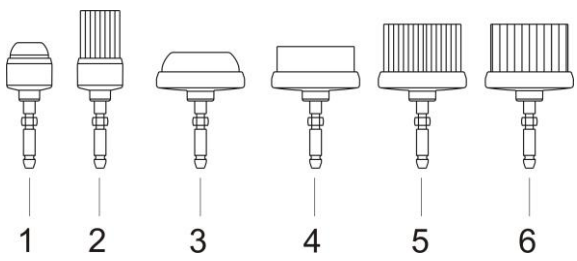

5. Fuzz big brush: Clean and massage large area skin of face etc.
6. Shag big brush: Clean and massage large area skin of face and other position.

Control Panel

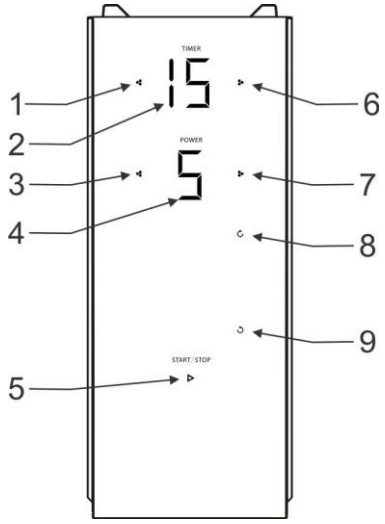


1. Time decrease key
2. Time display
3. Energy decrease key
4. Energy display
5. Start/Pause
6. Time increase key
7. Energy increase key
8. clockwise rotary icon
9. inverse hour rotary icon

Operator instruction

1. 安装附件架,摆放附件。Assemble accessory shelf

Plug accessory shelf ,handpiece cable through the below shelf ,then set the accessories on the shelf


将附件架按箭头指示插紧。将手柄线按箭头 1 方向穿过下方的附件架，然后按箭头 2 方向将附件放到上方的附件架。

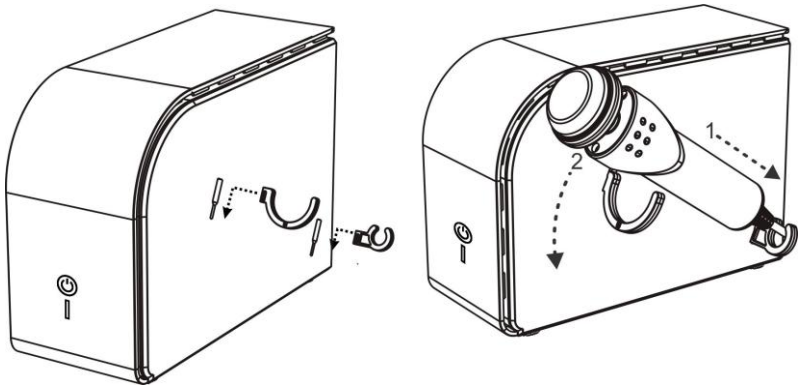

2. Connect cable

Connect the power cable with host machine;

The flexible cables of brush handle should be corresponding with outputs at back of host machine.



1. Press “ ” power key, “ ” blue indicator light up, host machine become stand by status 蓝色指示灯亮，主机进入待机状态。


Stand by status would be shown:

Time window is “15”;

Energy window is “5”;

Clockwise working, icon is green

Start key orange。

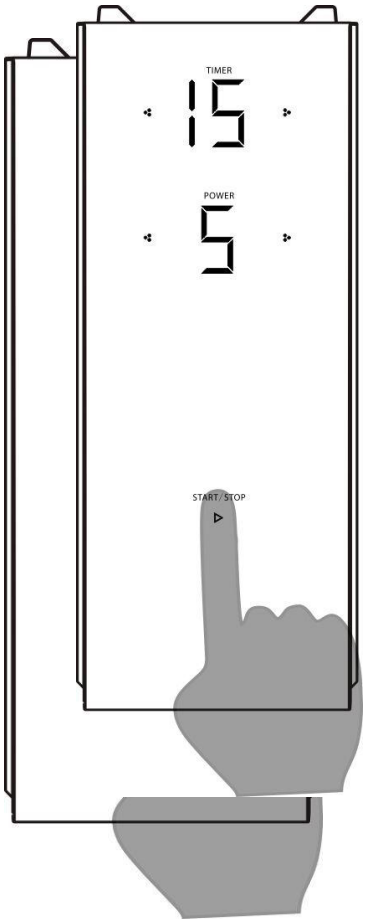

3. Function adjustable

In stand by station, press icon , when the light became green, then the function is good to work , when the light is orange, then the function is pause. One function indicator green , then other would be orange. (Time adjust and Energy indicate icon would not change)

Time adjust: Press “TIMER” increase key and time decrease key to adjust host machine working time , time adjust range 1～30 minutes。

Energy adjust: Press “POWER” increase key decrease key to adjust energy output, energy output range is 1～9 level。

Choose the rotation direction of the brusher: press the to select the rotating state of the brusher. light up is clockwise; light up is anticlockwise

If change the brusher working status when it is working , host machine would enter protected state, when brusher stop ,then switch automatically


若在刷头工作的状态下切换旋转方向，主机会进入保护状态，待刷头停止转动后，再自动进行切换。

Start and Pause: In stand by or after adjust, press “ ” to start or pause host machine;

Host machine working ,then start key is ; Host machine pause or stany by ,start key is orange

Change brush:

1. Unload brush: Hold the brush handle in one hand, and hold the plastic part of the brush by another hand, then pull in

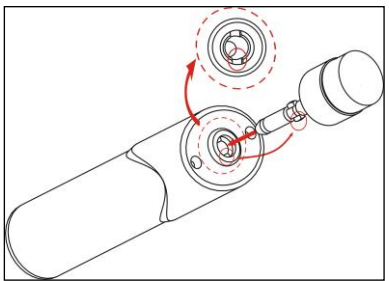

opposite direction, and then unload the brush easily by hearing “click click” sound.

2. Setting up brush: Hold the brush handle in one hand, and hold the plastic part of the brush by another hand, then rotate and push in opposite direction, and then set up the brush easily by hearing “Ka” sound.
3. For unload or set up brush, only can be push or pull the plastic part by hand, but not to do this to the material of brush (e.g. EVA or fuzz etc.). Otherwise will make bad effect to work, even destroy brush.

Cleaning skin:

1. Firstly use sprayer or clean water softens skin.
2. Wipe skin care production (e.g. cleaning milk or cleaning jelly etc.)equably on skin, according to the characteristic and need to cleaning skin area to choose suitable brush and set up on the brush handle, dip a little water on brush and move it to needed to cleaning skin, turn on host machine then can be come to cleaning and massage.

3. Keep skin moist during the whole cleaning operation.

After cleaning the brusher, use a towel or facial tissue to remove the skin care products and so on. Then clean the skin with a clean wet towel or a moist Cleanser

NOTICE

1. Before using this brush to work, please check if brush was insert in the brush handle firstly.
2. Please turn down the rotary speed of brush before touching customers’ skin; when touch customers’ skin, it must be slightly to avoid causing customer feel uncomfortable.
3. When use brush to cleaning or massaging skin, please use thickness skin care products and turn down rotary speed of brush, in case of skin care products splashed by fast rotary speed and causing waste and pollution.
4. If it is needed to change brush during skin caring, please stop outputting of the host machine. And wait brush stop to unload and setting up.
5. Please clean and sterilize all the used brushes after finishing work, and keep them in the dry place.
6. It cannot clean brush handle by water but wipe it clean by towel and keep it in the dry place.

1.

Daily Maintenance:

1. Please clean and sterilize all the used brushes after finish working.
2. The instrument should be wiped with dry dishcloth, DO NOT wet in water.
3. Please switch on the main power after using of instrument every day, and takes away the plug when finishes a working day.
4. The instrument should NOT be placed in sunlight, raining, moisture, dust and smoke accumulated area.

Warning :

1. Do not use it for a very long time, otherwise it will cause brush handle very hot.
2. Do not change brush during it is working.

3. Do not make brush
4. Do not use crystallized brush which has abrasion.
5. During working, the cables between accessory and host machine shall not be drawn excessively.
6. Broken mains cord shall be replaced with specific cord or specific assembly from its manufacturer or maintenance departments. It is strongly recommended that the accessory from original factory shall be used.
7. The host machine shall be turned off and the attaching plug shall be pulled out if any abnormal condition occurs. You shall ask the agency or specific serviceman to check and maintain. The main case is not allowed to be opened.
8. It is forbidden to place or use it at bathroom of wet places.
9. It is forbidden to put it together with inflammable and explosive objects.

一般故障对照表：

S/N	Troubles	Causes	Remedies	Settlements
1	Press “” without response ,indicator do not light up	The host machine has not been electrified	1. To check the protective tube of power supply. 2. To check the flexible tube of power supply is well plugged or not.	1. To change the protective tube if necessary. 2. To plug the cord of power supply again.
2	Press“”indicator light up ，host machine moving ,but light twinkle, machine could not work 移动主机时，电源灯时亮时灭，无法正常开机	Power input does not touch well	1. To check the plug of the flexible tube of power supply to see if it is connected well. 2. Whether the flexible tube of power supply is broken or not.	1. Poor connection: to plug the connecting plug between the host machine and electric outlet again. 2. If the flexible tube of power supply is broken, related parts shall be changed in specific maintenance center nearby.
3	The host machine starts output, brush handle does not work.	1. The cable of brush does not plug well. 2. The cable of brush is broken.	1. To check the cable plug if it is connected well. 2. Whether the cable of brush handle is broken or not.	1. Re-plug the cable plug on the back of the host machine. 2. Go to the appointed specific maintenance center to change broken brush cable.
4	Rotary brush loose	Brush does not set up well	To check whether the brush was inserted well in the brush handle.	Take the plug out and re-plug it tight; If re-plug does not work, go to the appointed specific maintenance center to

				change related accessories.

To change protective tube:

Disconnect the power of the host machine first. The cover of protective tube shall be unscrewed by a screwdriver. Check the protective tube inside the protective tube case near to the power supply socket of the host machine, and change it with a new 250V/4A protective tube if it is damaged.

Specification, Model & Technical Data:

Product	Beauty Instrument
Model No	**H2603**
Functions	Rotary Brush
Nominal Working Voltage	**ac. 85～265V**
Nominal Working Frequency	50/60Hz
Rated Power	20 W
Dimension (L*W*H)	mm
Net Weight	Kg

If the picture on owner manual is different from the current product , then pls subject to current product. Our company will keep our right to improve .Pls forgive that the improvement would not notify if it is not affect normal use