


INSTRUCTIONS FOR ASSEMBLING 1050 NEW STAND

ASSEMBLY INSTRUCTIONS

- 1) INSTALL CASTERS TO BASE PUSH IN HOLES IN BASE.
- 2) INSTALL ADAPTER INTO HOLE ON TOP OF BASE.
- 3) INSTALL POLE INTO ADAPTER IN BASE.
- 4) PUT LOCK WASHER ON HEX BOLT THEN INSTALL BOLT INTO CAST BASE. PLACE SPACER OVER BOLT AND SLIDE SPACER TO MEET CAST BASE. NOW THREAD INTO POLE ASSY. TIGHTEN HEX BOLT SECURELY.

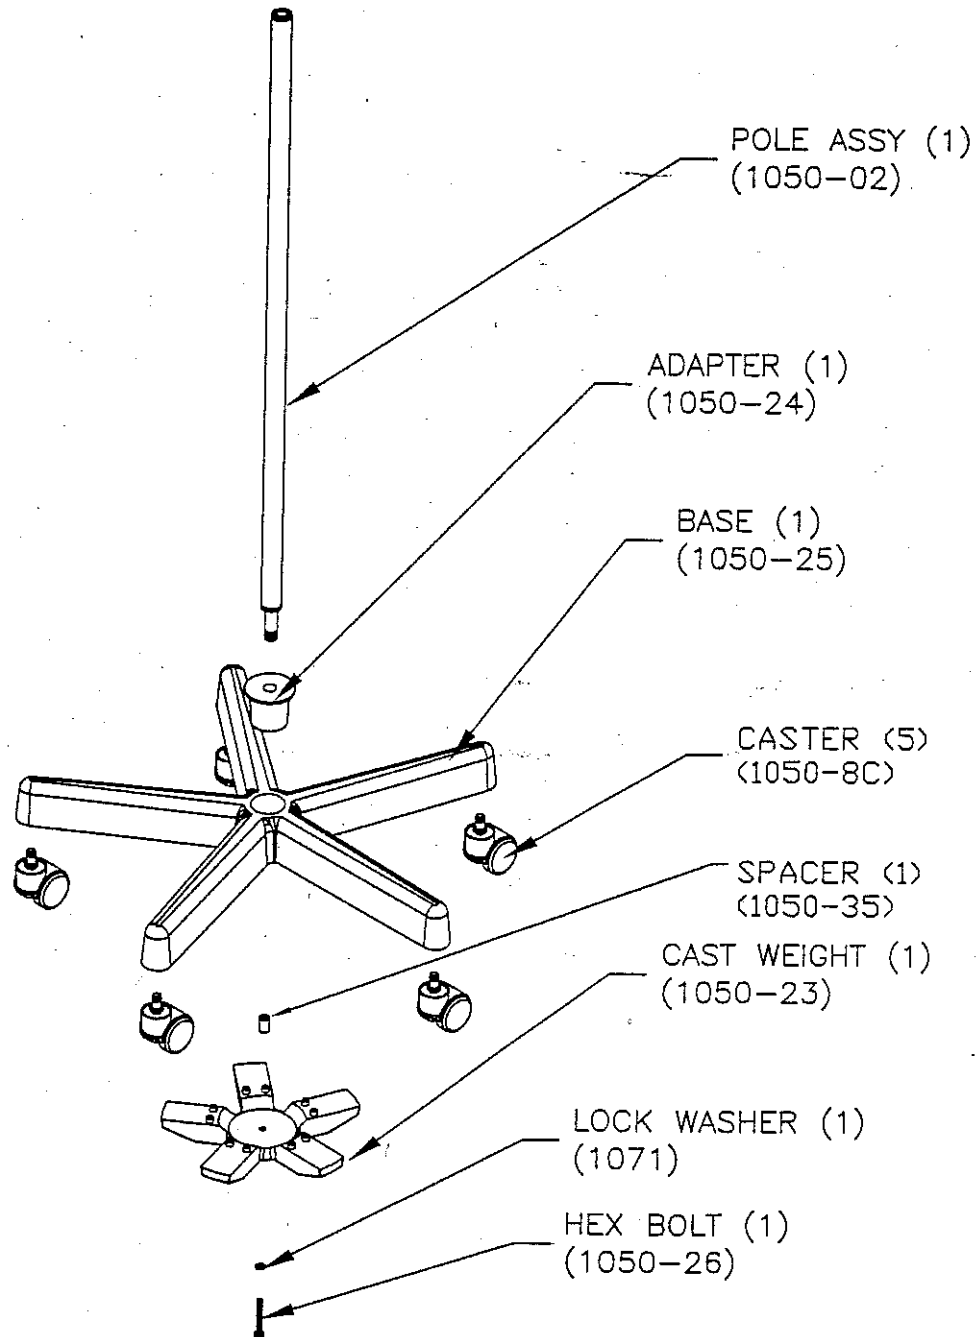

™ Trade Mark

Dazor Manufacturing Corp.

St. Louis, MO.

Form 1050-27