


SPECIFICATIONS

Modèle / Model	Spa-Slim
Tension secteur / Mains voltage	110Vac - 60Hz
Puissance max. / Max. power	330 W
Ajustement de température / Temperature range ...	30°C... 60°C / 86°F... 140°F
Réglage de minuterie / Timer range	5... 95 min
Matériaux utilisés.....	Nylon recouvert d'une couche de polyuréthane. Éléments chauffants en fibre de carbone.
Materials used.....	Nylon covered with polyurethane. Carbon fiber heater elements.
Zones de chauffage.....	3, sous contrôle numérique
Heating zones.....	3, under digital control
Dimensions	187 x 92 cm / 72 x 36.25 po.
Poids net / Net Weight	8.3kg / 18 lb
Garantie / Warranty.....	1 an / 1 year
Approbations / Approvals	c-ETL-us, CE

SPA-SLIM

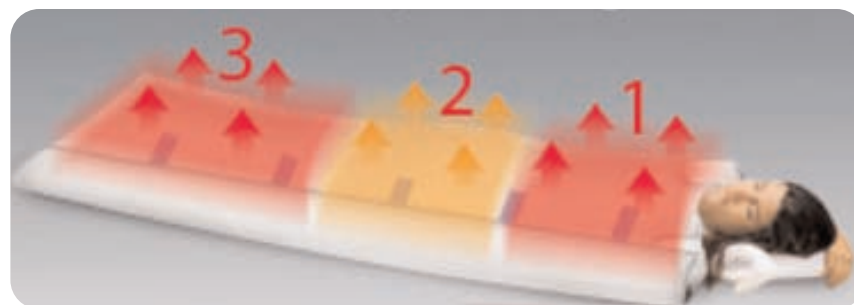

Headquarters | Siège Social

11 970 boul. Albert-Hudon
Montréal, Québec
Canada
H1G 3K3
T: (514) 324-2226
1 (877) 324-2226
F: (514) 324-4889
@: info@equipro-bty.com



American Branch

2425, Main Street
Isle La Motte, VT
USA
05463
T: (802) 928-3588
1 (877) 324-2226
F: (802) 928-4188
@: info@equipro-bty.com



Taiwan Production Plant

Équipro International
Taipei City
Taiwan
International Sales Offices
T: (514) 324-2226
1 (877) 324-2226
F: (514) 324-4889
@: info@equipro-bty.com

INSTRUCTION MANUAL MANUEL D'INSTRUCTIONS

version française en page 11





IMPORTANT INSTRUCTIONS READ BEFORE USE

The SPA-SLIM heating blanket must be used on a horizontal flat surface, like a treatment table, but never on an ergonomic chair or bed (lazy boy).


The blanket might be crumpled during use, damaging the heating elements.

3 ZONE HEATING BLANKET FOR PROFESSIONAL USE

The ease of use of the 3 zone SPA-SLIM makes it the most economical blanket for investment return in treatment rooms. Indeed, several cabins equipped with SPA-SLIM in automatic mode can be monitored simultaneously by one person.

The materials used in the design of the SPA-SLIM, M1 (flame retardants), coupled with automatic thermal protection, provide excellent security. Moreover, it is equipped with a timer that switches the heating off at the end of the programmed cycle to ensure customer and premises safety.

The envelope, highly flexible, adapts to the body contours, thus ensuring a uniform temperature level. Adjustable Velcro closure points can adapt to clients of all sizes. The SPA-SLIM is very wide (36 inches / 92 cm), and can be used to treat corpulent customers. It also can be washed with fresh water and soap when it is unplugged.

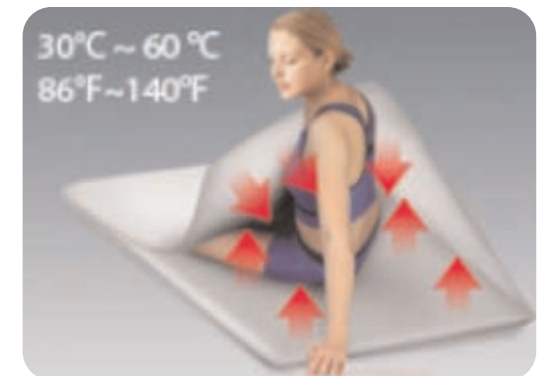

PARTS AND FUNCTIONS OF THE SYSTEM

The SPA-SLIM system includes :



1. A heating envelope with 3 cables (connected to the blanket) for connecting the three heating zones respectively.
2. A control box (the box keeps the last settings in memory).
3. A power cord.

Heating Envelope : Generates and transmits heat to the body. Made of nylon and containing heating elements made of carbon fiber, it is covered with a polyurethane shell.


Cables: Numbered from 1 to 3 and installed at the bottom of the envelope, they connect the blanket to the control box.

Control Box: Lets you adjust the temperature and duration parameters independently for each of the three areas.

Power Cord: Connects the device to a 110Vac wall outlet.

FUNCTION DISPLAY AND CONTROL

(on the front panel)

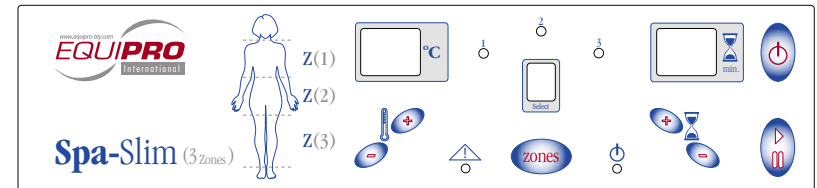

Activation button : This button activates the control box. It also makes it possible to simultaneously shut down all 3 zones. Activating or shutting down does not modify the programmed parameters. However, after shutting down, the zones must be independently reactivated.



Zone selector : Selects the heating zones (1-2-3). One or more zones can be used simultaneously, but only one is programmed at a time.



Heating zone activation indicators : These indicators light up when the corresponding zones are active.



Temperature control : Press on «+» to increase, or on «-» to decrease the temperature (in steps of 1°C).



Timer control : Press on «+» to increase, or on «-» to decrease the timer setting (in 5 min steps).



Overload indicator (red) : Turns on when the power is over 330W. An alarm will sound at the same time.



Activation indicator (red) : Turns on when the unit is active.



Run / Pause button : Press on this button to enable a heating zone after it's been programmed. This button enables or disables independently any zone. A disabled zone will not heat up. Activating or deactivating a zone does not modify the programmed settings.

HEATING BLANKET OPERATION

IMPORTANT

1. Always connect the power cord to the mains, and the 3 cables to the control box **BEFORE** turning the unit on!



2. Make sure to never put the blanket in contact with sharp objects to avoid possible damage during use.

HOW TO USE

1. Lay down the blanket on a horizontal flat surface like a treatment table.
2. Place the control box near, on a flat surface (auxiliary table, etc.) and connect the power cord to a wall outlet.
3. Connect the 3 cables from the blanket to the control box. Be sure to connect the cables numbered from 1 to 3 to the plugs also numbered from 1 to 3. numérotés de 1 à 3.

Cable # 1 connects to plug # 1 and so on.

Note : The cable connectors must be properly aligned with the plugs on the control box in order to be inserted correctly.)

Plug # 1 corresponds to zone 1 : Thorax (Upper body)

Plug # 2 corresponds to zone 2 : Hips (Middle body)

Plug # 3 corresponds to zone 3 : Legs (Lower body).



4. Install the client in the blanket and adjust the Velcro closure points. If products or algae are used, it is recommended to wrap the related body parts in a plastic foil to protect the blanket.

STARTING UP THE SPA-SLIM BLANKET



1. Plug in the three cables whose connectors are marked 1,2 and 3 in their respective sockets at the back of the control box.
2. Plug the power cord in a grounded wall outlet (3 contact socket).
3. Turn on the machine with the switch at the back of the control box.
4. Press on the activation button. At this point, the 3 numerical displays turn on, and the 3 zones are ready to be programmed. Right now, they are not activated.
5. With the «ZONES» button, select the target zone (1, 2, or 3)
 - Zone 1 : thorax
 - Zone 2 : hips
 - Zone 3 : legsThe target zone is shown on the central numeric display (red).
6. Adjust temperature and time at will for which this zone has to be heated, with the «up» and «down» arrows on the «Thermometer» and «Hourglass» icons. Temperature and heating duration are displayed in green.
7. Go to the next zone, et and repeat steps 5 and 6.

Note : By repeatedly depressing «ZONES», you can verify if your settings are correct for each zone. For each displayed zone (red), you may modify the settings without disturbing those from the other zones.

zones

8. Select the zone to activate using the parameters that you entered, with the «ZONES» button (the red display will show the selected zone).
9. Press the «Run/Pause» button. A green indicator will light up, showing that this zone has been activated, et and that this zone will heat up for the programmed time.
10. If needed, select another zone with the «ZONES» button, and activate it with the «Run/Pause» button. This way, one or more zones can be activated.

Activated zones are shown by their respective green light, which is on during the time the zone is active. Different zones may be manually de-activated this way too, as required. All zones can be shut down simultaneously by pressing the activation button. After pressing this button, if you need to resume the treatment, you will have to re-activate the zones, as in points 8, 9 et 10.

11. After every treatment, clean the blanket with soapy water. Let it cool down and dry, laying flat, for at least half an hour, (preferably for 1 hour) between every session, or before folding it and storing it in a cool, dry place.

RECOMMENDATIONS FOR USE AND SECURITY CONCERNS

To increase the life of your SPA-SLIM, please follow these simple recommendations:

- Use only on a flat horizontal surface.
- Do not use if folded or crumpled.
- Do not fold the region where the cables are inserted.
- When in use, make sure the cables do not pass under the blanket.
- Do not insert needles, do not pierce.
- Do not use on a handicapped person or a baby.
- Do not dry clean. Do not iron.
- Do not immerse the control box.
- Do not deposit objects on the blanket.
- Do not move the blanket by pulling on the cables.
- If the power cord is damaged, stop using, and call the manufacturer or distributor.
- When not in use, fold flat, and don't place other objects on it.
- Always let cool off before folding. Store in a cool, dry place.
- Clean with a soft sponge, and soap water.
- Unplug the blanket before any cleaning.
- Do not use solvents for cleaning.
- Plug in only when fully dried.
- After use, do not leave the blanket on at full power.
- Do not expose to direct sunlight for prolonged time.