



Deluxe Bicycle Stool


C9176T

© Universal Companies, Inc. 2004
All rights reserved for copyright purposes.

No reproduction by print or photocopies allowed without written permission.

Bicycle Stool Assembly

1. Unpack the box. Inspect the parts and report any damage to the shipper and/or Universal Companies at 1-800-558-5571.

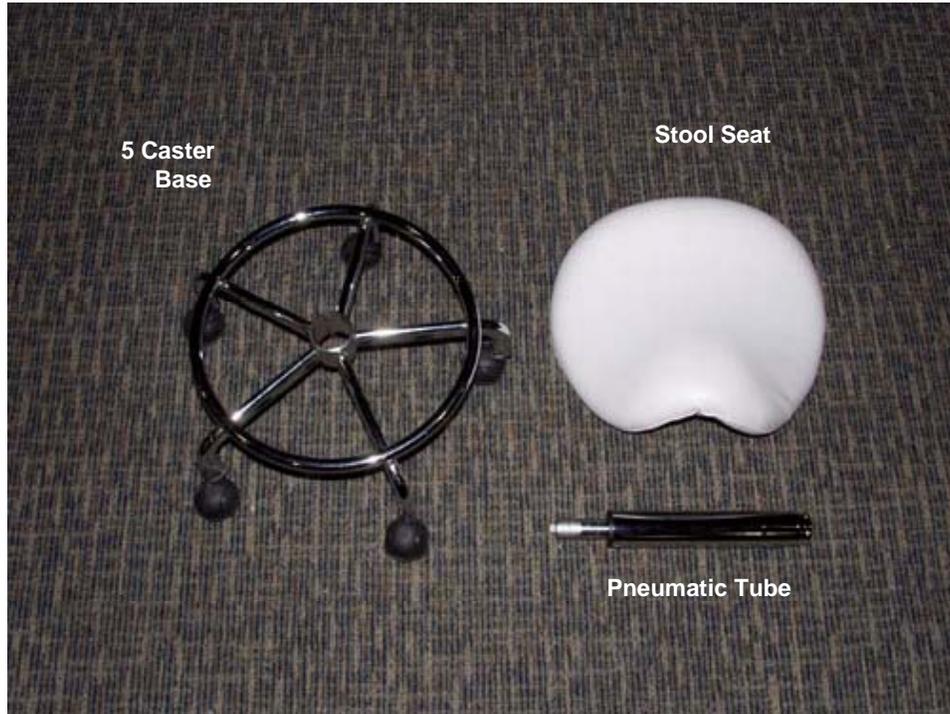

2. Insert the **Pneumatic Cylinder** into the top of the base with the "clip" end downwards. Press down firmly.



3. Remove the plastic from the stool seat.
4. The hardware to move the raise and lower the stool is already installed for right-handed operation. If you want to be able to operate the lever with your left hand, turn the stool seat upside down and remove the mechanism with an adjustable wrench or socket. Rotate it 180° and reinstall.



5. Lift the seat and place it on top of the pneumatic cylinder, inserting the cylinder into the opening in the stool seat. Press down firmly on the seat. Weight or applied pressure will serve to “pressure seal” these components.



6. The assembly of your stool is now complete. Remove the plastic and enjoy!

To operate the stool:

- To raise the seat, pull the lever up while standing.
- To lower the seat, pull the lever up while seated.

Specifications

Seat – 20” wide, 14.5” front to back.

Height range – 22.5” to 28”

5 caster base



Authorized Technical Service Center:

Universal Companies, Inc.
18260 Oak Park Drive
Abingdon, VA 24210
Phone: 1-800-558-5571
Fax: 1-800-237-7199
E-Mail: info@universalcompanies.com