

Three Bottle Massage Oil Warmer



Constant temperature
heating


Precise heating
and
temperature control

Precise temperature
adjustable


Please read this manual before use

Product Structure

Front

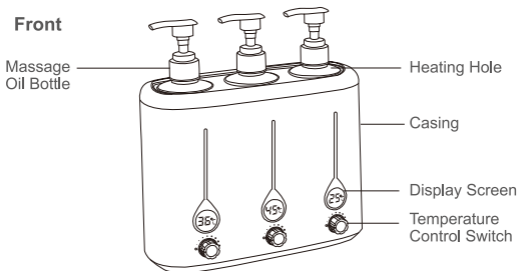

Back

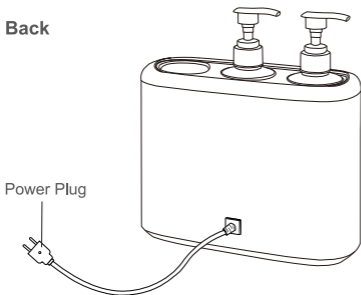

Product Parameters

Product Name: Three Bottle Massage Warmer	Model: HOH4
Rated Frequency: 50/60HZ	Rated Power: 135W
Rated Voltage: 100-120V or 200V-240V (see bottle)	
Temperature Control Range: 40-60°C /104-140°F	
Applicable: 6 Oz/Diameter 51mm Massage Oil or Lotion Bottle	
Product Dimension: 106x240x180mm、 Package Size: 280x150x235mm	

How to Use

1. Place the warmer on a horizontal platform and connect the power plug to an external socket;
2. Place the oil bottle containing massage oil or lotion into the heating hole of the warmer;
3. Short press the temperature control switch, and the warmer start heating, and set the target temperature by rotating the temperature control switch;
4. The heating process usually takes 10-20 minutes. When the massage oil reaches the target temperature, the warmer will automatically stop heating;
5. After use, short press the temperature control switch to turn off the device and stop heating;
6. Unplug the power plug after use.

Instructions for Use

Temperature Display:

1. Temperature mode: This product provides two temperature modes, Fahrenheit (°F) and Celsius (°C); press and holds the temperature control switch for 2 seconds to switch the temperature mode;
2. Target temperature display: Rotate the temperature control switch, and the preset target temperature will be displayed on the display screen synchronously. During the heating process, the target temperature will be displayed every 3 seconds;
3. Current temperature display: During the heating process, the current temperature of the massage oil will be shown every 3 seconds.

Standby:

1. During the heating process of the device, remove the massage oil bottle from a heating hole, the heating hole of this device enters the standby mode, and the display screen lights off;
2. After 8 hours of continuous heating, the device will automatically enter the standby mode, and the device can be reactivated by rotating the temperature control switch;
3. When massage oil reach the target temperature

Switch Off:

After use, turn all three temperature control switch counterclockwise to the end to switch off the device and stop heating;

Disclaimer

Warning

1. Please do not use this device with unstable voltage to avoid damage to the device;
2. It is strictly forbidden to pour massage oil or lotion or any liquid directly into this device, and please pour massage oil or lotion into the oil bottle;
3. This product is only suitable for heating massage oil or lotion and should not be used for other purposes;
4. Before use, please ensure that the inner wall of the heating hole is dry and free of foreign objects;
5. Ensure the outer wall of the massage oil bottle is dry and clean to avoid short circuits or fire;
6. It is strictly forbidden to touch the inner wall of the heating hole with hands to avoid burns;
7. Please ensure that the volume of massage oil or lotion liquid in the massage oil bottle is not less than 30% of the height of the bottle;
8. The massage oil bottle materials recommended for this device include glass, polyethylene (PE), high-density polyethylene (HDPE), or low-density polyethylene (LDPE) bottles. DO NOT use massage oil bottles made of phthalic acid (PET) or other materials with low melting points;
9. Massage oil bottles made of phthalic acid (PET) or other materials with low melting points will melt and deform during heating;

Disclaimer

10. Please switch off and unplug the power plug when not in use;
11. Do not wash with water or wipe the device with a wet towel;
12. During transportation, please handle with care to avoid any impact and collision;
13. It is strictly forbidden to continue using damaged devices to prevent the risk of short circuits, electric leakage, electric shock, and fire;
14. Ensure that the device, power cord, and power plug are dry to prevent leakage;
15. This device is not a toy. Please store and use this device in an area away from children or pets;
16. The masseur must test the oil temperature of the massage oil to avoid scalding the body of others;
17. Do not use a power supply other than the rated voltage (see the bottom of the device for details)to prevent fire or damage to the product;
18. Do not disassemble or repair this device without the authorization of the manufacturer;
19. Please return the device to the manufacturer for repair;

Usage Environment

1. Do not place the product in the bathroom or a humid place;
2. Do not place this device in water;

Disclaimer

3. Do not use the device outdoors to avoid the device being wet by rain;
4. If the device is drenched by water or water enters the inside, the device must be completely dry before use;
5. Do not use this device in an environment where the temperature exceeds 60°C or falls below -20°C;
6. Do not place the product near electric heaters and stoves to avoid damage to the equipment casing;
7. Do not use this device during lightning strikes.

Warranty

Within one year from the date of purchase, we provide free repair or replacement services for the device that is malfunctioning or unusable due to non-human factors.

This warranty excludes the following:

- a) Damage caused by accident, abuse, mishandling, or shipping;
- b) Unauthorized maintenance and repairs;
- c) Device failure caused by improper use;
- d) Damage exceeding the product value;
- e) Damage caused by improper storage;
- f) Unable to provide proof of purchase date.

