

# *Lenox*

OWNER'S MANUAL



## **Table of Contents**

Table of contents	2
Warranty form	3
Service inquiry form	4
Introduction & Safety	5
Important Consideration	6
Identify parts & Description	7
Specification	8
Dimension	9
Drain Connection	10
Rough end (Plumbing)	11--15
Magna-Jet Pipeless System	16
Power Discharge Pump	17
Maintenance (Massage Mechanism)	18
Assembly Instruction (Chair)	19
Disinfecting Pedicure Spa	20
Trouble Shooting	21
User's Recommendation	22
UL Certification	23
Back Flow Prevention Device Dual Check Valve Information	24
JSG Oceana Implied Warranty	25
Warranty	26



Serial Number



### WARRANTY REGISTER FORM

Please fill out all the blank lines below and send us by mail, Fax or email (peter@jausainc.com / digital form is available in our website) to us. The warranty register form MUST be sent to us within 15 days of purchase date along with a original copy of the receipt. Your warranty will be initiated automatically once received register form. When proper form/s are in place, your warranty service will be perform in most efficiently without delay.

Please use our After Service Inquiry Form for requesting after service by Fax or email (peter@jausainc.com) to us. Our service technician team will be returning call as received.

1.  Mr.  Mrs.  Ms.

Business Name \_\_\_\_\_

First Name \_\_\_\_\_ Initial \_\_\_\_\_ Last Name \_\_\_\_\_

Street \_\_\_\_\_ Ste. No. \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip Code \_\_\_\_\_

Email \_\_\_\_\_

2. Distributor Name \_\_\_\_\_

Street \_\_\_\_\_ Ste. No. \_\_\_\_\_


City \_\_\_\_\_ State \_\_\_\_\_ Zip Code \_\_\_\_\_

3. Your Phone Number \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_

4. Date of Purchase \_\_\_\_\_ / \_\_\_\_\_ / \_\_\_\_\_  
Month / Day / Year

5. Model (check one) PS-300\_\_\_ PS-750\_\_\_ Episode UV\_\_\_ Episode GS\_\_\_ Petra-900/PL\_\_\_ Petra-ROMA\_\_\_  
Cleo PL\_\_\_ Cleo LX\_\_\_ Cleo RMX\_\_\_ Cleo SLX\_\_\_ Cleo Dayspa\_\_\_  
Lenox\_\_\_

The Serial number is located at below the base access panel in the rear

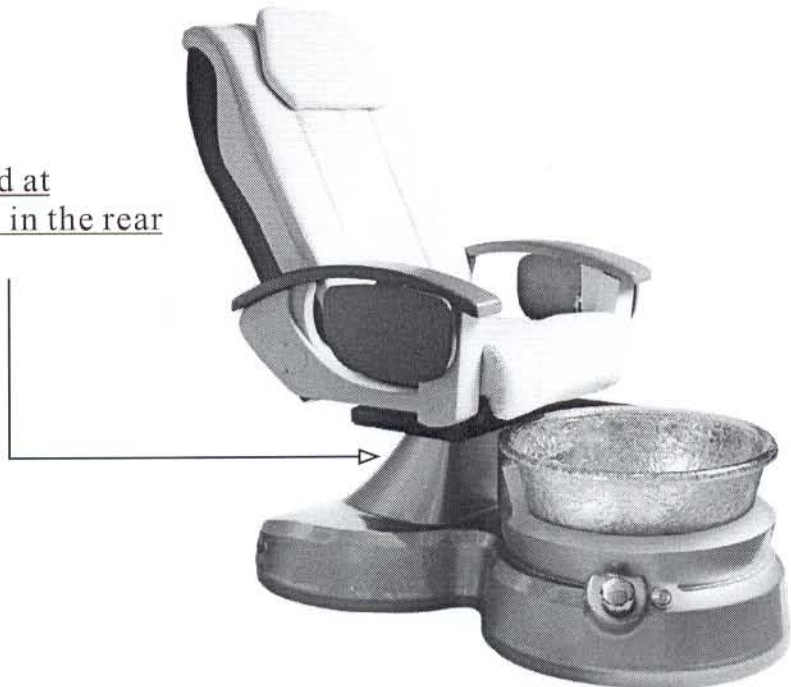

**After Service Inquiry Form**

Please use inquiry form as all service request  
(Fill out all blanks and Fax or email us, our A/S Dept. will call you promptly)



Distributor Name: \_\_\_\_\_

Date \_\_\_\_\_

Phone Number: \_\_\_\_\_

Contact Person: \_\_\_\_\_

Salon Name: \_\_\_\_\_

Address: \_\_\_\_\_

Phone Number: \_\_\_\_\_ Alternate Phone Number: \_\_\_\_\_

Contact Person: \_\_\_\_\_ Best time to reach: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Brief Description of Problem: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**J&A Service Official Use Only**

Technician Name: \_\_\_\_\_

Date: \_\_\_\_\_

Service Status: \_\_\_\_\_

\_\_\_\_\_

## Introduction

Thank you for purchasing the **Lenox** Whirlpool Pedicure Spa. This finest Whirlpool Pedicure Spa has been developed by J&A USA, inc. To operate dependably for many years when used properly. Please take time to read this manual thoroughly before installation and use.

## PLEASE READ AND FOLLOW INSTRUCTIONS CAREFULLY!

### Important Precautions

J&A USA requires that you contact your local, qualified electrician and plumber to install your **Lenox** Whirlpool Pedicure Spa. It cannot operate efficiently or safely unless it is provided with adequate electrical power, sufficient water pressure, proper water temperature and required drain facilities. Information on these important subject contained on this manual. We urge you to read it carefully to make sure these requirements are met.

### Precautions

1. Excessive water temperature is dangerous and should be checked before use. Maximum water temperature should Not exceed 105 degree F (41 degree C.).
2. Always enter and exit the whirlpool Pedicure Spa slowly and carefully.
3. Never bring and/or operate any electrical devices into or near the Whirlpool Pedicure Spa.
4. Do not stand in the Whirlpool tub!
5. This Whirlpool Pedicure Spa has a weight capacity of 250 lbs.

## WARNING

Do not use if you are diabetic, have poor blood circulation, or if any area of your feet or legs are inflamed or have open wounds. Consult a physician before using if you have any kind of fungal infection, swelling, fracture, or persistent pain.

MASSAGE SHOULD BE PLEASANT AND COMFORTABLE.

IF YOU EXPERIENCE PAIN OR DISCOMFORT, DISCONTINUE USE IMMEDIATELY AND CONSULT A PHYSICIAN

This product in whole is in compliance with applicable UL LISTED standards and requirements for the U.S and Canada By Underwriters Laboratories Inc.



Some of the components of this product are Also in compliance with applicable Safety standards of following:

