

HOT TOWEL CABINET

OPERATION MANUAL

Model 34006



Model 34007


Thank you for purchasing the TouchAmerica Hot Towel Cabi. To use this product safely, please read this material carefully and abide by all directions and notes.

This appliance provides warm, wet or dry towels, while utilizing safe, ultraviolet (UV) sterilizing technology to kill germs. It's the ideal choice for towel warming and storage in your spa or salon.

Product Specification

Model	34006	34007
Rated Power	110v/60Hz	110v/60Hz
Power	180W	130W
Temp Adjust	Bimetal Thermostat	Bimetal Thermostat
Inside Temp	158° - 176°	158° - 176°
Safety Unit	216° shutoff	216° shutoff
Outer Size	17.7"Wx 11.2"Dx14"H	13.8Wx11"Dx10"H
Inner Size	14.7"Wx7.7"Dx9.8"H	10.7"Wx7.7"Dx5.5"H
Inner Capacity	18 liters	7.5 liters
Insulation	Glass wool	Glass wool
Weight	13.5 pounds	9 pounds
Accessories	Shelf, water tray	Shelf, water tray

Names of All Major Parts

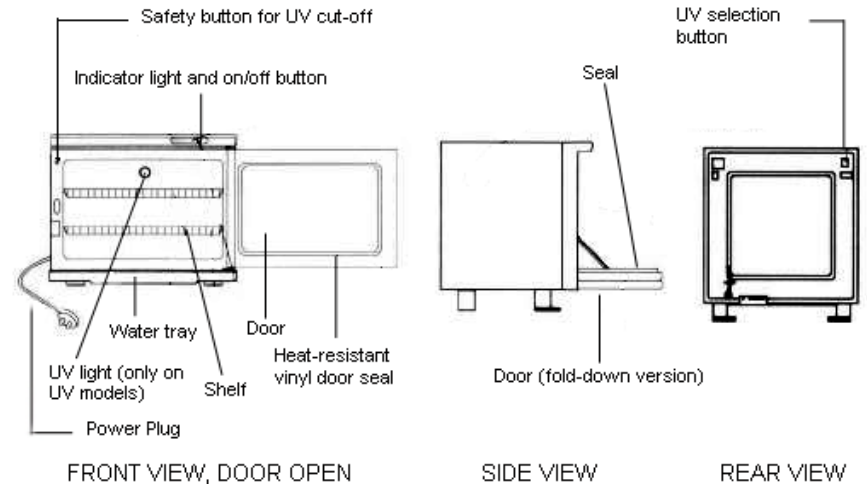

How To Use

34006 Standard Cabinet

(With UV Sterilization)

- Switch the power button to “ON”. The red indicator light on the front of the cabinet will come on. Switch the UV selection button at the back of the unit to “ON”. The unit will reach the preset temperature, and the ultraviolet sterilization feature will begin. Switch the UV selection button off after 20 minutes.
- Switching the UV off does not turn off the heating element. It will extend the life of the UV bulb. As long as power button is on, the unit will remain in heating mode.
- Opening the door with the UV in operation will shut the UV feature off. Closing the door will cause UV sterilization to resume.
- Switch the power button to “OFF”; the red indicator light will go out, and the unit will stop working.

34007 Small Cabinet

(With UV Sterilization)

- Switch the power button to “ON”. The red indicator light on the front of the cabinet will come on. Switch the UV selection button at the back of the unit to “ON”. The unit will reach the preset temperature, and the ultraviolet sterilization feature will begin. Switch the UV selection button off after 20 minutes.
- Switching the UV off does not turn off the heating element. It will extend the life of the UV bulb. As long as power button is on, the unit will remain in heating mode.
- Opening the door with the UV in operation will shut the UV feature off. Closing the door will cause UV sterilization to resume.
- Switch the power button to “OFF”; the red indicator light will go out, and the unit will stop working.

WARRANTY ON HOT TOWEL CABIS:

TouchAmerica’s Hot Towel Cabis carry a one-year warranty (from date of Invoice). Call 1-800-678-6824 to speak to a representative about any warranty matters or with product questions.

For Your Safety

Please read the safety instructions below carefully and observe them at all times. These notes are meant for your safety and will prevent injury to you and others. Please keep this manual in a convenient place where it can be easily read by other operators at any time.

- The UV sterilization light only works if the door is closed.
- The UV function should be turned off after 20 minutes using the UV switch on the back of the unit.
- To test normal UV operation (with the UV switch turned off on the back of the unit) open the cabinet door; **while avoiding eye contact with the UV light** turn the UV switch on the back of the unit on; depress the safety button on the cabinet frame and the UV light will come on.
- Do not crush, bend, stretch, cut, or otherwise damage the power cord.
- Do not grasp the power cord to pull it from an electrical outlet. Grasp only by the plug.
- Do not plug or unplug with a wet hands, to avoid electrical shock.
- Do not plug into ungrounded outlets.
- Do not use this product outdoors.
- Do not leave wet towels in this unit with the door closed for longer than 12 hours to prevent odor.
- Do not leave dry towels in this unit, with the cabinet in operation, longer than six hours, to prevent odor and shrinkage.
- Put this unit out of the reach of small children and do not allow them to use it without direct adult supervision.
- Avoid dropping this product to prevent damage or breakdown to its electrical components.
- No user-serviceable components are found in this product. Refer repairs to the manufacturer or a competent technician.