


ZC-989R Luxury Paraffin Bath Equipment With Temperature Control

1. Introduction

Because of its outstanding effect for dry, old, wrinkle skin and simple operation, paraffin bath is popular with beautician and family user.

For its beautiful appearance and eximious function, ZC-989R paraffin bath equipment is always populared with the customers all over the world. ZC-989R product has the following features: Temperature control, Temperature display, Quickly melting, Timing on and off, Time display, Fahrenheit and Celsius temperature switch, Large capacity

2. Configuration

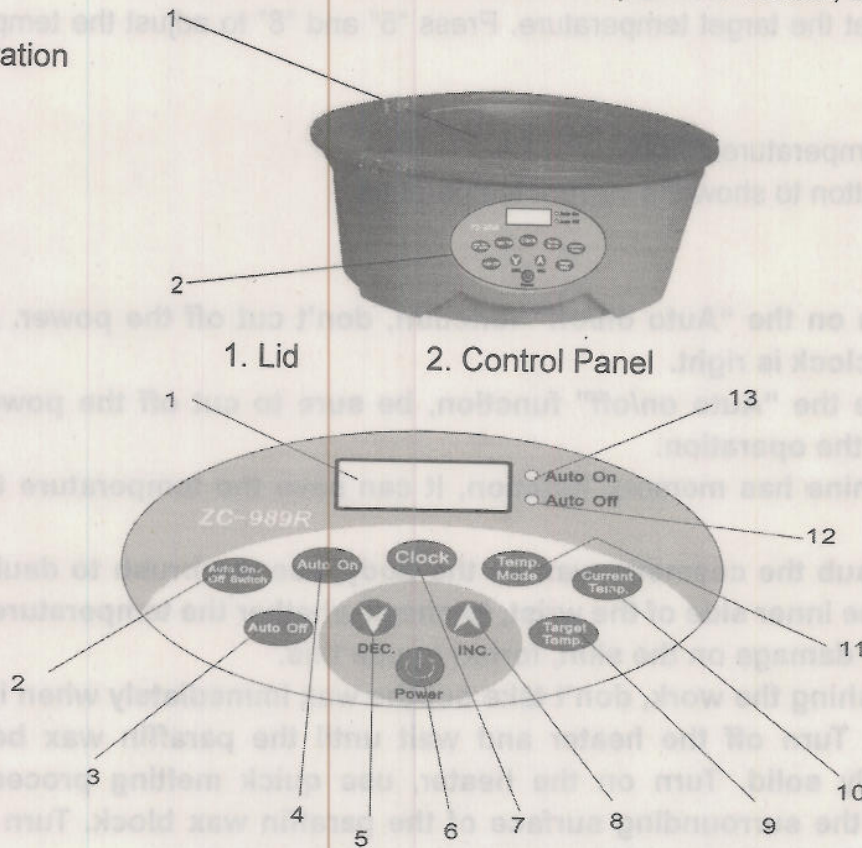

- 1. Temperature Meter
- 2. Auto on/off switch
- 3. Auto off
- 4. Auto on
- 5. Decrease
- 6. Power
- 7. Clock
- 8. Increase
- 9. Target Temperature
- 10. Current Temperature
- 11. Temperature Model
- 12. Auto off indicator
- 13. Auto on indicator

Operation:

Connect the power, press "Power" button.

1. Clock setting: (adjustment when the first time use)

Press "7" button, the first two number of clock will shine, press "5" and "8" button to adjust the hour. Press "7" button again, the last two number of clock will shine, press "5" and "8" button to adjust the minutes. Press "7" button for the third time, clock setting completed.

2. Work mode setting:

The display meter show the current temperature. Press "2" button to select Auto on, Auto off and on, off function, the "Auto on" and "Auto off" indicator will shine. Press "4" button, the first two number of the digital tube will shine. Press "5" and "8" button to set the "Auto on" time(24 hours model). Press "3" button, the first two number of

the digital tube will shine, set the "Auto off" time. If there is none indicator("12" and "13") shine, it means the machine is under manual mode.

3. Temperature mode setting

Press "11" to select temperature mode: press (5) and (8) to adjust Fahrenheit (F) and Celsius(C).

4. Target temperature setting

Press "9" to set the target temperature. Press "5" and "8" to adjust the temperature needed.

5. Current temperature display

Press "10" button to show the current temperature.

Notice:

1. After turn on the "Auto on/off" function, don't cut off the power. And be sure the clock is right.
2. If not use the "Auto on/off" function, be sure to cut off the power after finishing the operation.
3. The machine has memory function, it can save the temperature that set last time.
4. Before daub the cosmetic wax on the body, use the brush to daub some wax on the inner side of the wrist, to check whether the temperature is OK.
5. If there is damage on the skin, forbid to use this.
6. After finishing the work, don't take out the wax immediately when it is still in liquid. Turn off the heater and wait until the paraffin wax becomes completely solid. Turn on the heater, use quick melting procedure to liquidate the surrounding surface of the paraffin wax block. Turn off the heater and take the paraffin wax block out of the heater.
7. In order to short the melting time, please adjust the temperature to the maximum, when the wax is completely melted, then adjust the temperature to the needed.
8. If the power line is damage . It must be replaced with special parts supplied by manufacturer or local service office
9. This machine is not for people who is not in good health, slow in reaction and has mental illness (including children), unless under appropriate guidance of their safety guardian
10. Children should be supervised to ensure that they do not play with the appliance

Parameters:

1. Voltage: AC230V or AC120V
2. Power: 220W
3. Capacity: 8LBS
4. Completely Melting Period: within 90 minutes
5. Adjustable Temperature Range: 46-60°C