

# **F-300DT**

## Digital Facial Steamer

### User Manual





Welcome to use this product! A0  
Please read this instruction carefully before use.

## About This Manual

This manual shall only be used for the reference of operation of this particular model. If the manual is used for other purposes, SILVERFOX will not undertake any according consequences and responsibility. All information of this manual shall be protected by copyright and shall not be copied and translated in any part of this specification without the written consent of our company SILVERFOX.

## Safety Guidance

To ensure that you use the product correctly, please read all the security guidance carefully before use. This security guidance can help you use this product correctly to avoid harm to you and your family, and unnecessary property damage. When using this product, especially when a child is present, basic protective measures must be taken. The security guidance are as follows.

	<b>Warning!</b>	<p><b>Indicates a dangerous situation that may occur. If not avoided in time, it may lead to serious injury or even death.</b></p> <ul style="list-style-type: none"><li>• This product must be used in accordance with the inherent purpose stated in this manual and cannot use the accessories, which are not recommended by manufacturer.</li><li>• The following people should not use:<ul style="list-style-type: none"><li>① Women during pregnancy or menstruation,</li><li>② People with allergies, skin diseases, or severe sunburn,</li><li>③ People with skin damage, eczema, swelling, etc.</li><li>④ People with limbs, senses, or mental illness,</li><li>⑤ People who have just completed surgery and are recovering.</li></ul></li><li>• When this product is working, do not wind the power cord around the body, and do not use an extended power cord. Keep out of reach of children. Do not allow children to use this product.</li><li>• When using and placing, the power cord must be kept away from high temperature.</li><li>• When this product is powered on, it must not be left unattended.</li><li>• When the power cord and plug of this product are damaged, work abnormally, overturned or dropped in water, you cannot continue to use it. You should send it to the service center for inspection and repair.</li><li>• This product is not recommended for children.</li><li>• Do not insert or put any foreign objects into the body and nozzle of this product.</li></ul>
	<b>Attention!</b>	<p><b>Indicates a dangerous situation that may occur. If it is not avoided in time, it may cause personal injury and property damage in severe cases.</b></p> <ul style="list-style-type: none"><li>• During non-use, if you need to move the steamer with hot water, be sure to handle it carefully.</li><li>• Please keep this product properly and keep it out of reach of children.</li><li>• When using, do not remove the water cup.</li><li>• Do not touch the herbal cap during work.</li></ul>
	<b>Dangerous</b> (avoid electric shock)	<ul style="list-style-type: none"><li>• Unplug the power cord immediately after use.</li><li>• Do not use this product while bathing.</li><li>• Do not place or store this product in a location that can easily fall into the bathtub, washbasin, sink, etc.</li><li>• Do not allow water or other liquids to enter the product due to improper operation.</li><li>• If the product falls into the water accidentally, please do not touch the product and unplug the power cord immediately.</li><li>• Do not use this product in a humid environment.</li></ul>
	<b>High temperature</b> attention	<p><b>When working with this product, please pay attention to high temperature parts such as nozzles and funnel cap to avoid burns.</b></p>

## Product Introduction

This product is used for supporting other beauty instruments and beautician trolley.  
The models are F-300D / F-300H / F-300E / F-300F / 3021 / 3051 / 3052.

F-300H



F-300E




3051




3021



## Components

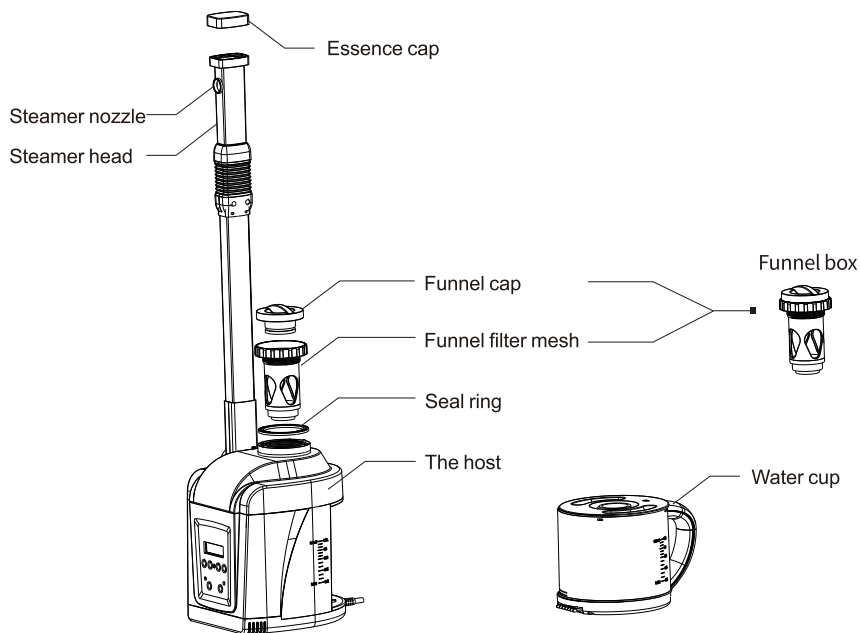

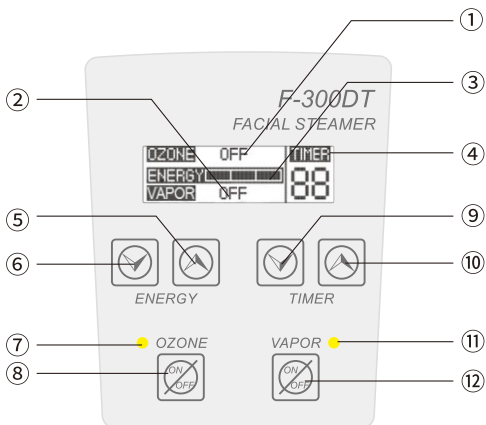

- ① Ozone display      ② Spray display
- ③ Energy            ④ Timer
- ⑤ Energy increasing button
- ⑥ Energy decreasing button
- ⑦ Ozone indicator light
- ⑧ Ozone switch ON/OFF
- ⑨ Time decreasing button
- ⑩ Time increasing button
- ⑪ Vapor indicator light
- ⑫ Spray switch ON/OFF

When you use this product for the first time, you may find that there is residual water around the water cup. This is the distilled water remaining in the factory used in the aging test, which will not cause any hygiene problems.

## Product Parameters

Model Type	F-300DT	
Frequency	50/60Hz	
Wattage	650W/800W	
Voltage	AC 100-120V	AC 220-240V

## Operation Method

### ● Add water Method One


First, unscrew the funnel cap(picture ①). Then press and hold the gray button on the host(picture ②), and take out the water cup. Add water to the water cup. After adding water, it needs to be pushed into the pit of the bayonet when it is inserted into the host. After it is inserted, check whether the water cup is installed in place.

### ● Add water Method Two


First, remove the funnel cap and add water. After adding water, please make sure that the funnel cap and funnel filter mesh are tightened.

**Please make sure that the water in the water cup is between the safe water level (MIN-MAX).**



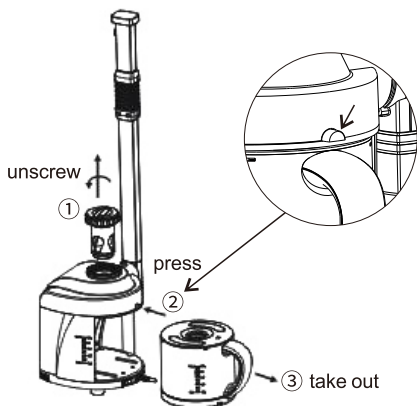

Add water Method One

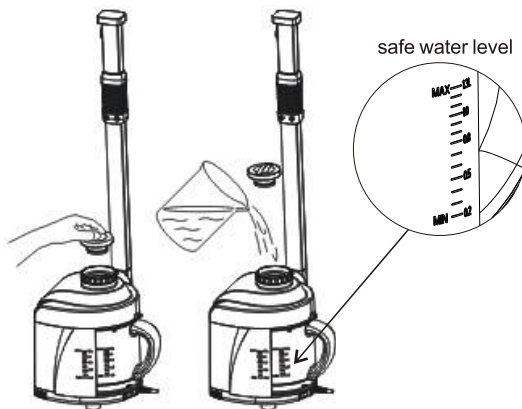

Add water Method Two

- Connect power supply
- After the host is powered on and self-checked, it enters the standby state.
- Adjust time and energy.  
(When the water is at room temperature, the energy should be adjusted to the maximum to shorten the heating time) .
- After the water is boiled, press the ozone switch then the ozone indicator light is on. The steam is obviously converted into a fine mist and sprayed out with smell of ozone. At this time, it enters the normal spray state and the beauty operation can be performed.
- For the function of aromatherapy spray, please open the essence cap on the top of the nozzle and add 2 drops essence. Then close the essence cap (as picture 1)



Picture 1



• During operation, do not move water cup and do not tilt, shake or move this product. Otherwise hot water may splash out or a large amount of the steam is ejected from the nozzle.



• When working with this product, please pay attention to high temperature parts such as nozzles and funnel cap to avoid burns.

## Cautions

### ◆ Operation Cautions




#### Warning

- Do not start up when the water level is lower than the lowest water mark.
- Do not use this product under sun for long term. Otherwise it may cause unstable performance.
- Do not disassemble the shell, host or other parts without permission. In case of abnormal work, please contact the dealer for professional guidance. Or ask professional maintenance personnel for inspection and maintenance.




## Attention


- When the water in the water tank is below the lowest water level, the host will emit a beep tone and stop spray. At this time, should add proper water and restart the heating function to work normally.
  - Can use purified water or tap water. Do not use distilled water. Do not add viscous substances such as flavors or herbal to the water cup. Otherwise, it is easy to cause water spray and cause damage to the machine. When the machine stops working, please turn off the power.
  - The ozone has a bactericidal effect. But long-term use will cause damage to the skin and destroy the nutrition of the herbal. The use time should be selected according to different skin types.
  - During operation, do not spray directly on the skin. It may cause burns. You must wait until the nozzle can spray the fine mist stably and evenly before operation.
  - If there is water leakage during work, first take out the water cup to check whether the seal ring is well set and then reinstall the water cup. If the situation still does not improve, please contact the dealer to resolve.
- **When using this product for the first time, please use tap water, and then use pure water, which can try to avoid the generation of the scale.**  
If the detection function responds incorrectly, it may be that the water quality is too pure. At this time, it can be solved by working with tap water once.
  - **This instrument has a detection circuit. If there is no water in the water cup, the funnel cap is not tightened, etc., the host may not work. At the same time, the host will also emit "beep" "beep" prompts. The above problems should be eliminated before starting the host.**



No water



Overfilled




The funnel filter mesh is untightened

- Please keep this facial steamer away from the high-interferential device (like: high-frequency instrument). If the circuit board or LCD screen is accidentally interfered, the steamer may stop working suddenly or the quality of performance will be lowered. Normally, please turn off the power, then re-start after 15 seconds. This product can be recovered to the normal working status. If still not improved, please unplug the power immediately and contact the dealer for repair.
- If the main body of the funnel cap is not tightened, it will cause steam leakage. But too tight will make the sealing ring of the atomization chamber easy to age, resulting in air leakage. To avoid air leakage caused by the aging of the seal ring of the vapor dispenser, please change the seal ring in every 3 months. Each product has one more seal ring as spare. If it is lost or damaged, please contact the dealer to get a new one for replacement.
- Do not add water without the funnel filter mesh. It may easily allow the water to flow to other parts and cause a short circuit.



Do not add water without the funnel filter mesh

- Do not pull out the water cup without removing the funnel filter mesh. Otherwise, the funnel filter mesh will be broken.
- Do not remove the host by grabbing the spray arm to avoid loosening and damage to the spray arm.
- Please note, take out the water cup after using it every day, and check whether there is any water drops or mist in the place where the water cup is connected to the power supply. If it is, please clean it immediately with a dry towel and keep the host dry and ventilated. Please turn off the power before cleaning to avoid damage to the product or electric shock.
- During operation, you must wait until the fine mist is sprayed stably and evenly before it can be directed at the area that needs to be sprayed. The corresponding distance must be maintained when spraying. The distance can be compared with the following reference table.

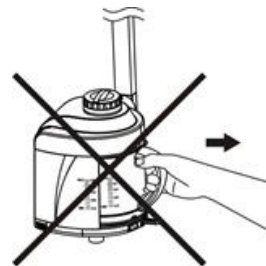

Do not pull out the water cup without removing the funnel filter mesh

**Different skin types refer to different distances. The following data is for reference only.**

Spray time reference table		
Skin Type	Distance	Time
Oil skin, poor blood circulation skin	35-40cm	15min
Normal skin	35-40cm	15min
Sensitive and dry skin	40-45cm	5min
Inflamed skin	40cm	5min

## Instrument Maintenance

- When operating, please pay attention to the water level of the water cup.
- After operation, please clean the product in time.
- The scale on the water cup and heating plate needs to be cleaned at least once a week or after using funnel twice. Can be scrubbed with a soft metal brush or soaked in vinegar for 5-7 minutes. Then rinse it off with tap water. Please note that funnel can not be reused.
- Check the seal ring every 2 weeks. If it is deformed or deteriorated, please replace it in time.

## Troubleshooting

- When an abnormality occurs, stop using it immediately and cut off the power supply.
- After normal power-on, if the product heats up for no reason before the spray function is turned on. Please cut off the power supply and contact dealer for repair.

Abnormal phenomena	Cause	Solution
The sprayer does not work when press the switch button	1. Power is not connected	Connect the power supply
	2. Do not adjust the energy gear	Press energy increasing button
The sprayer does not work	1. Not powered on	Boot according to the operation method
	2. Water shortage	Add water according to the operation method
	3. Nozzle clogged	Clean the product according to the maintenance guideline

If problem is still not solved after above operations, please contact maintenance center or supplier to solve it.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

- ▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.

# F-319A User Manual

## 【Function】

1. Eliminate the aging stratum corneum, tender skin, clear away dirt from pores, fade acne scars;
2. Suck accumulated oil from the skin and the pore, improve dull skin, eliminate facial swelling, eye swelling;
3. Increase skin elasticity, eliminate slender wrinkles, improve skin texture, keep the skin youth;
4. Improve the skin from dull, rough, uneven complexion, pigment, spots;
5. Dilute the tattoo pigment, fat pattern, stretch marks;
6. Eliminate the aging stratum corneum, tender skin.

## 【Illustration of panel】

①Power

②Energy indicator

③Time indicator


④Energy increase key

⑤Time increase key

⑥Start/Pause

⑦Energy decrease key

⑧Time decrease key

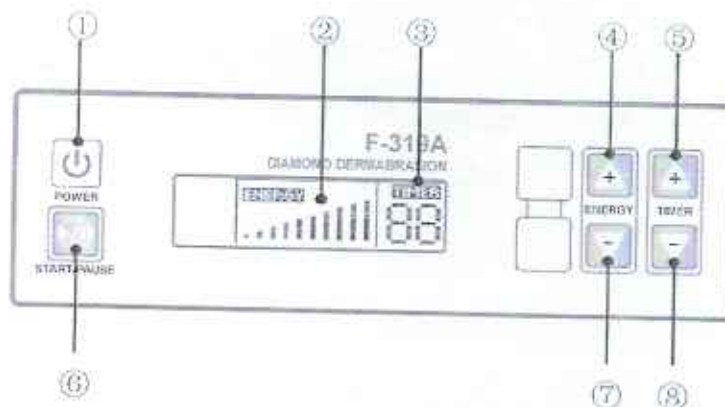


## 【Fundamental】

This Instrument is made use of a mosaic of different thickness diamond particles, with controlled grating, and matched up the vacuum suction to control strength. It makes partial miniature rejuvenation for the lymphatic drainage, skin aging, pigmentation or large pores, etc and brings the most gentle and rapid regeneration for the skin. Not only can accelerate the renewal of the aging stratum corneum, but also increase the full absorption of skin care products.

## 【Features】

1. The newest high-tech diamond dermabrasion rejuvenation technology, security, painless, no side-effects;
2. 9, Diamond Head: 3 pins for different facial skin, 2 specialty pins for eye and slender wrinkles, 4, specialty pins for the body with a wide range professional treatment
3. Humanization design, developed operating handle elaborately, accord with hand structure and facilitate the beauticians;
4. With simplicity of operation, it makes the skin silky, natural, safe effectively;
5. No any powder in the process, to avoid the powder residue on the skin or suck by the guests or beautician;
6. Needn't rest after treatment, you can go out or make-up, it wouldn't affect the normal social life.

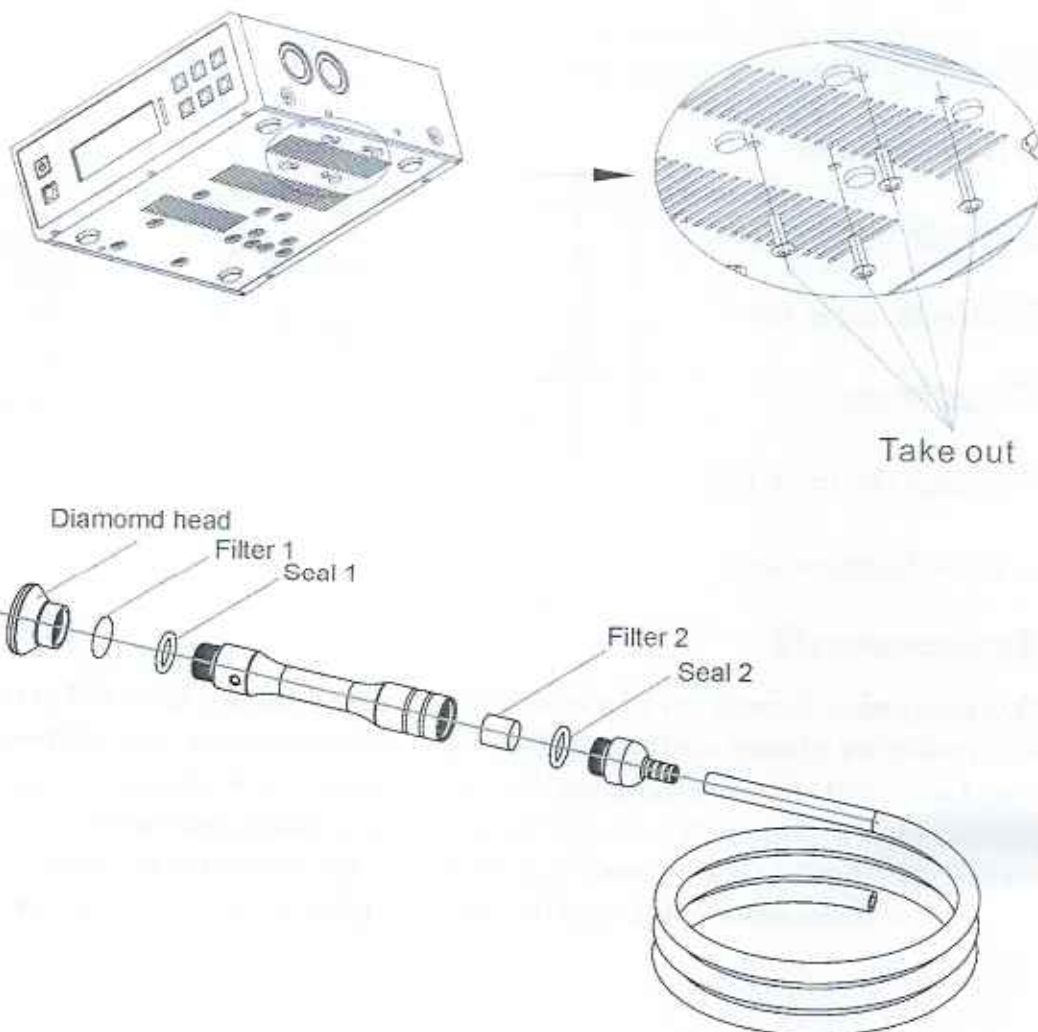



# F-318A Cold & Hot Hammer


## Brief introduction

1. With the principle of cold & heat conversion, the product uses special refrigeration film, could convert energy to the temperature you need in short time.
2. Can activate cell, improve and purify skin quality; smooth wrinkles and crow's feet more naturally and thoroughly.
3. The alternate use of cold and heat, could expand and shrink pore fastly, give them movement of expansion and shrinkage, thus give the skin vitality and vigor for the elastic.

## Operating Instruction

1. Connect host engine and accessories lines well.
2. After press the power switch, first set cold therapy or hot compress function; temperature and time again; and then press the "START/PAUSE" to start the host; last, open the switch on the handle of the hammer.
3. For first use, it takes about 5 minutes to work normally after complete the setting.
4. When one treatment is finished, 3 minutes is needed to switch to another.

## Panel Instruction

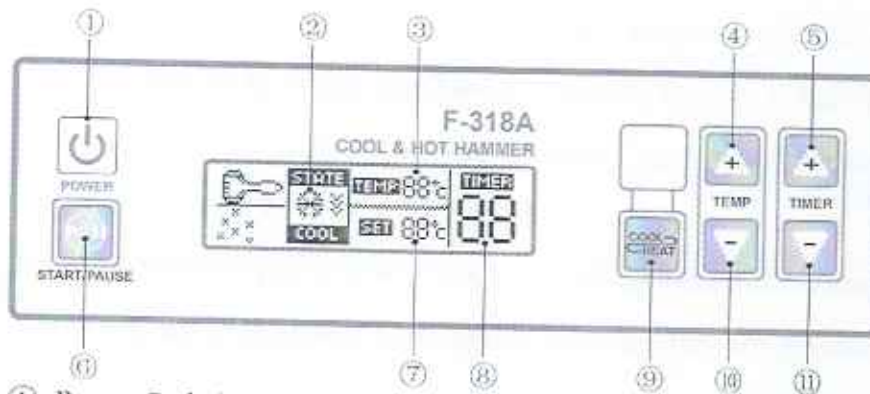

- ① Power Switch
- ② Cold/Hot Indicator
- ③ Real-time Temperature Indicator
- ④ Temperature Increasing Button
- ⑤ Time Increasing Button
- ⑥ Start/Pause Button
- ⑦ Setting Temperature Indicator
- ⑧ Time indicator

- ⑨ Cold/Hot Switch Button
- ⑩ Temperature Decreasing Button
- ⑪ Time Decreasing Button

### **Cautions:**

1. Indoor use only, because the working condition of this instrument would change as the environment temperature changes. The instrument probably can't work well if the temperature is too high or too low, the best is to operate in the room with the temperature about 25°C
2. The scattered gas tank shouldn't be blocked. if so, some condensed water may produced inside the hammer, thus may cause short-circuit fault.
3. When the host engine shows in the state of working after starting the "START/PAUSE", but the cold & hot hammer still don't work, pleas check whether the switch of the hammer has been adjusted to "--" or not.
4. Besides the time of primary seeting starting time and switching cold/hot function, you also need to add the time of temperature going up/down ( start time: 5 minutes; switch cold/heat: 3 minutes).

### **Warnings:**

1. The two ends of the cold & hot hammer are made of aluminum alloy, they have soft hardness, so couldn't be used as hitting tools.
2. Scratches arise on both ends, new accessories need to be replaced for next use.
3. Don't pull the spring line too much during the process of using, pay attention to the operating range.
4. The host engine and cold & hot hammer shouldn't be tear apart privately; If there are any unnormal, contact the distributor for maintanance please; open the case to repair personally is prohibited.
5. When arise the following cases: the powerline or plug of the host engine/ cold & hot hammer in the attachment is damaged, tured over, damaged or get wet by the water, don't continue to use the machine again. Please send the machine back to the service centre for check and maintain.
6. Using in damp environment is banned, such as bathroom, etc.



## **F-316A Vacuum & Spray Instrument**

### **【F-316A Vacuum & Spray Functions】**

If black-head, white-head and acne grow in the face, they not only influence the appearance, but also block the pores. When they become worse, they will block the blood circulation, and influence the skin's metabolism. After the influence cumulates for a long period, the pores will become bigger and bigger, and the skin will become rougher and rougher. This instrument can suck the black-head, white-head, acnes, blains and clean the besmirch and oil in the pores effectively. It can also spray the fog of astringent, diminish inflammation water and shrink water. It can shrink the pores effectively and has the functions of diminish inflammation, easing pain and supplement nutrition.

### **【Usage Method】**

1. Black-head vacuum: Connect the single air pipe to the corresponding vacuum pipe marks nozzle, the other head to the small glass vacuum pipe. Three small glass vacuum pipes for option to perform black-head vacuuming.

Turn on the power of "VAC-SPRAY", and adjust the proper energy and time. Then press the "START/PAUSE" to start work.

It is advisable to stuff some absorbent cotton into the glass vacuum pipe for stopping dirt going into the pipe so as to prevent damaging the

instrument. There's a small hole in the front end of the vacuum pipe, firstly stop the hole by finger as the illustration, when the vacuum pipe touches the face the finger can move away or just move partly to control the vacuum force.

The glass vacuum pipe must not stay on the face too long so that it will scald the face. It is normal if there is no vacuum at the beginning, it will resume to normal condition after a while.

2. Spray: Connect one head of the single air pipe to the corresponding spray bottle marks nozzle, the other head to the small spray bottle.

Turn on the power of "VAC-SPRAY", press the "START/PAUSE" key to start work, and adjust the energy and time properly.

Two spray bottles that can contain different liquid, it will spray out by pressing the nozzle on top of the spray bottle with finger, spray downward from forehead during working, prevent liquid going into the nose, ask client to close eyes and shut mouth. Keep a adequate distance from the face.


### 【Illustration of panel】

①Power

②Vacuum & Spray indicator

③Energy indicator

④Time indicator

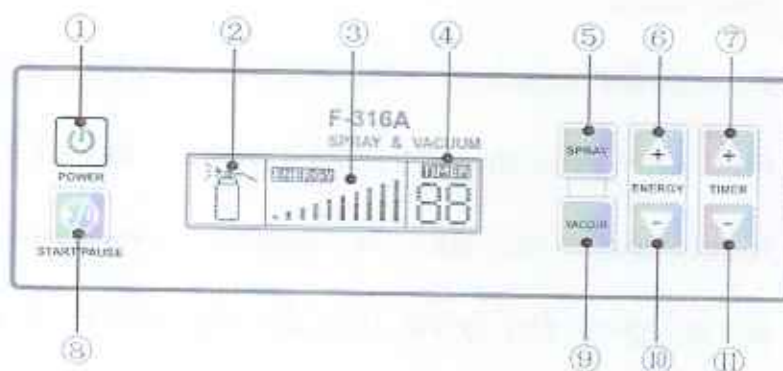

⑤ Spray working key

⑥ Energy increase key

⑦ Time increase key

⑧ Start/Pause

⑨ Vacuum working key

⑩ Energy decrease key

⑪ Time decrease key

### **【Notes】**







1. Before using the function of vacuum, unscrew the glass vacuum pipe to check if there's absorbent cotton. The absorbent cotton can stop dirt going into the pipe so as to prevent damaging the instrument.
2. The absorbent cotton in the glass vacuum pipe must be checked or replaced before usage each time. The glass vacuum pipe will be blocked if there is too much dirt accumulates on the absorbent cotton.
3. After working, all the air pipes and accessories should be cleaned, sterilized and keep in dry place.

### **【Warning】**

- 1、 It is forbidden to insert the Spraying tube into the Vacuum sticker collector, in order to prevent the dressing water is sucked into the pump to damage the machine.



2. When using the spray function, it is forbidden to plug up the output connector of "Spray" by anything or fold the silica gel pipe, this will damage the host.
3. The broken or cracked glass vacuum pipe is strictly prohibited to use.
4. Don't pull the silica gel pipe roughly, or it will damage the pipe.

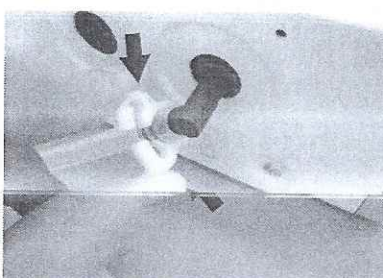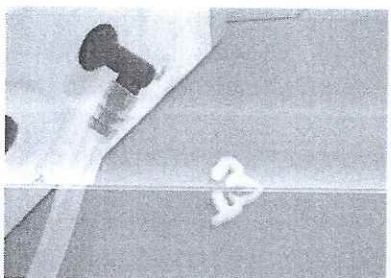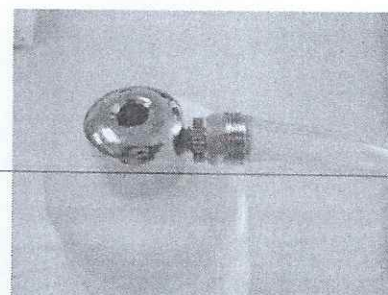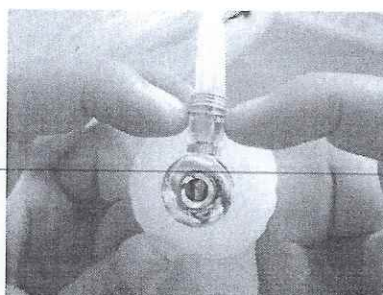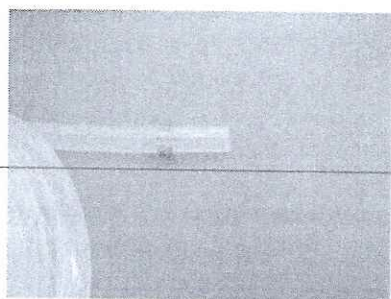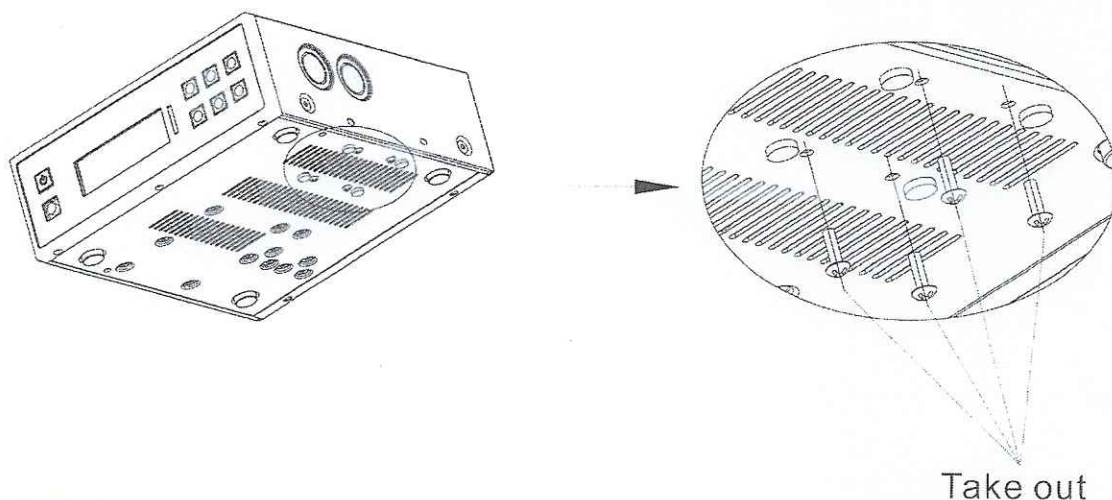

## F-315A Rotary Brush

### 【F-315A Function】

By means of the rotating force of the brush, it can massage the skin. It utilizes circumrotation of brush to massage, deep clean the skin and wipe off cornea, which obtain improving skin quality stimulating blood circle and removing fatigue. Moreover, its rhythm of massage can gain elasticity of skin and smooth skin.

### 【Using Method】

1. Plug the connector of brush handgrip to the port back of the host, hold the brush handgrip by the petiole part.
2. Choose appropriate brush head to insert the handle (5 brush heads are available, can be used at different parts of body).

Press the "POWER" key on the host, the LCD works; The host comes into the default mode; The direction of rotary brush is "↺"; The time is "3 minutes"; And the energy is "3".

Press "START/PAUSE" key to start the rotary brush, then the cosmetology can be started. A dynamic brush logo will be displayed on the LCD when the host begins to output. The dynamic brush logo becomes stable when the host stops output.

3. Depends on the demands of cosmetology, the rotary direction can be changed by pressing the “⑨” “DIRECTION” key; the working time of host can be adjusted by pressing “TIMER” “+” “-” keys; The rotary speed of the brush can be adjusted by pressing the “ENERGY” “+” “-” keys.

### 【Illustration of panel】

①Power

②Brush working indicator

③Direction indicator

④Time indicator

⑤Energy increase key

⑥Time increase key


⑦Start/Pause

⑧Energy indicator

⑨Direction switch key

⑩Energy decrease key

⑪Time decrease key

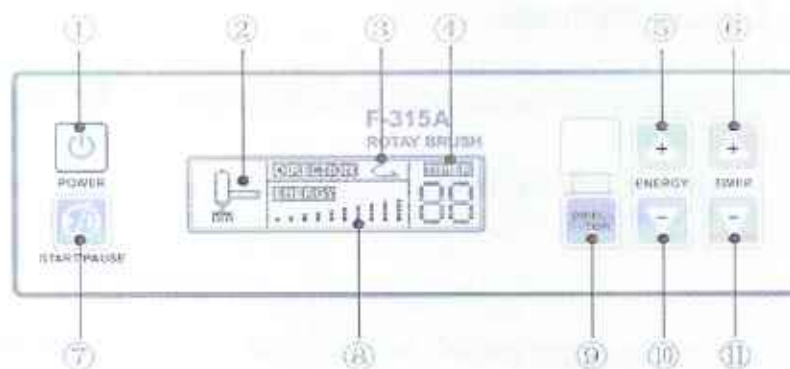

### 【Cautions】

1. Before working please check if the brush head has been plugged properly on the handle.
2. Before the brush head touch the face of the customer, the rotary speed

should decrease; don't make the customer feel uncomfortable.

3. After working, all the brush heads should be cleaned, sterilized and keep in dry place.

### **【Warning】**

1. The function can not be used for long time, otherwise, the handle will be overheated.
2. The brush head can not be exchanged under the working condition.
3. The brush head can not be stopped by hand or other objects under the working condition; and grasping the brush head when starting the function is also forbidden.



## F-313A GALVANIC

### 【F-313A Galvanic Instruction】

By mean of the movements of DC positive and negative ions, the galvanic current treatment is helpful for leading in nutrition and leading out impurity from skin. The nutrition leaded in is to penetrate the water-soluble nutrition into the deep skin, directly supplying nutrition for skin. Impurity leaded out is to import the alkaline solution to soften the aged horn, decompose the grease balance the skin secretion, leading out the impurity and metal ions at the same time; The electronic ions of positive electrode may lead the acidic solution (shrinking lotion) into the skin, and harden the skin tissue, comfort nerve and diminish blood supply as well. It is mainly used after beauty treatment to alleviate skin being red and swollen and to avoid inflammation. The electronic ions of negative electrode may lead alkaline solution into skin to soften skin tissue, irritate nerve and increase blood supply. Mainly used in aged and greasy skin.

### 【Galvanic Operation Instruction】

1. Connecting the accessories corresponding to the instrument before turning on the power. Client grasps the metal pole, and beautician holds the handle of the roller.



2. Changing the electrode of the roller by adjusting leading in (+R) and leading out (-G). The treated part must be clean and keep it clean and dry before doing the nutrition leading in. Turn the electrode button to (+R), now the roller is positive while the metal pole is negative. Beautician spreads some liquid nourishing lotion evenly on the treated part, then cover the roller with a piece of cotton or sponge that has dipped into the acidic lotion (like shrink lotion) or directly cover the roller with a piece of cotton with nourishing lotion before doing this treatment. While doing leading out treatment, should change the electrode button to (-G), now the roller is negative while the metal pole is positive. Cover the roller with a piece of cotton or sponge that has dipped into the alkaline lotion (like detergent lotion) before doing this treatment. It is to balance and decompose the grease of skin.

2. Power on "IONOS", select the operation form: leading in "+R" or leading out "-G", turn "I/Energy" to the minimum. Touch the treated part with the roller, slowly adjust "I/Energy" to appropriate intensity which client feels mildly stung. Smoothly slide the roller, and the cotton must keep moisture all the way for better effect.

## 【Panel Instruction】

①POWER

②Indicator for

galvanic polarity

③Polarity

④TIMER

⑤ENERGY“+”button

⑥TIMER”+”button


⑦ON/OFF

⑧ENERGY

⑨Switch button of galvanic probe

⑩ENERGY“-”button

⑪TIMER”-”button

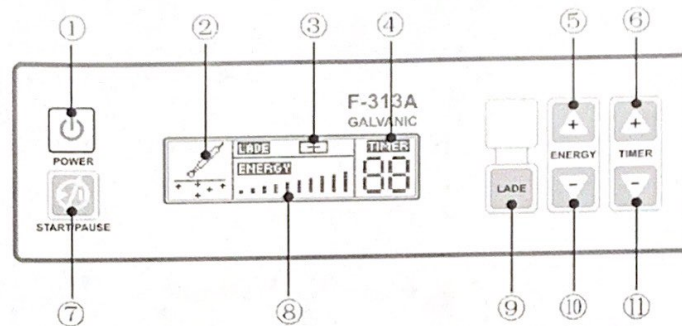

## 【Cautions】

1. After treatment, the roller and metal pole must be clean and keep in dry to avoid damage.
2. When the roller is negative, the stung feeling will be felt more intensive than it is positive, otherwise, it will be felt weaker.
3. Before doing the treatment, clients will be required to take off jewels, it

is not applicable for someone who there are any metal objects inside.

4. Pregnant women and people who have sensitive, injured, inflamed skin or blood capillary expansions are not allowed for the treatment.

5. The lotion with leading in or leading out must be used in accordance with the roller (negative or positive). While the roller is positive, the lotion should be acidic (+), while the roller is negative, the lotion should be alkaline (-). Please use the PH paper for verification if the lotion is not indicated.

### **【Warning】**

1. With the following diseases, not suitable for the use of this instrument, such as heart disease, infectious disease patients, allergic patients and the patients who have metal in body during therapy period.

2. Don't let the leading-out probe and leading-in probe touch together for a long time when they are working.

3. When the lotion of the skin surface cannot moisten skin, it should be added in time.

4. Prohibit to use the sliding wheel which can not rotate, this accessory



must be changed

5. Please pay attention to the connecting wire between the machine and accessory when working, don't over-pull it.

6. Do not let water or other corrosive liquid splash to the machine when using.

7. In order to avoid scratching skin, prohibit to use the bead probe and roll probe which the surface of stainless steel is defected、rusted or polished. The export-in and export-out probe should be protected carefully, don't let other hard objects scratch the probes.


8. In the course of the host if there are unusual circumstances, please immediately shut down and unplug the power plug, please contacts the dealer near you or invites the professional maintenance for inspection. Prohibit opening the chassis for maintenance unauthorized

9. If the powers cord damage, we must use a dedicated line or buy the special component from the manufacturer or designated maintenance point to replace.

hand fasten it. Push it back in the reverse position after cleaning the water in water plate.

## 6、NOTES

- 1、Forbid to use the hot towel cabinet nearby the high temperature object.
- 2、Forbid to use the hot towel cabinet in the acidity air or in the dank environment.
- 3、Forbid to put the acidity or alkaline articles into the hot towel cabinet.
- 4、It is normal state when the outer case has obvious temperature raising after long time using.
- 5、Please clear the water leaving in the water plate regularly after you doing the heat preservation for wet towel. (Clear it everyday will be better)
- 6、The sterilize time is better to be control in 1-2 hours that you using the ultraviolet radiation and ozone sterilization.
- 7、Please shut down the power and take out the towel that you don't sterilize the wet towel or other article. Please keep the inner case dry by wiping the water in dishcloth. Please shut down the power when stop operating.
- 8、Please keep your hand dry by pressing “POWER” or “OZONE” switch.
- 9、Please contact the dealer for exchange the glass if the glass of hot towel cabinet is broken. The glass is made of special technique that can avoid the ultraviolet light. It can't replace by the usual glass to avoid the ultraviolet light leaking.
- 10、Please contact the dealer or professional maintain service if the hot towel cabinet has something wrong.

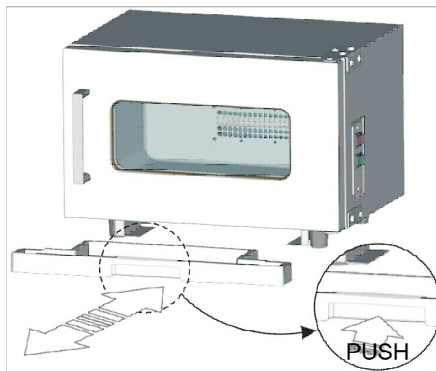

# HOT TOWEL CABINET INSTRUCTION (T-01)



## USER INSTRUCTIONS

**PLEASE READ SERIOUSLY BEFORE OPERATING.**

## 1、FEATURE

- 1、Simple construction, fashionable design; It is durable by using the metal door and the metal door handle.
- 2、Aluminous inner case with adopt one molding technique, fastness and beauty.
- 3、Outer case use the high quality material with the high temperature protective powder spray in appearance, causticity prevent, and good looking.
- 4、Host has double protective functions; It has independence ultraviolet light switch. When the door opened, the ultraviolet light wills automatic shut down. The ultraviolet light can keep working after the door closed.
- 5、The special glass window construction can prevent the ultraviolet light leaking and inspect the conditions in the inner cabinet easily.

## 2、WORK THEORY


**Heater system:** It can transfer the electricity to heat energy by using the special heater deliver setting. The heater energy can be transfer by infrared ray. This system use complete self-motion temperature setting to raise the heater energy after pressing the heat preservation switch. When the temperature reaches the setting temperature, the system will move to the heat preservation state. When the inner temperature is lower than the setting temperature, the heater system will operate to rise the temperature automatism.

**Sterilize system:** Press “OZONE” switch to operate the sterilize functions. This system will operate the ultraviolet light and ozone setting to sterilize the towel. Forbid to open the door, or the system will shut down the sterilize functions immediately to avoid the ultraviolet light leaking.

## 3、SPECIFICATION AND TECHNICAL PARAMETER

Description	HOT TOWEL CABINE & STERILIZER	
Model NO.	T-01	
Voltage Rating	AC. 100-130V <input type="checkbox"/>	AC. 220-240V <input type="checkbox"/>
Frequency Rating	50Hz	60Hz
Wattage Rating	164W	
Inner Capacity	7 L	
Size	330*276*226 mm	
N.W	4.5 Kg	
G.W	5.5 Kg	

## 4、HOST INSTRUCTION

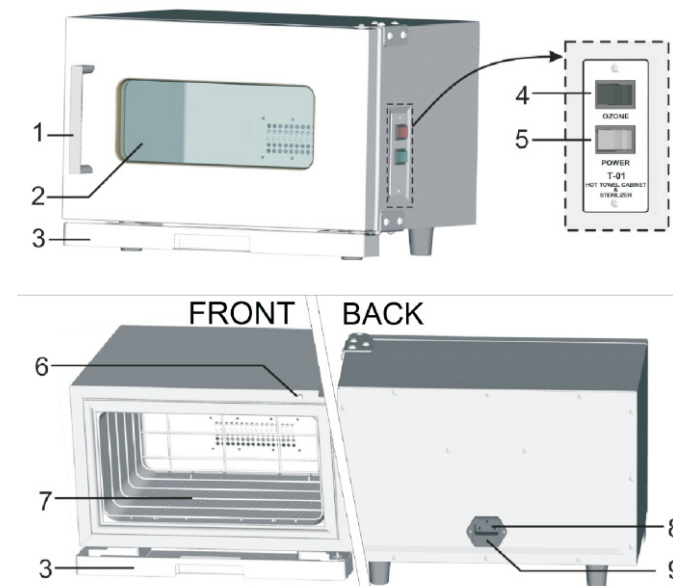

- 1、Door handle: Open and shut the door
- 2、Glass window: Inspect the inner article
- 3、Water plate: Collect all the dripping water in the door
- 4、Ozone switch: Control the ultraviolet light and ozone operation
- 5、Power: Control the power connection
- 6、Gating switch: Please shut down the ultraviolet light and ozone operation before pressing this button
- 7、Towel bracket: Placed the towel
- 8、Power line plug: main power input connector
- 9、Insurance seat: Install the host insurance

## 5、OPERATION

- 1、Please connect the power line to corresponding electric current plug.
- 2、Open the door and put the towel regularly in the towel bracket for sterilizing. Shut the door and inspect the seals is connected well or not. Press the “POWER” switch to operate the instrument for sterilizing. Temperature will remain constant when it reaches to 60 degree. There is also Ozone function which you could press "ozone" button for operation as treatment requirement. light is on in the inner cabinet.
- 3、Clean the water in the water plate: Draw out the water plate by using the