



Massage Oil Warmer

Instruction Manual

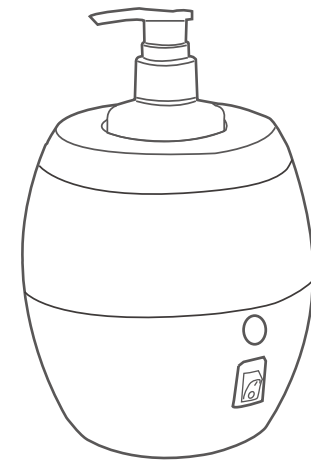

Thank you for purchasing our high quality Massage Oil Warmer. Our company is continuously upgrading and developing new products as we listen to important feedback from our customers. With strictly-selected materials, the finest craftsmanship, meticulous after-sale service and competitive price, our Massage Oil Warmer will make our clients feel extreme comfort.

Thank you for purchasing our Massage Oil Warmer. It will provide a quick and efficient way to warm-up your massage oil, massage cream, and massage lotion. Please read the instruction manual before operating this device.

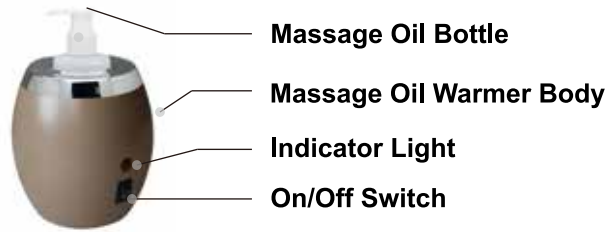

Specifications

Model \ Items	Rated Capacity (W)	Input Voltage (V)	Rated Current (A)	Max. Working Temperature. (°C/°F)
HOH1	42W-50W	220Vac-240Vac for E.U., U.K., A.U. & Asia	0.19A-0.21A	60°C/140°F
	35W-50W	100Vac-120Vac for U.S.	0.35A-0.42A	

Main Dimensions

No.	Name	Unit	Dimension (mm/inch)
1	Massage Oil Bottle (Diameter* Height)	mm	Ø50.8*155/2"X6"
2	Massage Oil Warmer Body (Diameter* Height)	mm	Ø135*145/5.3"X5.7"

Important Warning



Do not pour the liquid directly into the warmer; please fill the bottle with massage oil, massage cream or massage lotion before inserting into warmer's body.



To extend the life of the product, only massage oil, massage cream or massage lotion are recommended to be heated in this warmer.



To avoid electrical shock and fire hazard, make sure the Massage Oil Warmer inside dry and without any residue; keep the massage oil bottle outside clean and dry before use. Do not immerse the Massage Oil Warmer in water.



Do not supply power to this heater until you have verified that the bottle is in position and filled with at least half a bottle of massage oil. Note that if the bottle is too full, the liquid may leak out due to the expansion during warming; meanwhile, if the bottle is sealed, deformation may occur due to the contraction when it cools.



Turn off the Massage Oil Warmer when it is not in use and before unplugging. Do not unplug or touch the inside of the Massage Oil Warmer when it is working.



Keep away from children and pets; this Massage Oil Warmer **Is Not** a toy.



If the unit is broken, please contact your supplier for certified repair. Please do not try to repair or disassemble it by yourself.



Use only glass, PE(HDPE or LDPE) bottles with the unit. Do not use PET bottles, due to its low melting point. The PET bottle will be melted down or out of shape when heating.

Instructions for Use

Step1:

Place the warmer on a stable, leveled surface and plug it in.

Step2:

Fill the bottle with massage oil, massage cream or massage lotion and place the filled bottle in the warmer. (Fig. 1)



Fig.1

Step3:

Turn on the "Power Switch". Confirm the power indicator light is illuminated. Wait 15 to 20 minutes for the oil to come to temperature. (Fig. 2)



Fig. 2



Ensure the plug is dry and clean before plugging in.

Step4:

Test the massage oil temperature before use to avoid potential burns. Turn the power switch to "off" when the massage oil is heated to the desired temperature. (Fig. 3)



Fig. 3



For safety, always test the temperature of the massage oil before applying and make sure the client feels comfortable with the temperature.

Maintenance Instruction

This Massage Oil Warmer is a precision electrical instrument. Please handle with care. Do not clean the warmer with water or wipe the unit with wet towel. Do not drop the unit or subject to sharp impact. Keep power off when not in use. Always keep your warmer in dry surroundings.